

Be the **ONE***

LS TRACTOR OPERATOR'S MANUAL

MT122 • MT125



LS Tractor

California

Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the state of California to cause cancer, birth defects, and other reproductive harm.

CONTENTS



1. General Notices for Safety

1-1. Note to the owner – General information	1-1
(1) Before using the tractor	1-3
(2) Manual scope and required training level	1-5
(3) Metric and Imperial units abbreviations	1-7
(4) Product Identification Number (PIN)	1-9
(5) Operator's manual storage	1-11
(6) Tractor orientation	1-12
1-2. Safety Precautions (Read this for safety before using)	
(1) Notices before using the tractor	1-13
(2) Notices when starting Engine	1-17
(3) Notices while operating/using the tractor	1-18
(4) Notices when connecting Implement	1-20
(5) Notices when towing the tractor	1-21
(6) Notices when transporting the tractor	1-21
(7) Notices when servicing the tractor after work	1-22
(8) Notices when handling Diesel Fuel	1-23
(9) Notices when leaving the tractor	1-24
(10) Notices relating to Toxic substances	1-24
(11) Tractor stability	1-25
(12) Ecology and the environment	1-28
(13) Symbols	1-30
(14) Safety Decals	1-31
(15) Instructional Decals	1-36
1-3. Long-term storage	
(1) Preparation for storage	1-40
(2) Check & Maintenance during storage	1-41
(3) Preparation for Reuse	1-42



2. Instruction for Safe Operation

(1) The name of each part	2-1
2-1. Boarding and Exiting the tractor	
(1) Boarding the tractor	2-2
(2) Driver's seat switch	2-2
(3) Seat adjustment	2-3
(4) Replacing the driver's seat	2-6
(5) Seat belt	2-9
(6) Exiting the tractor	2-9

CONTENTS

2-2. Safety device

(1) Hood (Bonnet) ·····	2-10
(2) Fender ·····	2-10
(3) PTO safety cover and protection cap ·····	2-10
(4) Roll-Over Protective Structure (ROPS) ·····	2-11



3. Instruments and Controls

3-1. Instrument panel and Front controls

(1) Instrument panel ·····	3-2
(2) Key switch ·····	3-6
(3) Turn signal light switch ·····	3-7
(4) Light switch ·····	3-8
(5) Hazard warning light switch ·····	3-9
(6) PTO switch ·····	3-10
(7) Brake pedal ·····	3-11
(8) Parking brake lever ·····	3-12
(9) Throttle lever ·····	3-12
(10) HST forward / reverse pedal (HST type) ·····	3-13
(11) Cruise control switch (HST type) ·····	3-13

3-2. Left / Right-hand side Levers and Pedals

(1) Range gear shift lever ·····	3-15
(2) 4WD lever ·····	3-15
(3) Work light (optional) ·····	3-16
(4) PTO select lever ·····	3-16
(5) Electrical power outlet socket ·····	3-17
(6) Differential lock pedal ·····	3-17

3-3. Hydraulic System

(1) Safety precautions ·····	3-18
(2) Steering system ·····	3-19
(3) Hydraulic lift control (Mechanical Hydraulic Lift, MHL) ·····	3-20
(4) Mid mower height adjustment knob ·····	3-21
(5) Remote control lever and Quick coupler (optional) ·····	3-22
(6) Joystick lever ·····	3-24
(7) Hydraulic System Diagram ·····	3-25

CONTENTS



4. Operation and Work

4-1. How to handle new tractor

- (1) Check points ····· 4-1
- (2) Notices in handling new tractor (Engine brake-in procedure) ····· 4-1

4-2. Engine start and stop

- (1) Engine start ····· 4-2
- (2) Start in cold weather ····· 4-3
- (3) Engine stop ····· 4-4

4-3. How to drive and stop

- (1) Engine and transmission Warm-up ····· 4-5
- (2) How to drive ····· 4-6
- (3) Changing speed ····· 4-7
- (4) Emergency Stop ····· 4-8
- (5) Stopping tractor ····· 4-9
- (6) Parking ····· 4-10

4-4. Transport on public roads

- (1) Safety rules when driving tractor on the roads ····· 4-11
- (2) Light operation ····· 4-12
- (3) 7-Pole connector (optional) ····· 4-13
- (4) Notices when towing the tractor ····· 4-14
- (5) Notices when transporting the tractor ····· 4-16

4-5. Field Operations

- (1) Rear 3-point linkage ····· 4-17
- (2) Power take-off (PTO) operation ····· 4-25
- (3) Hitch and Drawbar (optional) ····· 4-28
- (4) Technically maximum permissible mass ····· 4-29
- (5) Tires and Load capacity ····· 4-30
- (6) Adjusting Wheel tracks and tire replacement ····· 4-31
- (7) Using Front-end loader (optional) ····· 4-32
- (8) Adjusting Steering angle ····· 4-35
- (9) Recommended Maximum Specification of Implements ····· 4-36
- (10) Ballasting Weights (optional) ····· 4-37
- (11) Working in hazardous area ····· 4-40

4-6. Driving Speed ····· 4-41

CONTENTS



5. Lubrication and Maintenance

5-1. General information	5-1
(1) Tightening Torque for normal assembly	5-2
(2) Standard torque data for hydraulics	5-4
(3) General specification - Diesel fuel	5-7
(4) Biodiesel fuel	5-8
(5) Refueling the tractor	5-10
(6) Change engine coolant to Organic Acid Technology (OAT) coolant	5-11
(7) Access for maintenance	5-12
5-2. Maintenance Chart	5-13
5-3. Lubricants and Capacity	5-15
5-4. First 50 hour check	5-16
5-5. Check before Starting (Daily check)	
(1) Engine oil	5-17
(2) Fuel tank	5-18
(3) Instrument panel & Indicators	5-18
(4) Turn signal lights, Lights and Horn	5-19
(5) Engine coolant	5-20
(6) Air cleaner (Dry type)	5-20
(7) Cleaning Radiator and Radiator screen	5-21
(8) Tire air pressure and damage	5-21
(9) Tightening state of Bolts and Nuts of each part	5-22
(10) Adjustment of Brake pedal play	5-23
(11) Adjustment HST control linkage (HST type)	5-24
5-6. First 50 hour check	
(1) Lubricating grease	5-25
(2) Cleaning Radiator and Radiator screen	5-25
(3) Checking Transmission oil	5-25
(4) Checking Front axle oil	5-26
(5) Battery check	5-26
(6) Air cleaner (Dry type)	5-26
(7) Hydraulic hoses and Leakage	5-26
5-7. Every 250 hour check	
(1) Replacing Engine oil and Filter	5-27
(2) Replacing Hydraulic oil filter	5-28
(3) Tension adjustment of Fan belt	5-29
(4) Drain fuel tank	5-29
(5) Toe-in	5-30
(6) Replacing Air cleaner element (Dry type)	5-30

CONTENTS

5-8. Every 500 hour check

- (1) Changing Front axle oil 5-31
- (2) Changing Transmission oil 5-31
- (3) Replacing Fuel filter cartridge 5-32

5-9. Every 1000 hour check

- (1) Adjusting Engine Valve clearance 5-33

5-10. Every 1500 hour check

- (1) Inspect, clean and test fuel injection nozzle, if necessary 5-34
- (2) Inspect crankcase breather system 5-34

5-11. Every 2000 hour or 2-year check

- (1) Replacement of Engine coolant 5-35
- (2) Check and replace fuel hoses and coolant hoses 5-38

5-12. General maintenance (When required)

- (1) Air-bleeding from Fuel system 5-39
- (2) Fuse & Main fuse 5-41
- (3) Battery handling and Notices 5-43
- (4) Alternator and drive belt - Check 5-47
- (5) Turn signal light bulb- Replace 5-48
- (6) Headlight bulb - Replace 5-49
- (7) Touch-up paint color 5-50

5-13. Troubleshooting 5-51

5-14. Engine manufacturer's warranty 5-57



6. Dimension and Specification 6-1

1. General Notices for Safety

1-1. Note to the owner – General information

Operator's manual

Please have all operators read this manual carefully and keep this manual available for ready reference. Read this manual to make sure that you have a complete understanding of how to operate this tractor safely, correctly, and for the most effective performance of the tractor.

NOTE: *This operator's manual may be available in other languages; see your authorized local dealer for ordering.*


This manual contains important information concerning the adjustment and maintenance of your new equipment.

NOTE: *Some images of the tractor in this manual may differ slightly in some detail. Any variations will be similar enough for you to understand the information or instructions.*

Throughout this operator's manual, references to the right-hand and left-hand sides of the tractor are determined by facing the forward operating direction of travel.



This is the safety alert symbol. The safety alert symbol alerts you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible death or injury.

 Warning	<p>► Illustrations in this manual may show protective shielding open or removed to better illustrate a particular feature or adjustment.</p> <p>Replace all shields before operating the tractor.</p> <p>Failure to comply could result in death or serious injury.</p>
---	--

◆ Safety Mark Description

- In the places where the cautions in usage are required, the marks such as “**DANGER**”, “**WARNING**”, “**CAUTION**” are found.
- You should comply with the description marked on the decals attached to the product or the contents marked with safety mark in this Operator's Manual.



Danger - This indicates an imminently fatal dangerous situation that may cause a serious injury or death if not avoided.



Warning - This indicates a potentially dangerous situation that may cause a serious injury or death if not avoided.



Caution - This indicates a potentially dangerous situation that may cause a light injury or damage to the properties if not avoided.



Notice - This indicates the instructions for right use for the safety of persons or products.

Your authorized local dealer and service

Your authorized local dealer has performed a pre-delivery setup, inspection, and testing to make sure that your tractor operates at its best performance level.

Your authorized local dealer will instruct you in the general operation of your new equipment. Your dealer's staff of factory-trained service technicians will be glad to answer any questions that may arise regarding the operation of your tractor.

Your authorized local dealer carries a complete line of genuine service parts. These parts are manufactured and carefully inspected to ensure high quality and accurate fitting of any necessary replacement parts. Be prepared to give your dealer the model and product identification number of your new equipment when ordering parts. Locate these numbers now and record them below. Refer to the 'General Information' section of this manual for the location of the model and product identification numbers of your tractor.

ATTENTION: *The engine and fuel system on your tractor is designed and built to government emission standards. Tampering by dealers, customers, operators, and end users is strictly prohibited by law. Failure to comply could result in government fines, rework charges, invalid warranty, legal action, and possible confiscation of the tractor until rework to original condition is completed. Engine service and/or repairs must be done by a certified technician only!*

Improvements

We are continually striving to improve its products. We reserve the right to make improvements or changes when improvements or changes become practical and possible to do so, without incurring any obligation to make changes or additions to the equipment sold previously.

(1) Before using the tractor



✂ **Must read and understand this operator's manual carefully and always refer to information and prescriptions outlined in this manual to prevent all potential health and safety risks.**

◆ General information for intended use

- Your tractor is designed and manufactured to pull, to carry, to supply the power to a variety of mounted or towed equipment **for agriculture**. Do not use the product for other purposes than intended by the manufacturer and outlined in this manual. Do not use this tractor for light/heavy forestry applications.
- Do not use the product beyond its **limits of terrain gradient** and stability than outlined in this manual. Using the tractor beyond these limits may cause an overturning accident.
- Do not use the tractor at higher speeds than allowed by the load on the tractor and road conditions. Always choose **a suitable driving speed** to maintain stability of the tractor.
- Do not use the tractor **near or on soft verges** of canals and brooks or banks and verges that are undermined by rodents. The tractor may sink sideways and roll-over.
- Do not use the tractor on brittle bridge heads and poor bridge floors. These constructions may collapse and cause overturning of the tractor. **Always check out the condition and carrying capacity of bridges and ramps** prior to engage.
- **Do not use the tractor without wearing the seat belt and Roll-Over Protective Structure (ROPS)** during operations where roll-over or tip-over hazards exist. The ROPS will only be fully effective when the driver remains attached to his/her seat.
- Do not use equipment mounted on the tractor which is not **correctly matching and firmly fixed**. Such equipment may increase the risk for roll-over and hit the tractor when coming loose.
- Do not use the tractor in combination with equipment arbitrarily, without **having consulted the specific operator's manual provided with the equipment**. This manual alone cannot provide you with all the information about safety operation of the combination.
- Do not use the tractor beyond its **limits of dynamic stability**. High speed, abrupt maneuvers, and fast and short cornering will increase the risk of roll-over.
- Do not use the tractor for **overloaded pulling work**, in cases where you don't know if the load will yield, for instance when pulling stumps. The tractor may flip over when the stump is not yielding.
- Be extremely cautious when working with the tractor **on forage silos without lateral concrete walls**. A wide track setting may improve the lateral stability of the tractor.
- Be cautious that the **center of gravity of the tractor may increase** when the front-end loader is loaded or the three-point linkage is raised. In these conditions, the tractor may roll-over earlier than expected.
- **Do not step down from the tractor without shutting down the PTO, shifting the transmission to neutral and applying the parking brake.**

- **Never remove or modify or change** the driver's protection device or safety device arbitrarily.
Any unauthorized modifications made to this tractor can have serious consequences. Consult an authorized dealer on changes, additions, or modifications that may be required for this tractor. Do not make any unauthorized modifications.
- You must take the necessary precautions to always be **aware of the possible presence of bystanders**, certainly when maneuvering in confined areas. Keep people away from the tractor during work. Pay the necessary attention while operating next to public roads or footpaths. Thrown objects can get projected outside the field and hit unprotected people like bikers or pedestrians. Wait until it is clear of bystanders.
- Do not violate the **local traffic rules** related to public roads and highways.
- **Do not allow riders** on the tractor; do not allow people to stand on the access way or step to the cab when the tractor is moving. Your view to the left will be obstructed and a rider risks to fall from the tractor during unforeseen or abrupt movements.
- **This tractor has only one operator station** and is a one man operated vehicle. Other people on or around the tractor during normal operation are not allowed.
- Always stay clear from implements operating area and especially **do not stand between tractor and trailed vehicle either three-point linkage when operating lift controls**; ensure no bystanders are near these operating areas.
- This tractor may be equipped with a number of sensors to control safety functions. **Do not attempt to bypass any function** on the tractor. You will be exposed to serious hazards, and moreover, the behavior of the tractor may become unpredictable.
- The manufacturer will not be responsible for the damage or safety problems caused by maintenance or repair with non-genuine parts. It must be requested to **use the genuine parts**.
- When cleaning the tractor by using high pressurized water, **do not inject water directly to the electronic parts, wiring, air intake pipe, hot engine or muffler** inside the bonnet.
- Maintenance and repair of the tractor is performed by **skilled technical experts with the proper tools** authorized by the manufacturer.
- Pay attention to **overhead power lines and hanging obstacles**. High voltage lines may require significant clearance for safety.
- Do not operate the tractor during an **electrical storm. (Lightening strikes)**
- For damage or accidents caused by misuse or operation in violation of these rules, the manufacturer and its distributors **will not have any responsibility and warranty**.
- **Keep this operator's manual** for future reference at hand (on the tractor).

(2) Manual scope and required training level

Introduction to this manual

This manual gives information about the use of your tractor as intended and under the conditions foreseen by manufacturer during normal operation, routine service, and maintenance.

This manual does not contain all the information that relates to periodic service, conversions, and repairs that only trained service personnel can perform. Some of these activities may require appropriate facilities, technical skills, and/or tools that manufacturer does not supply with the tractor.

The manual contains the chapters as shown on the Contents pages.

Normal operation

Normal operation consists of the use of this tractor for the purpose manufacturer intends by an operator that:

- Is familiar with the tractor and any mounted equipment or towed equipment.
- Complies with the information on operation and safe practices as specified by manufacturer in this manual and by the signs on the tractor.

Normal operation includes:

- Preparation and storage of the tractor.
- Addition and removal of ballast.
- Connection and disconnection of mounted equipment and/or towed equipment.
- Adjustment and configuration of the tractor and equipment for the specific conditions of the job site, field, and/or crop.
- Movement of components into and out of working positions.

Routine service and maintenance

Routine service and maintenance consists of the daily activities necessary to maintain the proper tractor function. The operator must:

- Be familiar with the tractor characteristics.
- Comply with the information on routine service and safe practices as specified by manufacturer in this manual and by the signs on the tractor.

Routine service can include:

- Fueling
- Cleaning
- Washing
- Topping up fluid levels
- Greasing
- Replacing consumable items such as light bulbs

Periodic service, conversions, and repairs

Periodic service consists of activities that are necessary to maintain the expected life of your tractor. These activities have defined intervals.

Trained service personnel familiar with the tractor characteristics must perform these activities at the defined intervals. Trained service personnel must comply with the information on periodic service and safe practices as partly specified by manufacturer in this manual and/or other company literature.

Periodic service includes:

- Oil change service for the engine, hydraulic circuits, or transmission.
- Periodic exchange of other substances or components as required.

Conversion activities rebuild your tractor in a configuration that is appropriate for a specific job site, crop, and/or soil conditions (e.g., installation of dual wheels). Conversion activities must be done:

- By trained service personnel familiar with the tractor characteristics.
- By trained service personnel that comply with the information on conversion as partly specified by manufacturer in this manual, assembly instructions, and/or other company literature.

Repair activities restore proper function to your tractor after a failure or degradation of performance. Dismantling activities occur during the scrapping and/or dismantling of the tractor.

Trained service personnel familiar with the tractor characteristics must perform these activities. Trained service personnel must comply with the information for repair as specified by manufacturer in the service manual.

Before you operate

Read this manual before you start the engine or operate this tractor. Contact your authorized local dealer if:

- You do not understand any information in this manual.
- You need more information.
- You need assistance.

All persons training to operate, or who will operate this tractor should be old enough to possess a valid local vehicle operating permit (or meet other applicable local age requirements). These persons must demonstrate the ability to operate and service the tractor in a correct and safe manner.

(3) Metric and Imperial units abbreviations

	Metric unit		Imperial unit	
	Name	Symbol	Name	Symbol
Area	Square meter	m ²	Square foot	ft ²
	Square centimeter	cm ²	Square inch	in ²
	Square millimeter	mm ²	Square inch	in ²
Electricity	ampere	A	ampere	A
	volt	V	volt	V
Force	kilonewton	kN	pound	lb
	newton	N	pound	lb
Frequency	megahertz	MHz	megahertz	MHz
	Kilohertz	kHz	Kilohertz	kHz
	hertz	Hz	hertz	Hz
Rotational frequency	Revolution per minute	rpm	Revolution per minute	rpm
Length	kilometer	Km	mile	mi
	meter	m	foot	ft
	centimeter	cm	inch	in
	millimeter	mm	inch	in
Mass	kilogram	kg	pound	lb
	gram	g	ounce	oz
Power	kilowatt	kW	horsepower	Hp or ps
	watt	W	Btu per hour Btu per minute	Btu/hr Btu/min
Pressure or stress (Force per area)	kilopascal	kPa	Pound per square inch	psi
	megapascal	MPa	Pound per square inch	psi
	bar	bar	Pound per square inch	psi
	Kilogram per square centimeter	Kg/cm ²	Pound per square inch	psi
Temperature	Degrees Celsius	°C	Degrees Fahrenheit	°F

	Metric unit		Imperial unit	
	Name	Symbol	Name	Symbol
Time	hour	hr	hour	hr
	minute	min	minute	min
	second	s	second	s
Torque	Newton meter	N.m	Pound foot	lb.ft
	Kilogram meter	Kg.m	Pound foot	lb.ft
Velocity	kilometer per hour	km/h	mile per hour	mph
	meter per second	m/s	foot per second	ft/s
Volume	Cubic meter	m ³	Cubic yard	yd ³
	liter	L	Cubic inch	in ³
	liter	L	US gallon	US gal
	cc	cc	Cubic inch	in ³
Flow rate	Liter per minute	L/min	US gallon per minute	US gal/min
Sound pressure level	decibel	dB	decibel	dB

Glossary



Acronym	Definition
MEC	Synchro shuttle transmission
HST	Hydrostatic transmission
PSS	Power shuttle system
PST	Power shift transmission
MHL	Mechanical Hydraulic Lift
EHL	Electro-Hydraulic Lift
DEF	Diesel Exhaust Fluid
DPF	Diesel Particle Filter
ISO	International Organization for Standardization
MSDS	Material Safety Data Sheet
NOx	Nitrogen Oxide
PPE	Personal Protective Equipment
SCR	Selective Catalytic Reduction
<	Less than
>	Greater than

(4) Product Identification Number (PIN)

The tractor and major components are identified with Product Identification Number (PIN) plates. You should supply the PIN plate data to your authorized local dealer when requesting parts or service, and also to identify the tractor in case of theft.


① Product Identification Number (PIN) plate

- The tractor PIN Plate① is located on the left-hand side of the engine frame.
- This may vary depending on the market.

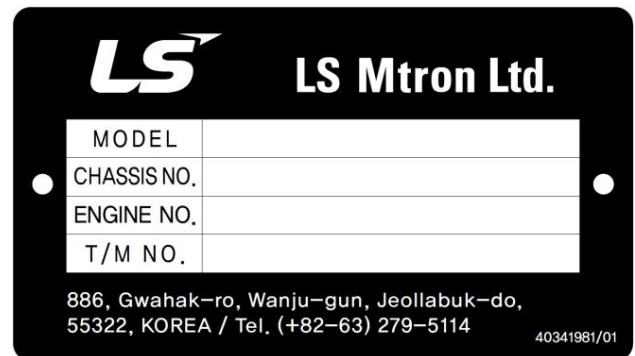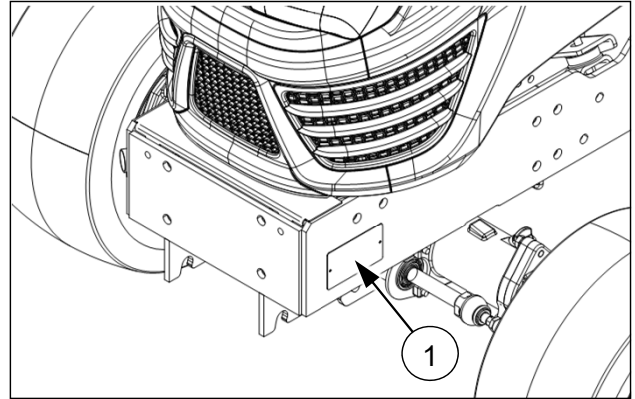


② Engine Product Identification Number (PIN) plate

- The engine PIN plate② is located on the engine valve cover.

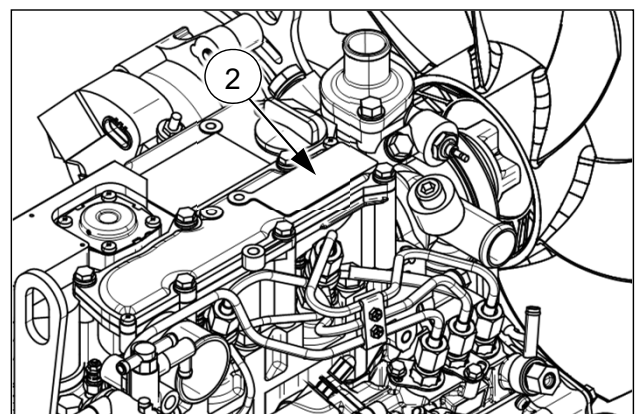



③ Roll Over Protective Structure (ROPS) Product Identification Number (PIN)

- The Roll Over Protective Structure (ROPS) PIN plate③ is located on the right-hand ROPS frame as shown in the right figure.

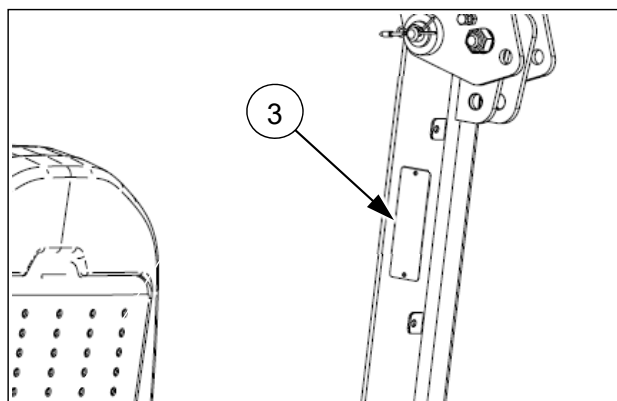


④ TM number and Running hours

- In case of requesting service or parts from your dealer, the dealer may ask you to provide the TM number④ and/or running hours⑤ displayed on the instrument panel.

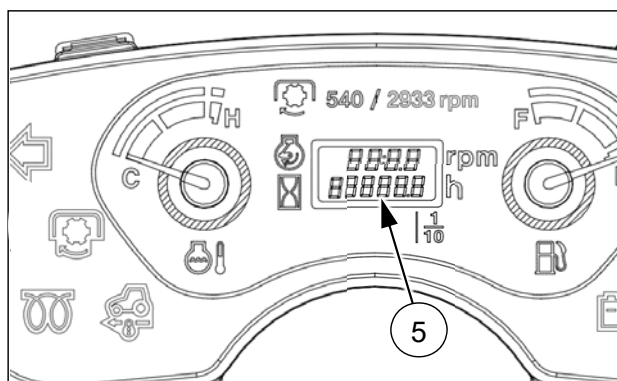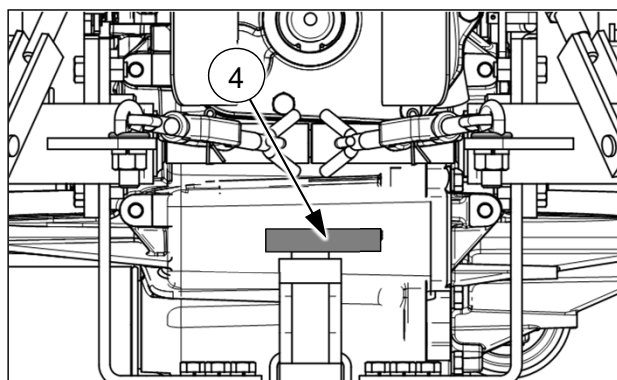


(5) Operator's manual storage

- The operator's manual must be stored in a secure place prior to operation and it must be kept available for use by all operators.

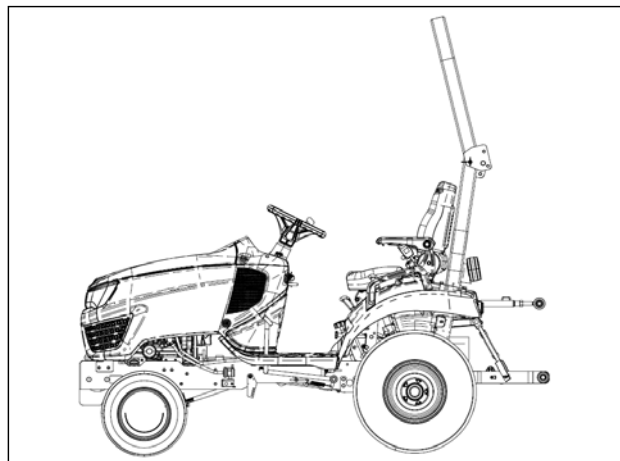


- Depending on the models, manual storage box is installed on the rear side of the driver's seat. To open the box, pull the upper side of the cover① rearward.

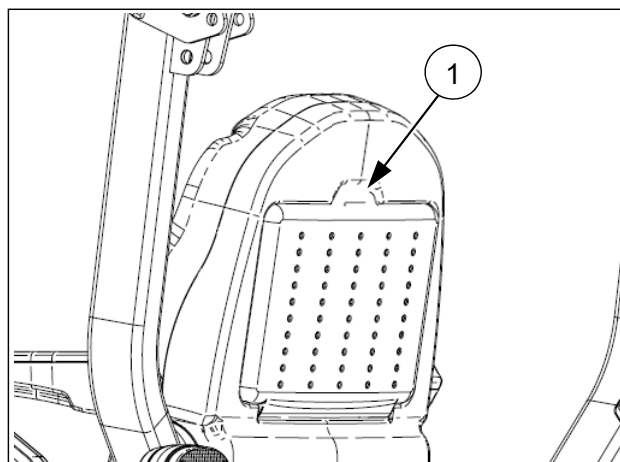


(6) Tractor orientation

NOTE: On this equipment, left-hand and right-hand are determined by standing behind the unit, looking in the direction of travel.


Left-hand view

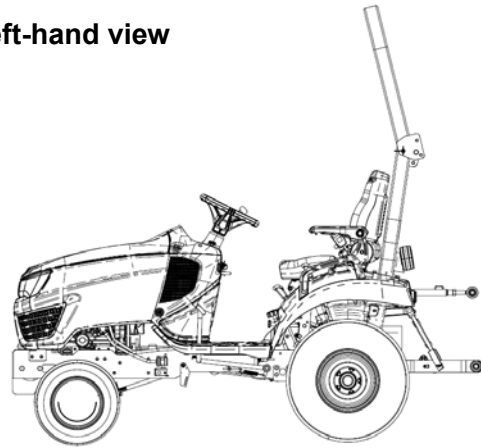


Front view

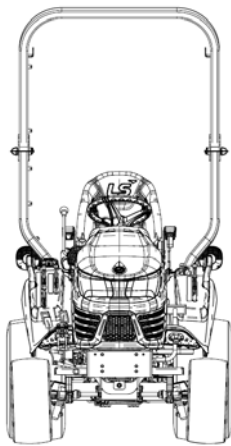

Rear view

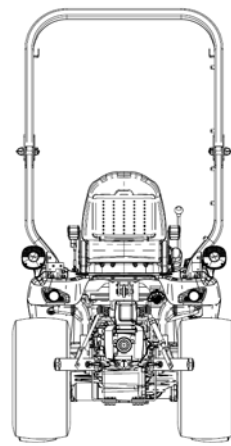

When reading this Operator's Manual, refer to the right figure for the discrimination of the directions.

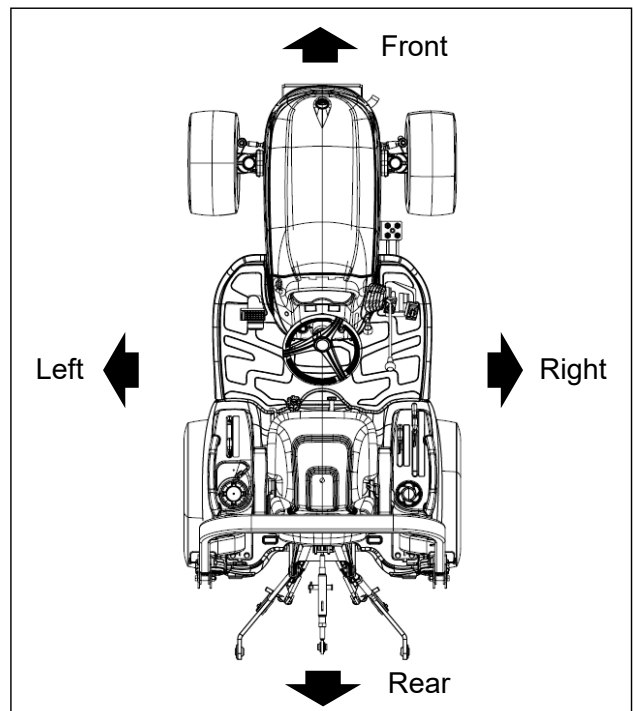

1-2. Safety Precautions - read this for safety before using.

(1) Notices before using the tractor

- **For Safety operation** : Before using this tractor, read carefully and understand this operator's manual and operator's manual of the mounted or trailed machinery on this tractor, and strictly follow the instructions outlined in the operator's manuals.




Read Operator's Manual carefully.


Especially, special cares must be taken for using the tractor in the places where the safety signs such as Danger, Warning, Caution etc. are marked. (See page 1-1)

- **Safety Decals** : For right use and personal safety of the operator, the safety decals are attached to the parts related with safety operation. Before using the tractor, comply with the safety instructions. (For further information, refer to the chapter 1-2-(14). "Safety Decals" in this manual.)

- **Operator's condition** : The persons such as patients, drunks, people on drugs, etc. are never allowed to operate this tractor. Only educated operators can use the tractor after learning the usage of controls for moving, stopping, turning and other operating.

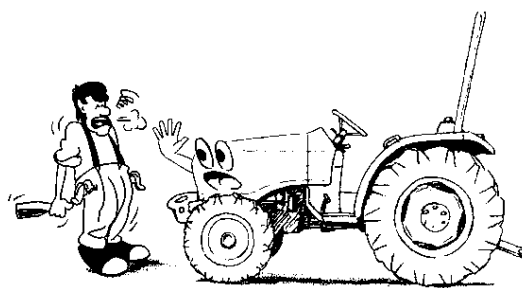

- **Suitable Clothes & Protect Entanglement** : When checking or operating the tractor, wear tight fitting clothes and safety equipment instead of loose or long clothes. Also, slippers, high heel shoes are not suitable for operation. Wear the low shoes or work shoes or boots.

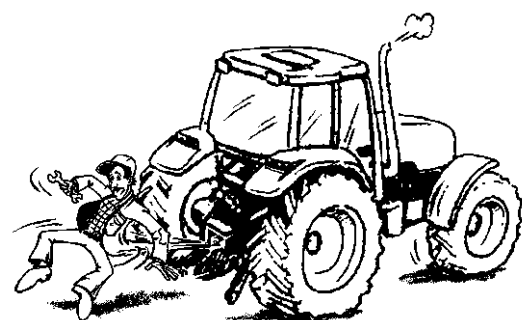

- ▶ Do not approach the rotating shaft such as PTO shaft or cooling fan, especially, with loose clothing and long clothes. The entanglement in rotating shaft can cause serious injury or death.
- ▶ Stop the engine and be sure PTO shaft is stopped before getting near it.

- **Keep Riders off** : Riders on the tractor or implements obstruct the operator's view and can be thrown off the tractor. It can cause a serious injury or death. Riders should not be carried on the tractor at any time.



- ▶ Additional seat (where fitted) is used for driver training or instruction. Do not permit anyone to ride on the tractor.

- **Protect Children** : Pay special attention to children (or a child) while using the tractor or during storage.
 - Make sure children keep a safe distance from the tractor and all implements before using the tractor. Be alert to the presence of children.
 - Do not let children or an untrained person operate the tractor.
 - Do not allow children to approach the tractor while the engine is running.
 - When parking the tractor, remove the ignition key and lower implements to the ground for children's safety.



Warning

- ▶ As children are very curious, they may do unexpected movements or actions. Special care must be taken when operating tractor or equipment.

- **Periodical Check** : "Lubrication and Maintenance" must be performed periodically. If necessary, do it immediately and if not, it may cause a failure, reduction of product life or physical injury.

** Periodic Lubrication and Maintenance*

Fuel, Oil, Filter, Air cleaner, Battery, Belt, Cable, Grease, Pedals such as clutch(Mechanical models only) and brake pedal, Tire air pressure, Wheel bolts, Toe-in, Electrical wirings, other items related to safety.

- **Genuine Parts** : When replacing parts, you must use "Genuine Parts" of the tractor. Contact your authorized local dealer. If not, it may cause a failure, reduction of product life or serious injury.
- **Restrict Maintenance** : If repairing or changing some components or settings arbitrarily, the performance of the tractor cannot be guaranteed, and may void the warranty. And also, maintenance of the heavy weighted parts without special tools may cause serious injury. These works should be treated by well-educated and skilled service experts.
If required to check or repair the tractor due to such a trouble, or having any question about your tractor, contact your authorized local dealer.

** The items that are not allowed to be modified or removed arbitrarily by user are as below :*

- Protection structures such as PTO cover, Guards, Safety frame(Roll-bar), Cab, etc.
- Engine components, Fuel injection control and setting, etc.
- Automatic control equipment, Lamps, Transmission, Hydraulic valve and pressure settings.
- Other parts that detail and where complicated adjustments are needed.


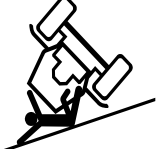
- **Lamps** : Do not modify the lamps or change the bulb capacity arbitrarily.



Warning

- ▶ Modified lamps or changed bulb capacity may cause a traffic accident by distracting approaching driver's views.
- ▶ If the lamp is blown out, replace it immediately with a genuine part. In case of driving at night, it may cause a traffic accident.

- **Protective Structures :** For the operator's safety, various protective structures, i.e. Bonnet (Hood), Fan cover, PTO safety cover, PTO shaft protection cap, Roll-bar or another Roll-over Protective Structure, etc. are attached on the tractor. If these structures are modified or removed by user arbitrarily, it may cause a serious accident. Such behaviors are prohibited strictly.

<div data-bbox="172 353 341 421">  Warning </div> <div data-bbox="172 636 341 801">  </div>	<ul style="list-style-type: none"> ▶ The Protective Structure and interconnecting components are a certified system. Any damage, fire, corrosion or modification will weaken the structure and reduce your protection. If this occurs, the Protective Structure MUST be replaced with a new one. Contact your authorized local dealer for Protective Structure inspection and replacement. ▶ In case of an accident, fire, tip or roll-over, the following MUST be performed by a qualified technician before operating the tractor again. <ul style="list-style-type: none"> - The Protective Structure MUST be replaced. - The mounting or suspension for the Protective Structure , operator seat and suspension, seat belt and mounting components and wiring within the operator's protective system MUST be carefully inspected for damage. - All damaged parts MUST be replaced. ▶ DO NOT attach any device to the Protective Structure for pulling purposes. ▶ DO NOT weld, drill holes, attempt to straighten or repair the protective structure. The modification can reduce the structural integrity of the structure which can cause death or serious injury in the event of fire, tip, roll over, collision or accident and void the warranty.
--	--



- **Level of protection of the FOPS (Falling Objects Protective Structure) :**
 - **For cabin model**, If necessary, a field cab can be installed optionally by your authorized local dealer. Refer to the cab installation manual. (if fitted)
 - **For roll-bar model**, it does **NOT** provide any protection against falling objects. It is recommended to use a certified FOPS structure when working with front-end loaders.
- **Level of protection against hazardous substances :**
 - **For cabin model**, If necessary, a field cab can be installed optionally by your authorized local dealer. Refer to the cab installation manual. (if fitted)
 - **For roll-bar model**, it does **NOT** provide any protection against hazardous substances. Do not use the tractor with crop sprayers in hazardous area.
- When using the agricultural tractor with crop sprayers, the following hazards exist:
 - Risks due to spraying hazardous substances with a tractor (fitted with a cab or not).
 - Risks related to entering or exiting the cab(if fitted) during the application of hazardous substances.
 - Risks related to the possible contamination of the operating environment.
 - Risks related to cleaning the cab and maintaining the air filters (if fitted).

For protection against hazardous dust, aerosols, and vapors, see the instructions provided by the chemical agent supplier, the sprayer manufacturer, and the basic rules contained in this manual. Always use the Personal Protective Equipment (PPE) and any other special devices as instructed by the chemical supplier's instructions during spraying operations.

- **Level of protection of the OPS (Operators Protection Structure) :** This tractor does **NOT** provide protection against
 - falling objects, such as branches, logs or tree limbs, low hanging wires in the forest, orchard or construction area.
 - toppling trees, primarily in case a rear-mounted tree grab-crane is mounted at the rear of the tractor.
 - penetrating objects in the operator's enclosure, primarily in case a winch is mounted at the rear of the tractor.
 - steep slope or rough terrain working conditions.
 - potential risks by using any optional equipment that might be available to deal with those hazards.
- Your tractor is NOT EQUIPPED FOR FORESTRY APPLICATIONS. **NEVER enter or operate in these hazardous areas without a certified Operator Protective Structure installed.**

(2) Notices when starting Engine

- Check each part with reference of “5. Lubrication and Maintenance” in this manual. If necessary, repair or replace it immediately. **Especially, check if safety protection structures or covers are attached originally and the bolts and nuts are tightened well.**
- Before starting, **check again if there are other workers or children around the tractor and implements and keep a safe distance.**
- Start engine and operate the tractor **after sitting on the driver’s seat** with a securely fastened seat belt.
- Place the shuttle lever, transmission gear lever in NEUTRAL and especially check if parking brake is applied.
- Lower the implements on the ground.
- Ensure that rear view mirrors and the other mirrors (if fitted) are adjusted correctly, and check the operation of the headlights and other lights.
- For driver’s safety, to prevent an unintentional start, movement and operation, several and various start-safety interlock devices may be equipped on your tractor. And, these installation may need to do correct operation and follow the procedure strictly. Read carefully chapter 4-2, “Engine start and stop” in this manual before trying to start engine.
- Do not short across the starter motor terminals to start engine. It may cause a sudden start and serious injury or death.

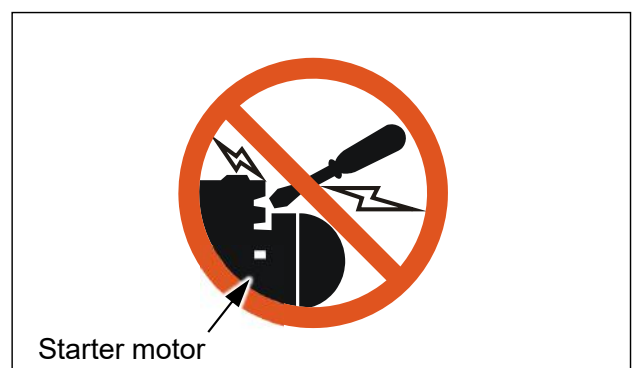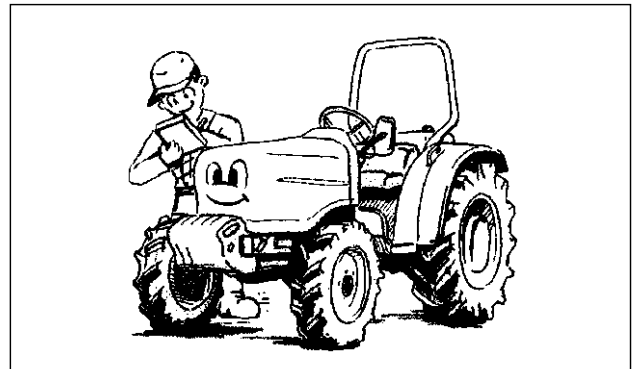



Warning




- Do not start the engine in a closed area. The poisonous exhaust gas can cause fatal damage to the driver or persons around.

(3) Notices while operating/using the tractor



● Ventilation

 Warning	<p>► It is very dangerous to work in a closed area. The poisonous exhaust gas may cause serious damage to the human body. If you should work in this area, make sure to ventilate well and put on the protective mask.</p>
	

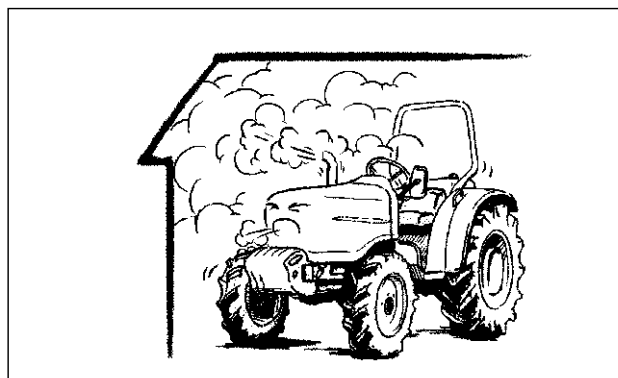


- **Noise and Vibration** : When working between buildings or in confined spaces, the sound pressure level can be increased. Wear suitable ear protectors in high noise level conditions. When working with equipment in the field, vibration intensity from equipment may be increased. To reduce the harm to the body, take a rest periodically.


- Connect left and right brake pedal(s) while driving on the road. (if fitted)
- DO NOT use differential lock device while driving on the road or turning in the field.
- DO NOT ride your foot on the brake pedal(s) or clutch pedal.
- Do not jump up/down while tractor is moving. When getting on/off the tractor, use the grab rail and sub step to prevent falls.
- Lower the driving speed enough before turning a sharp curve. Especially, when you drive the tractor with implements, make the turning radius wider.
- DO NOT start or stop the tractor suddenly. Engage the clutch and brake softly. If not, front wheels can be lifted up and it is very dangerous.
- While working, you must clean the spraying area, front/rear wheels, axles, mud guards and fenders regularly.

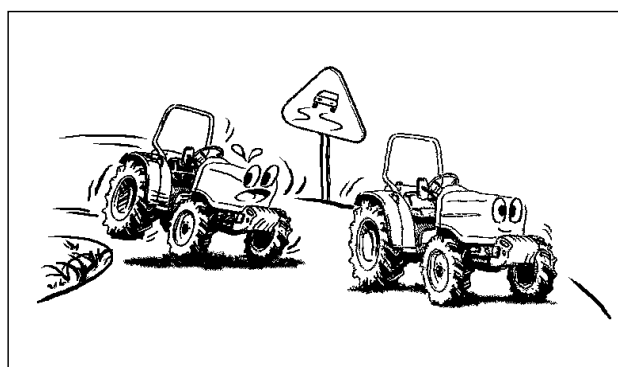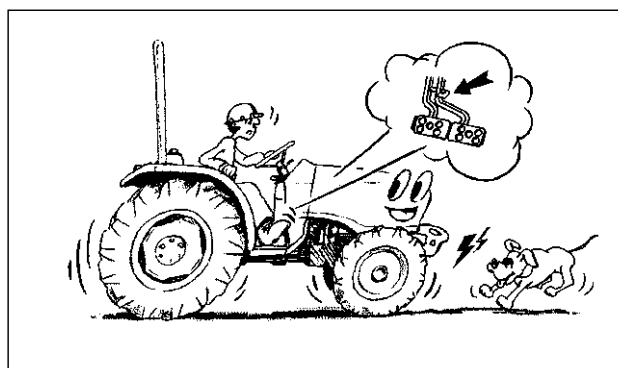

- When driving the tractor in reverse, lower the engine speed. Make sure to check if there is any obstacle or person in the rear.
- DO NOT permit other people and especially children approach within working area while operating tractor and equipment.

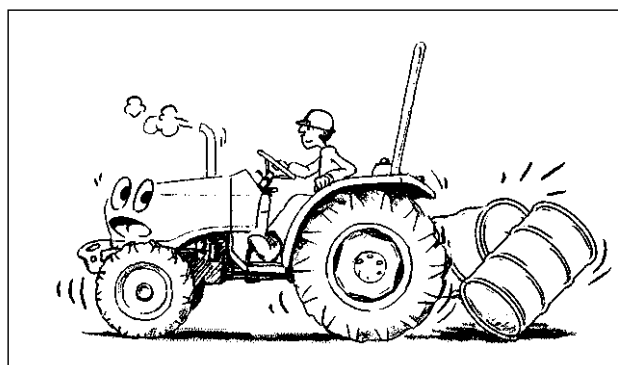

- Obey the traffic rules while driving on public roads. Do not exceed the local legal speed limit. Use a beacon or slow moving vehicle (SMV) to indicate that the vehicle is slow moving.

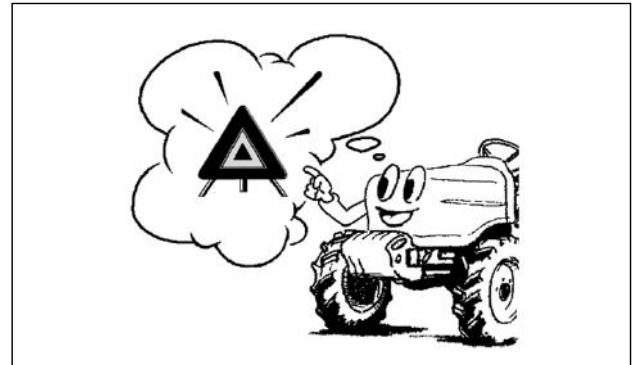


- If you cannot drive the tractor due to a failure, move the tractor to a safe place and install troubled vehicle (safety tripod).
(Day : backward 100m (328 ft)
Night : backward 200m (656 ft))

- Do not overuse the fuel, oil, etc and pay attention not to contact the skin directly. Generally, these materials contain harmful materials to the human body. When you work in a area where hazardous chemicals are sprayed, check the cabin filter (if fitted) and replace the filter with suitable one for the purpose being used. To protect the body completely from these harmful materials, wear a safe protection equipment such as mask, and clean the body after working.

- When crossing a high ridge, let down the implement and go straight across the ridge at low speed.


- When connecting the implements to the front/rear of the tractor, install the proper additional weights in the rear/front of the tractor to keep the balance of the tractor.

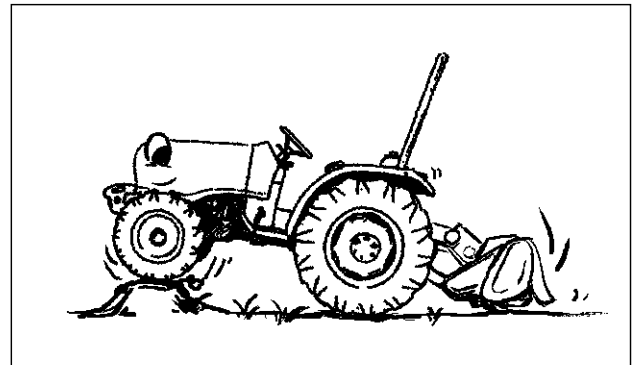

- On a downhill, operate the throttle pedal and brake pedal slowly and DO NOT drive while the transmission gear is in NEUTRAL.

- *When working with a front/rear implement, be careful not to touch the overhead power lines and hanging obstacles.*

- *Do not operate the tractor during an electrical storm. (Lightening strikes)*

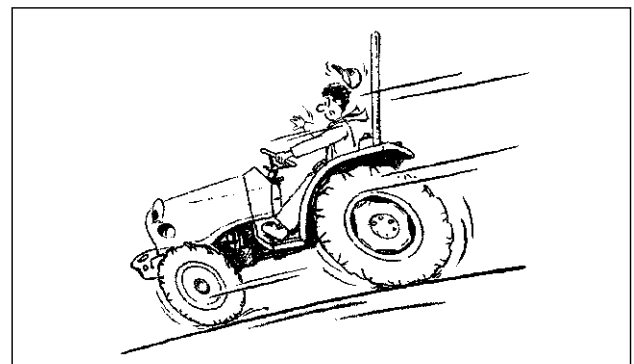


- To climb a steep slope, drive tractor slowly in reverse up the slope rather than forward. It is much safer.

- When turning tractor on a slope, the tractor can be overturned easily. Pay attention to the steering operation.

- When working at the edge of steep slope, especially, when using heavy attached implements, take special care about a turn-over.


- When working, wear the protection equipment and tighten the seat belt.



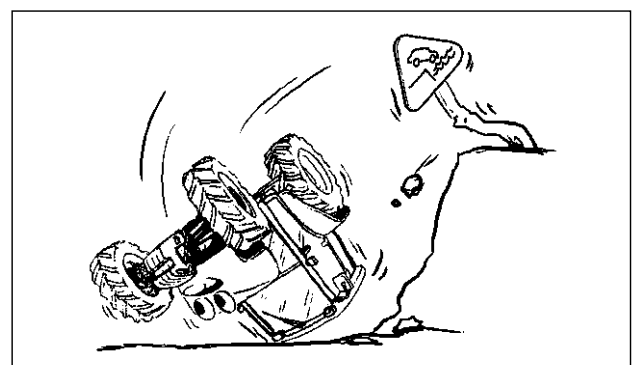

- If the authorized passenger seat is not installed, keep riders off.

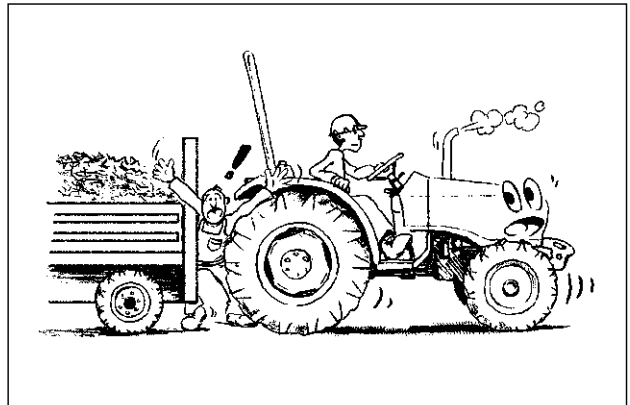

(4) Notices when connecting Implement


- Attach or detach the implement on wide and level ground.
- Do not use the tractor in combination with equipment arbitrarily, without having consulted the specific operator's manual provided with the equipment.
- You should stay clear from the three-point linkage when controlling it. Do not stay between tractor and implement.
- Do not stay between tractor and trailed vehicle for connecting/disconnecting or checking it. Trailed vehicle may roll down or tractor can move reverse.
- When towing the trailed vehicle, use only an approved hitch or drawbar. Do not tow by connecting to any other structures.
- When connecting heavy implements, apply the parking brake and use the wheel chock.
- Do not attach over-weighted implement.



 Caution	<ul style="list-style-type: none"> ▶ When connecting or disconnecting hydraulic coupler, lower implement on the ground, turn off engine and check if the pressure of hydraulic line is released. ▶ When installing the implement having big hydraulic cylinders or lines, check the oil level in the transmission housing after installing the implements.
 Warning  	<ul style="list-style-type: none"> ▶ Before connecting or checking the implement, put PTO switch to "OFF" and place PTO gear lever in Neutral position. ▶ When attaching or detaching the implement, make sure to fix the implement and tighten the three point hitch pins correctly. If not, the serious troubles and injury can occur during the operation. ▶ If heavy loaded trailer is connected to 3-point linkage or any structure, it can cause turnover or failure and serious injury. Make sure to use towing hitch or authorized draw bar.


(5) Notices when towing the tractor

- If your tractor needs to be towed for a short distance, use the hitch (or drawbar) or front towing hook. Do not connect to the other structure such as rear axle, ROPS, front axle, and steering components for towing.
- Your tractor can be steered for a short distance without engine running, but it will be hard to turn the steering wheel. If possible, run the engine for steering and lubrication.
- When being towed, disengage the 4WD, differential lock, parking brake and place all the transmission gear levers in the neutral position.
- Do not use cables or rope to tow the machine. If the cable or rope breaks or slips, it may whip back with enough force to cause serious injury. When using a chain, attach the chain with the hook's open side facing UP. If the hook slips, it will drop down instead of flying up.
- Never attempt to start the machine by towing. The machine could start unexpectedly.
- Do not tow the machine on public roads. Towing could cause a safety hazard for other vehicles using the roadway. *For further information, see chapter 4-4-(4) in this manual.*

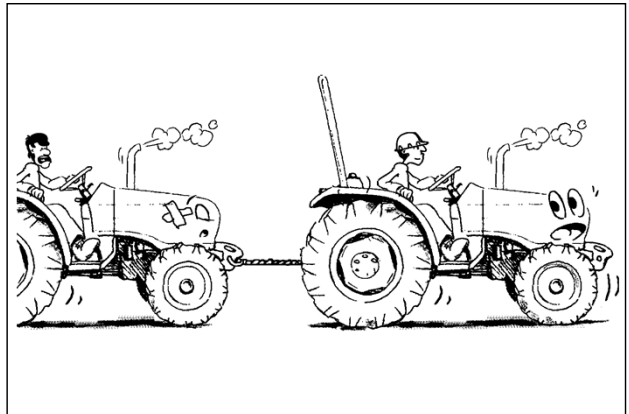

(6) Notices when transporting the tractor

- When transporting the tractor by truck, trailer, etc., use suitable equipment or facilities to load or unload the tractor.
- Fix the tractor tightly to the vehicle with heavy-duty straps or chains.
- When fixing the rear of the tractor, use the hitch or hitch support.
- When fixing the front of the tractor, use the towing hook.
- When driving on public roads, the transporting vehicle must have signs and lights required by local regulation to avoid collision with a vehicle.

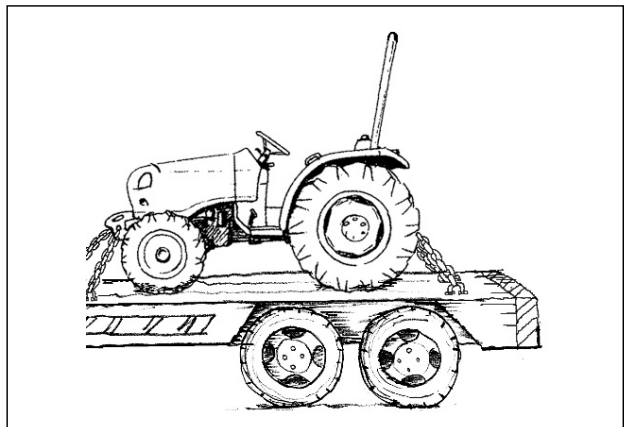

Caution

- ▶ When fixing the tractor, do not hook or connect chains to the 4WD shaft, steering cylinder, tie-rod or front axle. These can be damaged by the chain or excessive strain.
- ▶ In case of turbocharger engine (where fitted), cover the exhaust outlet to protect that the turbocharger does not rotate by air without lubrication.

(7) Notices when servicing the tractor after work


- Check and maintenance must be performed after **stopping the engine** and **cooling down the engine sufficiently**.
- DO NOT pour water into the radiator or engine when engine is hot. The engine or radiator may crack.



Warning




- ▶ When opening radiator cap, hot cooling water or steam may explode. Remove the cap using a thick rag or glove to prevent serious burns.

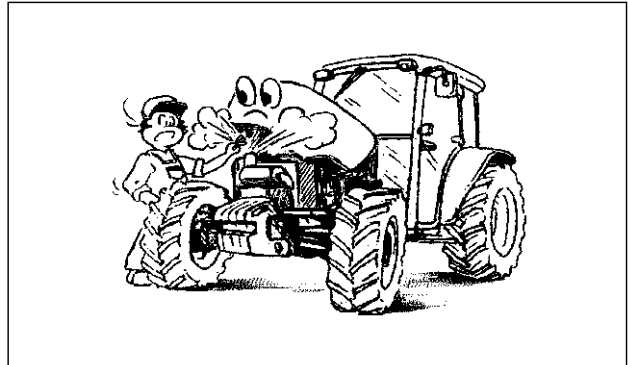

- **Remove all mud and debris** from the tractor after working. Especially check the engine area and exhaust system.
- Before checking or repairing hydraulic system and fuel system, make sure the **engine is stopped, and all the transmission gears are in neutral, and lower the implements to the ground**. The leaks of pressurized fluid can cause a fatal physical injury. If injured by leaking fluid, get medical attention immediately.



Warning

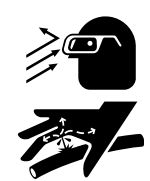

- ▶ Before removing hydraulic pipes or hoses and other parts, make sure to check that hydraulic pressure is relieved completely. The leaks of pressurized oil can cause a fatal physical injury.
- ▶ Use proper protection equipment, before servicing hydraulic system.
- ▶ Before connecting or disconnecting the hydraulic quick coupler, lower the implements to the ground, and check that hydraulic pressure is relieved.

- **Keep an approved fire extinguisher and First-aid-kit** on your tractor.
- **To prevent an fire or explosion of the battery**, keep any type of flames or sparks away from battery. Do not grind, smoke, or weld near a battery. Do not short circuit the terminals with metal objects. *For further information, see chapter 5-12-(3), "Battery handling and Notices" in this manual.*



Warning



- ▶ **Always remove grounded (-) battery clamp first and assemble it last.**
- ▶ **Sulfuric acid in battery electrolyte is poisonous.** It is strong enough to burn skin, clothing and can cause blindness if splashed into eyes
- ▶ Battery post, terminals and related accessories contain **lead and lead compounds. MUST WASH YOUR HANDS AFTER HANDLING.**

- Do not attempt to **remove or unfasten the air conditioning components(if fitted) arbitrarily**. There is a possible to be severely frostbitten or injured by escaping refrigerant. Contact your authorized local dealer to repair your air conditioning system.
- **Keep the area used for servicing the tractor clean and dry.** Wet or oily floors are slippery. It can be dangerous when working with electrical equipment.
- When lifting heavy parts like engine, axle, tires etc., make sure to **check the lifting facilities have enough strength and capacity**.

- Before servicing the tractor, attach a “**DO NOT OPERATE**” warning tag to the tractor in an area that will be visible.
- Electric sensors, switches and harness, including engine control unit(if equipped) are very sensitive and delicate. Strictly **prohibit injecting water, mechanical impulse and any kind of welding on engine.**


○	○
DO NOT OPERATE	DO NOT OPERATE
Reason : _____	
Signed by : _____	
Tel : _____	
	See other side

- *When assembling, operating, or servicing the tractor, wear protective clothing and any Personal Protective Equipment (PPE) necessary for the particular procedure. The necessary PPE may include: - Protective shoes, Eye and/or face protection, Hard hat, Heavy gloves, Filter mask, Hearing protection.*
- *When tractor maintenance requires you to work at heights:*
 - *Correctly use tractor steps, ladders, and/or hand holds.*
 - *Do not stand on tractor areas that are not designed as steps or platforms.*
 - *When necessary, use an appropriate ladder to reach components such as mirrors, rotating beacons, or air filters.*
 - *Never use steps, ladders, and/or hand holds when the tractor is in motion.*
 - *Do not use the tractor as a lift, ladder, or platform for working at heights.*
- *If you do not understand a maintenance procedure, or doubt your ability to perform a maintenance procedure correctly, see your authorized dealer.*

(8) Notices when handling Diesel Fuel


- *Before handling diesel fuel, refer to the chapter 5-1-(3), 5-1-(5) in this manual.*
- *Before handling Bio-diesel, refer to the chapter 5-1-(4) in this manual.*



 Warning	<p>Fire hazard!</p> <p>► When handling diesel fuel, observe the following precautions:</p> <ol style="list-style-type: none"> 1. Do not smoke. Keep any type of flame away. 2. Never fill the tank when the engine is running. 3. Wipe up spilled fuel immediately. Always tighten the fuel tank cap securely. <p>Failure to comply could result in death or serious injury.</p>
--	--

(9) Notices when leaving the tractor

- Stop the tractor on a level ground.
- Place the transmission gears in the neutral position and put PTO switch to the OFF position.
- Lower the mounted implements on the ground.
- Apply the parking brake.
- Stop the engine and remove the ignition key.
- Before you leave the operator's station, wait for the engine and all moving parts to stop.
- Apply wheel chocks to the wheels when parking the tractor on a slope unavoidably.

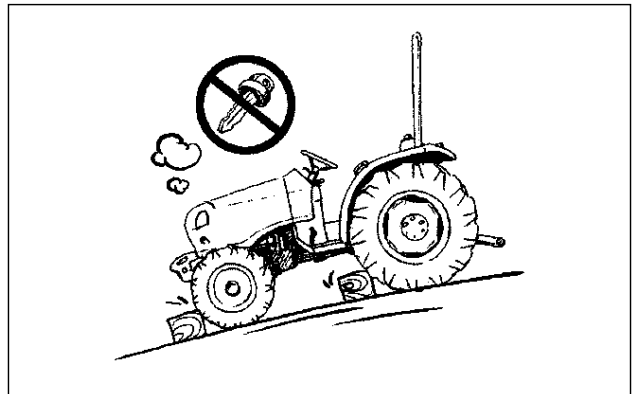

Caution

► If it is necessary to park your tractor on a slope, furthermore with a loaded trailer, the tractor may roll down even if the parking brake is applied. In this case, additionally apply the lowest transmission gear and apply wheel chocks or blocks to the all tires.

- . HST type : Engage the lowest gear of the range gear shift lever.

(10) Notices relating to Toxic substances




WARNING: Breathing diesel engine exhaust exposes you to chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

- Always start and operate the engine in a well-ventilated area.
- If in an enclosed area, vent the exhaust to the outside.
- Do not modify or tamper with the exhaust system.
- Do not idle the engine except as necessary.
- Battery post, terminals and related accessories contain lead and lead compounds.
- When handling engine oil, diesel fuel, anti-freeze solution and other chemical substances, wear protective clothes, mask and gloves.
- For more information, go to www.P65warnings.ca.gov/diesel

WASH YOUR HANDS AFTER HANDLING.

(11) Tractor stability


 Warning	<p>► Driving hazard!</p> <p>To prevent tractor instability, ALWAYS consider and follow the tractor stability requirements in this manual.</p> <p>Failure to comply could result in death or serious injury.</p>
---	--

The following procedure describes the requirements for tractor stability and how to calculate the required front-mounted and rear-mounted ballast.


For additional ballast information, also refer to the ballast recommendations in this manual.

For the maximum permitted operating weights, refer to the vehicle weights in this manual.

The following procedure and calculation is based on a tractor on even ground.

 Warning	<p>► Roll-over hazard!</p> <p>ALWAYS be aware of the effect of inclines and steep hills on tractor stability. Operating, handling, and braking performance may be affected. Adjust ballast and driving speed accordingly to ensure stable and accurate steering, and to ensure the required brake performance in critical situations.</p> <p>Failure to comply could result in death or serious injury.</p>
---	--

Necessary data to evaluate stability

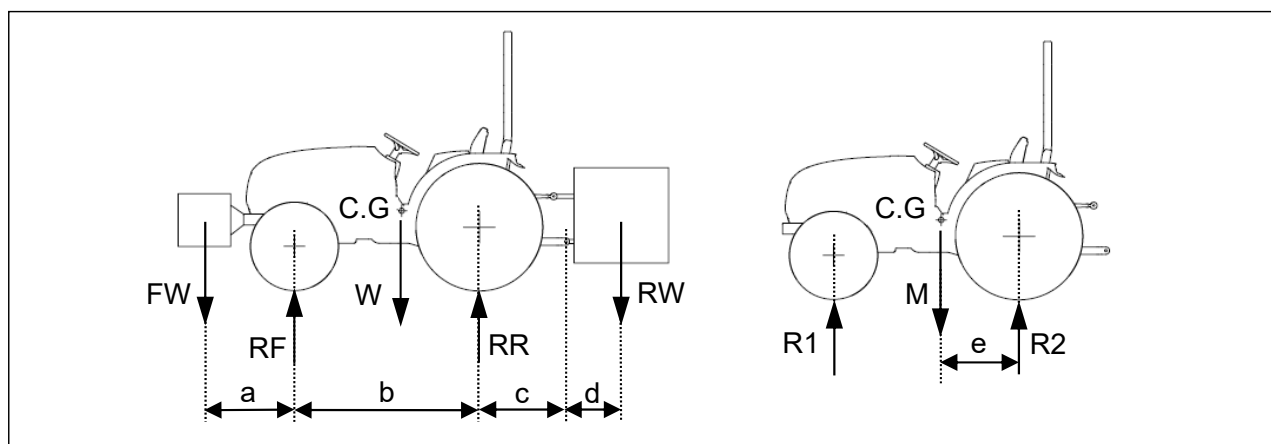

To get this value refer to:		
M	Mass of the unladen tractor = Tractor with standard equipment, minimum fuel, no weights or liquid ballast, no operator, and single wheel equipment	See chapter 6 in this manual.
R1	Front axle load of unladen tractor	See chapter 6
R2	Rear axle load of unladen tractor	See chapter 6
a	Distance, Center of gravity of front load to front axle center	Manual of the equipment or your measurement
b	Wheelbase	See chapter 6
c	Distance, rear axle center to lower hitch point of three-point linkage	See chapter 6 or your measurement
d	Distance, Center of gravity of rear load to lower hitch point of three-point linkage	Manual of the equipment or your measurement
e	Distance, rear axle center to center of gravity of mass of the unladen tractor (M)	Calculate using formula on the following pages
FW	Mass of front-mounted equipment or front-mounted ballast	Manual of the equipment or your measurement
RW	Mass of rear-mounted equipment or rear-mounted ballast	Manual of the equipment or to measurement
Wmax	Maximum permissible mass of the laden tractor	See chapter 4-5-(4)
RFmax	Maximum permissible front axle load	See chapter 4-5-(4)
RRmax	Maximum permissible rear axle load	See chapter 4-5-(4)

1. Equipment weight together with its filling must be added to laden values (seed drills, fertilizer spreaders, etc.).
2. Ballasting weight in the center of the front or rear tires, either solid or liquid, must be added to R1, R2, and M.
3. In case of an unbalanced trailer, the value c is the distance between the center of the rear axle and the hitching point, the value d is 0, and RW is the vertical load of the trailer on the hitch.

Constant parameters


0.2	Minimum ratio: actual axle load of laden front axle/ mass of the unladen tractor	Legal requirement
0.45	Minimum ratio: actual axle load of laden rear axle/ mass of the unladen tractor	Legal requirement

Required front ballast

To calculate	
FWr	Ballast required at the front when carrying a load RW at the rear
CALCULATION OF FWr	
$M \cdot e = R1 \cdot b$	
$e = (R1 \cdot b) / M$	
$RW \cdot (c+d) - (M \cdot e) + (RF \cdot b) = FWr \cdot (a+b)$	
$RF > 0.2 \cdot M$ RF value must be higher than $0.2 \cdot M$	
$FWr > [RW \cdot (c+d) - (R1 \cdot b) + (0.2 \cdot M \cdot b)] / (a+b)$	

Required rear ballast

To calculate	
RWr	Ballast required at the rear when carrying a load FW at the front
CALCULATION OF RWr	
$M \cdot b - (b - e) = R2 \cdot b$	
$FW \cdot a - M \cdot (b - e) + (RR \cdot b) = RWr \cdot (b+c+d)$	
$RW \cdot (c+d) - (M \cdot e) + (RF \cdot b) = FWr \cdot (a+b)$	
$RR > 0.45 \cdot M$ RR value must be higher than $0.45 \cdot M$	
$RWr > [(FW \cdot a) - (R2 \cdot b) + (0.45 \cdot M \cdot b)] / (b+c+d)$	

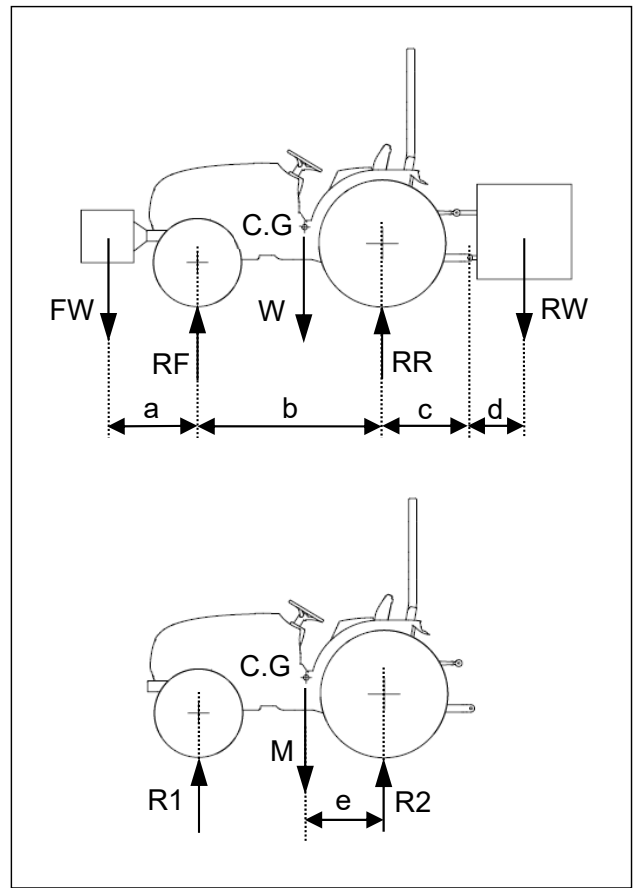

Axle load limits

To calculate:	
RF	$RF < RF_{max}$
RR	$RR < RR_{max}$
W	$W < W_{max}$
CALCULATION OF RF	
$(RF \cdot B) - FW \cdot (A + B) - (M \cdot E) + RW \cdot (C + D)$	
$RF = [FW \cdot (A+B) + (R1 \cdot B) - RW \cdot (C+D)] / B$	
$< RF_{max}$	
CALCULATION OF W	
$W = FW + M + RW < W_{max}$	
CALCULATION OF RR	
$R2T = W - RF < RR_{max}$	

(12) Ecology and the environment

Soil, air and water is essential elements for human life. To contribute to environment preservation of the Earth, we are trying to minimize the environment pollution necessitated by general business activity such as product design, manufacturing, distribution, etc.

Several substances and products derived from chemical and petrochemical products are major portion of environment pollution and must be disposed of according to environment laws or related regulations, and common sense.

Familiarize yourself with the relative legislation applicable to your country, and make sure that you understand this legislation.

Where no legislation exists, obtain information from suppliers of oils, filters, batteries, fuels, anti-freeze, cleaning agents, etc., with regard to the effect of these substances on man and nature and how to safely store, use, and dispose of these substances.

We'd like to notify the following items for "Use & Disposal" related to environment preservation.

1. Avoid the overload work after reading the operator's manual.

Overload work may reduce the life of the product as well as the unburned exhaust gas occurred during overload work becomes the major cause of air pollution.

2. When you replace various oils (engine oil, transmission oil, brake oil, and anti-freeze solution) directly, do not throw the exhausted waste oil to any place.

This may pollute the soil and water seriously and also is prohibited legally. If violating, you would be responsible for that by civil or criminal case. The waste oil must be disposed according to the environment laws.

3. Use the product according to the operator's manual and if the life of product ended, do not throw away (or dispose) to any place. The rust water or oil coming from the disposed product may cause the pollution of soil or water. Thus, the wasted product must be disposed lawfully, contact your authorized local dealer nearby.

4. Modern lubricants contain additives. Do not burn the disposed oil or fuel in conventional heating systems.

5. When you replace the fuel, lubricants oil and coolants, avoid spillage and do not allow to be absorbed into the ground. Do not mix drained brake fluids or fuels with lubricants. They must be collected safely and disposed in a suitable manner.

6. Do not adjust the setting of the fuel delivery system. This will alter the emission of exhaust fumes. Do not increase the pressure in a pressurized circuit as this may lead to a component failure.

7. Do not open the air-conditioning system yourself. It contains gases that should not be released into the atmosphere. Your authorized local dealer or air-conditioning specialist has a special extractor for this purpose and can recharge the system properly.

8. Repair any leaks or defects in the engine cooling system or hydraulic system immediately.

9. In general, avoid skin contact with all fuels, oils, acids, solvents, etc. Most of these products contain substances that may be harmful to your health.

















































Battery recycling

Batteries and electric accumulators contain several substances that can have a harmful effect on the environment if the batteries are not properly recycled after use. Improper disposal of batteries can contaminate the soil, groundwater, and waterways. We strongly recommends that you return all used batteries to your authorized local dealer, who will dispose of the used batteries or recycle the used batteries properly. In some countries, this is a legal requirement.



(13) Symbols

The followings show the symbols and its meaning used for the tractor.

	Refer to operator's manual.		Gear Neutral		Low speed
	Caution!		Forward/Reverse		High speed
	Battery charging		Forward		Engine speed control (throttle)
	Fuel level		Reverse		Engine speed control (throttle)
	Fuel filter		4WD engage		Turn signal light
	Engine coolant temperature		4WD disengage		Direction indicating light
	Hydraulic oil pressure		Quick turn (Optional)		Light switch
	Engine oil pressure		Cruise drive (Optional)		Side lights
	Engine preheat		Cruise drive release (optional)		Headlights (Low beam)
	Parking brake		Position control (Up)		Headlights (High beam)
	Emergency lights		Position control (Down)		Work light
	Engine start		Draft control (Deep)		horn
	Engine stop		Draft control (Shallow)		Window wiper
	PTO stop		Cylinder rod (shorten)		Window wiper / Washer (front)
	PTO in operation		Cylinder rod (extend)		Window wiper / Washer (rear)
	Differential lock device		Cylinder rod (floating)		Unlatched brake pedal (optional)

(14) Safety Decals


① Handling and Maintenance of Safety Decals

- For intended use and personal safety of the operator, the safety decals (labels) are attached to the parts related with safety operation.
- Before operating or maintaining the tractor, check the position and read the instructions carefully.
- If you find “Read Operator’s Manual” symbol ① in the decals, refer to the appropriate page of the operator’s manual for further information regarding operation, adjustment and maintenance.



- ▶ The instructions described on the safety decals are very important for your safety and for those working with you. If ignored, it may cause death or serious injury.
- ▶ If the decals are dirty, wash them with soap water and wipe with soft rags. Do not use thinner, acetone, or other harsh chemicals that may damage the decals.
- ▶ If the decal is detached or damaged, replace it with a new one on the original position.
- ▶ When cleaning the tractor with pressurized water, the decals can be detached.
- ▶ If a safety decal is on a part that is replaced, make sure the decal is attached on the new part.

② Safety Decals and Attaching position

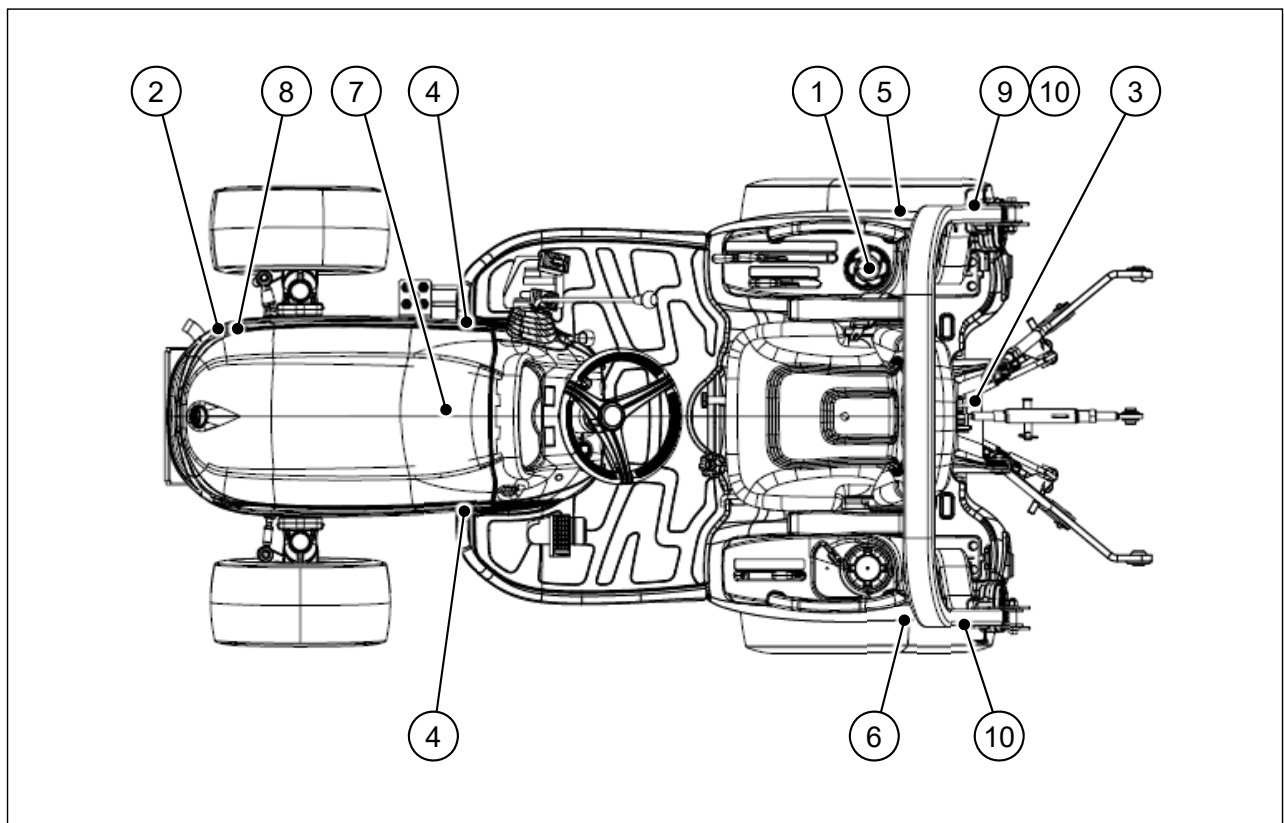


1. Location : On top of fuel cap, on the rear side of right-hand lever guide.

- Low sulfur diesel fuel only.
- Do not smoke while refueling and keep any type of flame away.
- Part No. : 40241059



2. Location : On the front right-hand side of engine frame.

- RUN OVER HAZARD
- To prevent serious injury or death;
 - Start only from seat with transmission and PTO in neutral.
 - DO NOT short across starter terminals to start engine.
- Part No. : 40195651

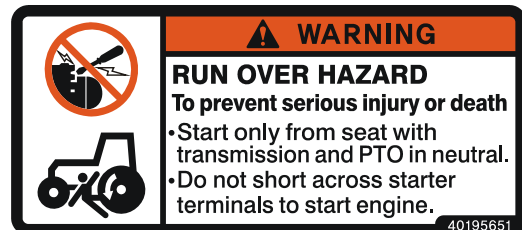

3. Location : On top of rear PTO guard.

- Rotating driveline contact may cause serious injury or death.
- Keep all driveline, tractor and equipment shields in place during operation.
- Part No. : 40195650



4. Location : On the left-hand and right-hand sides of fan shroud.

- Keep hands clothing away from the rotating fan and belts.
- Contact with moving parts may cause loss of fingers or a hand.
- Failure to comply could result in death or serious injury.
- Part No. : 40239638




5. Location : On top of right-hand fender.

- HIGH PRESSURE FLUID HAZARD
- To prevent serious injury or death;
 - Relieve pressure on system before repairing, adjusting or disconnecting.
 - Wear proper hand and eye protection when searching for leaks, use wood or cardboard instead of hands.
 - If hydraulic fluid or fuel sinks into skin, seek medical attention immediately.
- Part No. : 40195652



6. Location : On top of left-hand fender.

- TO PREVENT DEATH OR SERIOUS INJURY;
- Keep Roll-over Protective Structure fully upright and locked.
- Do not operate vehicle without ROPS locking pins in position.
- When ROPS must be lowered:
 - Drive with extreme care.
 - Seat belt use is not recommended.
 - Do not attempt to fold ROPS when a canopy is fitted.
 - ROPS is heavy. Always work with an assistant when lowering or raising the ROPS.
- No roll-over protection is provided when ROPS is in lowered position.
- Part No. : 40008817

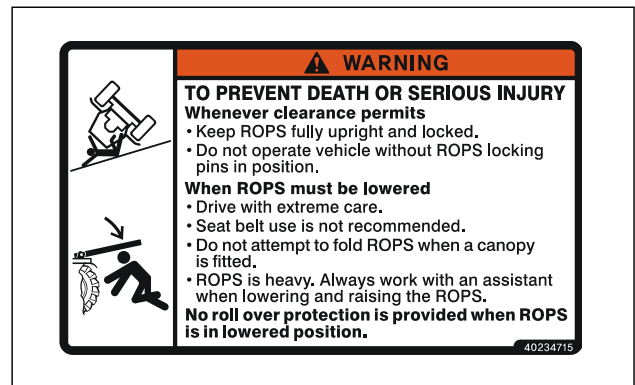

7. Location : On top of radiator, in front of the radiator cap.

- TO PREVENT DEATH OR SERIOUS INJURY;
High pressure steam and hot water. Remove filler cap with extreme care.
- Failure to comply could result in death or serious injury.
- Part No. : 40297729



8. Location : On the front right-hand side of engine frame.

- TO PREVENT SERIOUS INJURY OR DEATH;
Beware hot part. Keep clear of muffler to avoid injury.
- Failure to comply could result in serious injury.
- Part No. : 40239636



9. Location : On the right-hand side of roll-bar.

① CAUTION

- PTO selector & lever must be in "OFF" position to start engine.
- Do not operate on hard surfaces with 4WD engaged.


② WARNING

- TO PREVENT SERIOUS INJURY OR DEATH;
- After first hour of operation and daily thereafter, check front and rear wheel lug nuts and bolts for proper torque.
- PTO - keep hands, feet and clothing away from PTO & other moving parts.
- Disengage PTO and shut off engine before servicing tractor or implements, or attaching / detaching implements.
- Keep all safety shields in place for your protection.
- Pull only from approved drawbar or lower links of 3-point hitch at horizontal position or below.
- Lock tractor brake pedals together for travel on roads or highways.
- Always apply parking brake and shift transmission to neutral before dismounting.
- Always use a seat belt when you operate the tractor.
- Allow no riders on tractor or implements.
- Do not use a seat belt when operating with folding ROPS in lowered position.
- Engine exhaust fumes can cause death or sickness. Always try to work in a ventilated area.
- Disengage the differential lock when turning the tractor. Always disengage the differential lock when driving on roads.
- Depress one or both brake pedals to disengage the differential lock.
- Failure to comply could result in death or serious injury.
- Part No. : 40360330

⚠ CAUTION	
<ul style="list-style-type: none">• PTO selector & lever must be in "OFF" position to start engine.• Do not operate on hard surfaces with 4WD engaged.	
⚠ WARNING	
To prevent serious injury or death	
<ul style="list-style-type: none">• After first hour of operation and daily thereafter, check front and rear wheel lug nuts and bolts for proper torque.• PTO-keep hands, feet and clothing away from PTO & other moving parts.• Disengage PTO and shut off engine before servicing tractor or implements or attaching or detaching implements.• Keep all safety shields in place for your protection.• Pull only from approved drawbar or lower links of 3-point hitch at horizontal position or below.• Lock tractor brake pedals together for travel on roads or highways.• Always apply parking brake and shift transmission to neutral before dismounting.• Allow no riders on tractor or implements.	
	To prevent serious injury or death <ul style="list-style-type: none">• Always use a seat belt when you operate the tractor.• Do not use a seat belt when operating with folding ROPS in lowered position.
	<ul style="list-style-type: none">• Engine exhaust fumes can cause death or sickness.• Always try to work in a well ventilated area.
	<ul style="list-style-type: none">• Disengage the differential lock when turning the tractor.• Always disengage the differential lock when driving on roads.• Depress one or both brake pedals to disengage the differential lock.
40360330/00	

10. Location : On the left-hand/right-hand side of the roll-bar.

- TO PREVENT SERIOUS INJURY OR DEATH;
- Never operate a tractor without a certified ROPS.
- Always fasten seat belt when operating tractor with ROPS in upright position.
- Do not operate the tractor on steep slopes or drop-off.
- Avoid sharp turns at high speeds.
- Use of ROPS and seat belt reduce the chance of injury or death in roll-over or upset occur.
- Do not attach ropes or chains to ROPS for pulling purpose.
- Failure to comply could result in death or serious injury.
- Part No. : 40234561

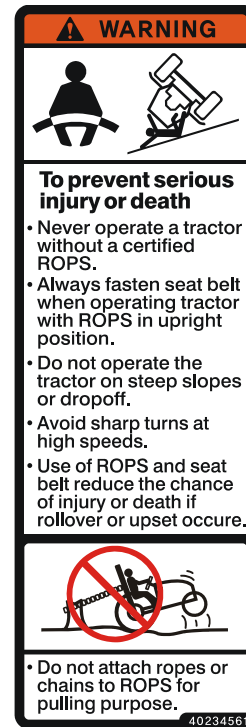


(15) Instructional Decals

① Instructional Decals and Attaching position - HST models

The following instructional signs are placed on your tractor as a guide for your safety and for those working with you. Walk around the tractor and note the content and location of these instructional signs before operating your tractor.

Keep instructional signs clean and legible. Clean instructional signs with a soft cloth, water, and a gentle detergent. Do not use solvent, gasoline, or other harsh chemicals. Solvents, gasoline, and other harsh chemicals may damage or remove instructional signs.

Replace all instructional signs that are damaged, missing, painted over, or illegible. If an instructional sign is on a part that is replaced, make sure the instructional sign is installed on the new part. See your authorized local dealer for replacement instructional signs.

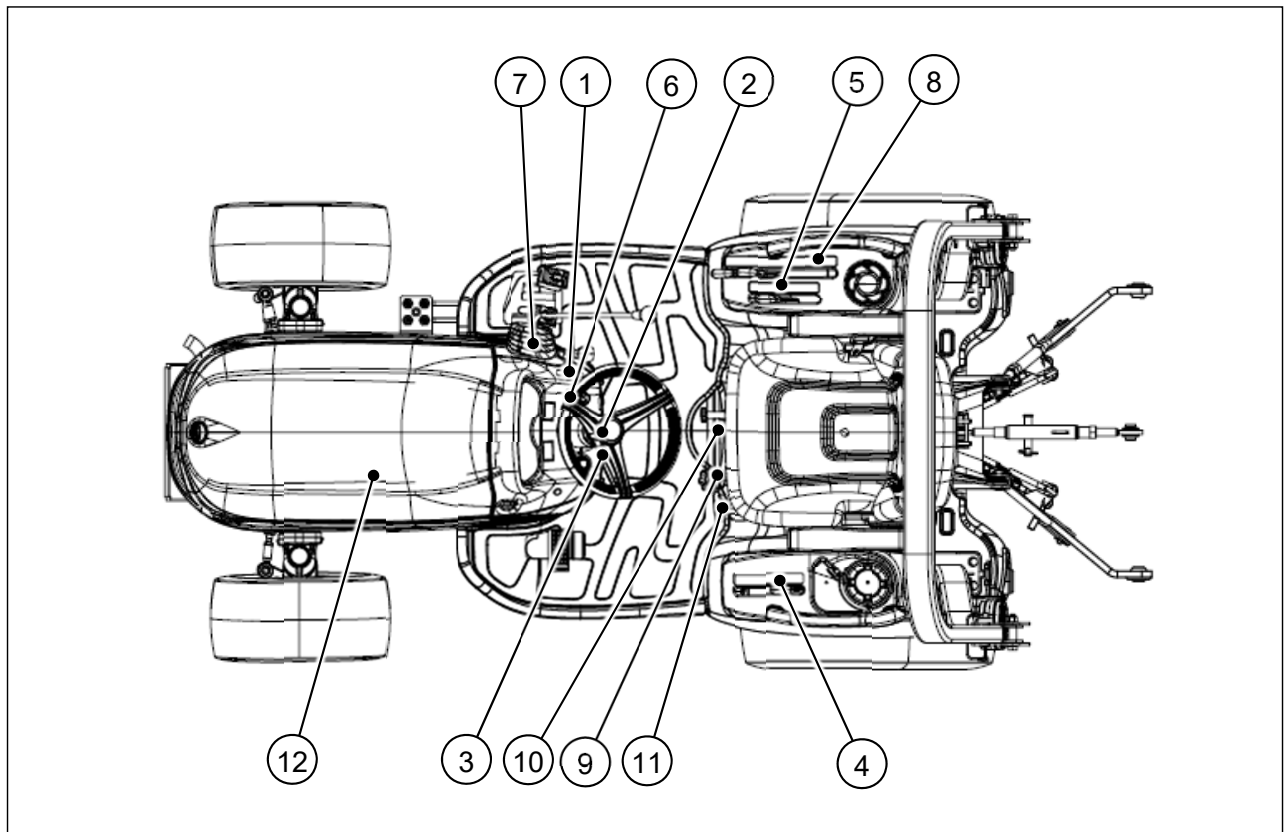


1. Location: On top of the right-hand side of the instrument panel cover.

- Throttle lever.
- Part No. : 40233965



2. Location: On the rear side of the lower body panel.

- Key switch.
- Part No. : 40378901

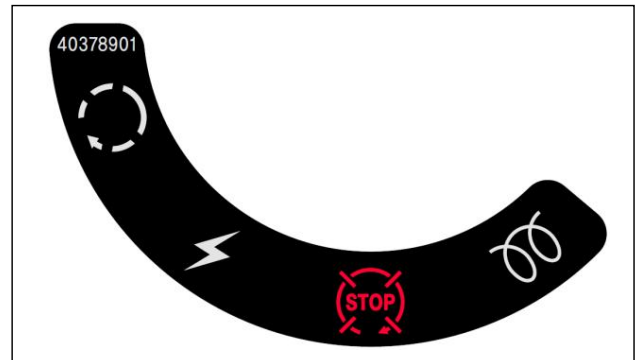


3. Location: On the rear side of the lower body panel.

- Parking brake lever.
- Part No. : 40236789




4. Location: On the left-hand lever guide.

- PTO select lever.
- Part No. : 40345867

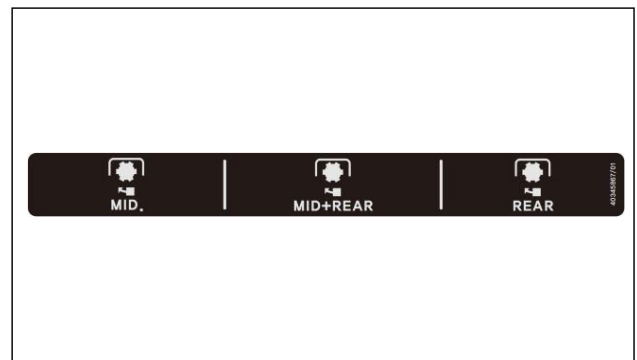


5. Location: On the right-hand lever guide.

- Hydraulic lift control (position control lever)
- Part No. : 40345868

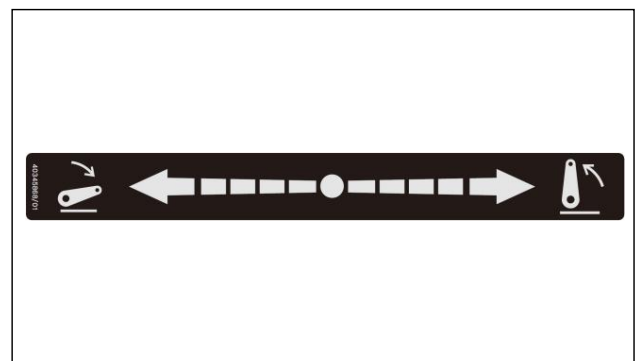


6. Location: On top of the right-hand side of the instrument panel cover.

- PTO switch.
- Part No. :40351818

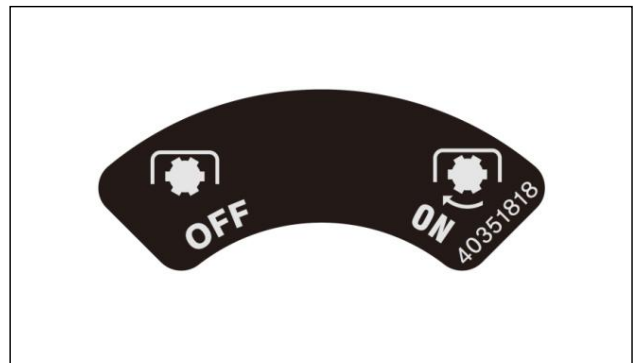


7. Location: On the right-hand side of the lower body panel.

- Joystick locking lever.
- Part No. : 40384350

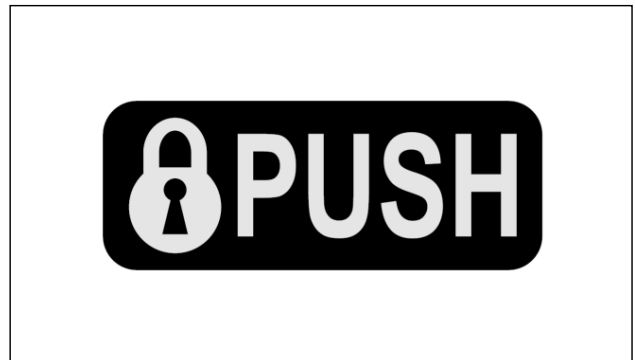


8. Location: On the right-hand lever guide.

- 4WD lever & Range gear shift lever.
- Part No. : 40372518

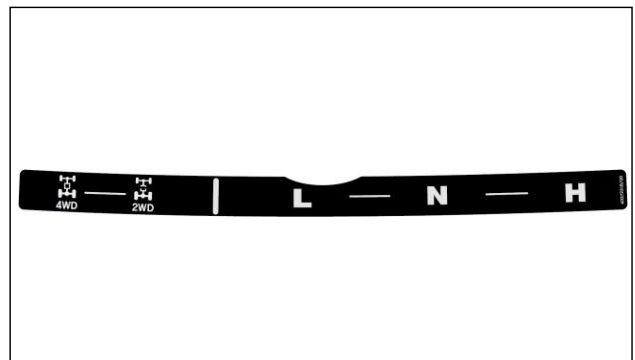

9. Location: Left-hand side below the driver's seat.

- Mid mower height adjustment lever.
- Part No. : 40353609

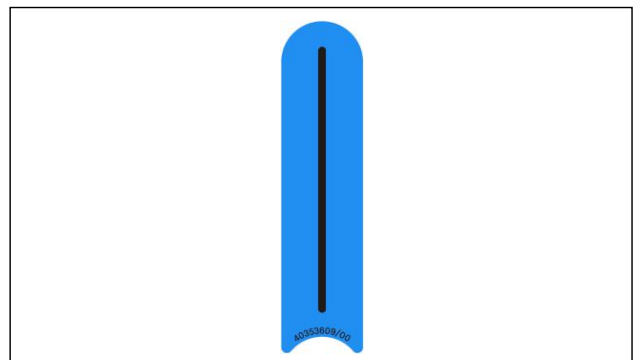


10. Location: Below the driver's seat.

- Hydraulic lift control. (down speed control valve)
- Part No. : 40008821



11. Location: Left-hand side below the driver's seat.

- Differential lock pedal
- Part No. : 40008815

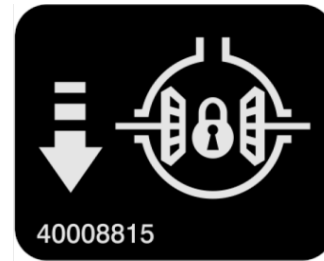

12. Location: On the air cleaner mounting band.

- Air cleaner.
- Part No. : 40370081



1-3. Long-term storage

(1) Preparation for storage



※ Wash the tractor cleanly and follow the procedure as below.

- Apply grease or lubricant oil or spray paint to the non-painted metal to avoid corrosion. Keep the tractor in a covered, dry and well-ventilated place.

Temperature : 10°C ~ 35°C (50°F ~ 95°F)

Humidity : 45% ~ 70%

- Place all controls, including electrical switches, in neutral position and apply the wheel chocks to the tires and disengage the parking brake.
- Check the lubricant level of each parts and if the engine oil has exceeded 100 hours of work, change the oil and run the engine for 5 minutes at idle rpm.
- Drain engine coolant completely. If the engine coolant is anti-freeze solution, it is not necessary to drain but check its density.
- Fill the fuel tank with fuel.
- Loosen all drive belts and clean the air cleaner.
- Loosen the rubber plug (if fitted) under the clutch chamber to drain water.
- Remove the battery, clean the cover and smear the terminals with grease. Place the battery in a ventilated place not less than 10°C (50°F) and away from direct sunlight.
- Remove the lift-rod and place the lift-arm to the highest position to lubricate the internal cylinder.
- If possible, fit stands or other suitable supports under the axles to raise the wheel off the ground. And let the air out of the tires. If not, check the tire pressure from time to time.
- Remove the ignition key.
- Cover the tractor with a non-water-proof cover.
- If the implements are attached, lower the implements on a support off the ground.

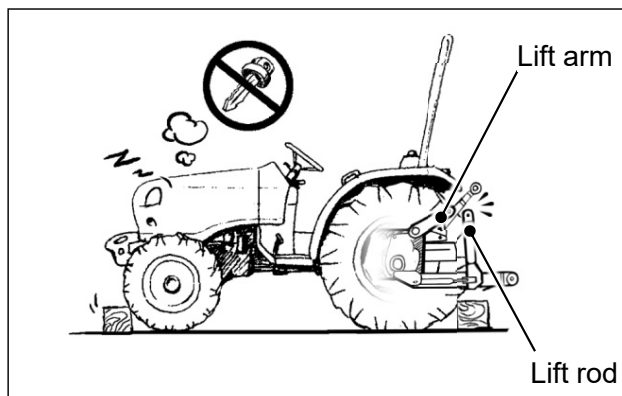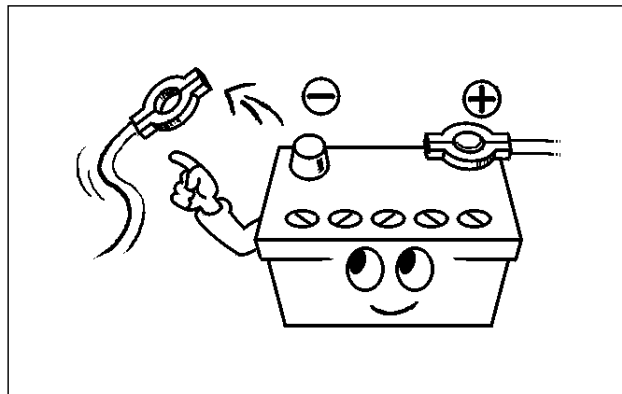



Warning

- ▶ When restarting engine at the end of long-term storage, follow the instructions of the “Preparation for Reuse” as below.

(2) Check & Maintenance during storage

- Apply grease or lubricant oil regularly to the non-painted parts.
- Check the leakage of fuel, oil and coolant. If necessary, repair the damaged part.
- Check if the tire air pressure is normal.
- **Start the engine periodically for about 15 minutes, at least once a month** for circulation and lubrication in the fuel system and engine. This may vary depending on the engine, fuel system, fuel type and so on. Contact your authorized local dealer.
- The battery should be charged about once a month not to be discharged entirely.



Caution

- ▶ As the electrolyte of battery is sulfuric acid, it emits the explosive and poisonous gas. It is strong enough to burn skin, clothing and can cause blindness if splashed into eyes.
 - Keep the sparks and flames and cigarettes away from the battery.
 - When handling the battery, wear safety glasses to protect the eyes.
 - If the electrolyte contacts the eyes and skin, wash with water immediately and go to see a doctor.
- ▶ When removing and storing battery, select dry and cool place out of reach of children.

(3) Preparation for Reuse


※ When using first after long-term storage, check each part as below.

- Inflate the tires to the recommended pressures and remove the blocking.
- Check the damaged part or loosen part.
- Check the leakage of fuel, coolant, engine oil, transmission and front axle oil.
- Check the level and density of the engine coolant.
- Check the level of engine, transmission, rear and front axle oil, and fuel.
(For further information, refer to the chapter 5, "Lubrication and Maintenance" in this manual.)
- Check all drive belts carefully, paying particular attention to the point where the straight run of the belt starts to bend around the pulley. Check the vee groove in the pulley for corrosion.
- Electric system check
 - Is there any open circuit or any other problem in the wiring?
 - Is there any problem of the instruments?
 - Is the charging state of the battery sufficient?
- Start the engine and allow it to idle for a few minutes. Ensure the engine is receiving lubrication and each control is functioning correctly.
- Run the engine at a fast idling speed (suggest 1000/1500 rpm) until normal operating temperature is registered, and check the surroundings for oil, fuel and coolant leakage.
- Drive the tractor without a load and check if the tractor is operating satisfactorily.

2. Instruction for Safe Operation

(1) The name of each part


① HST type

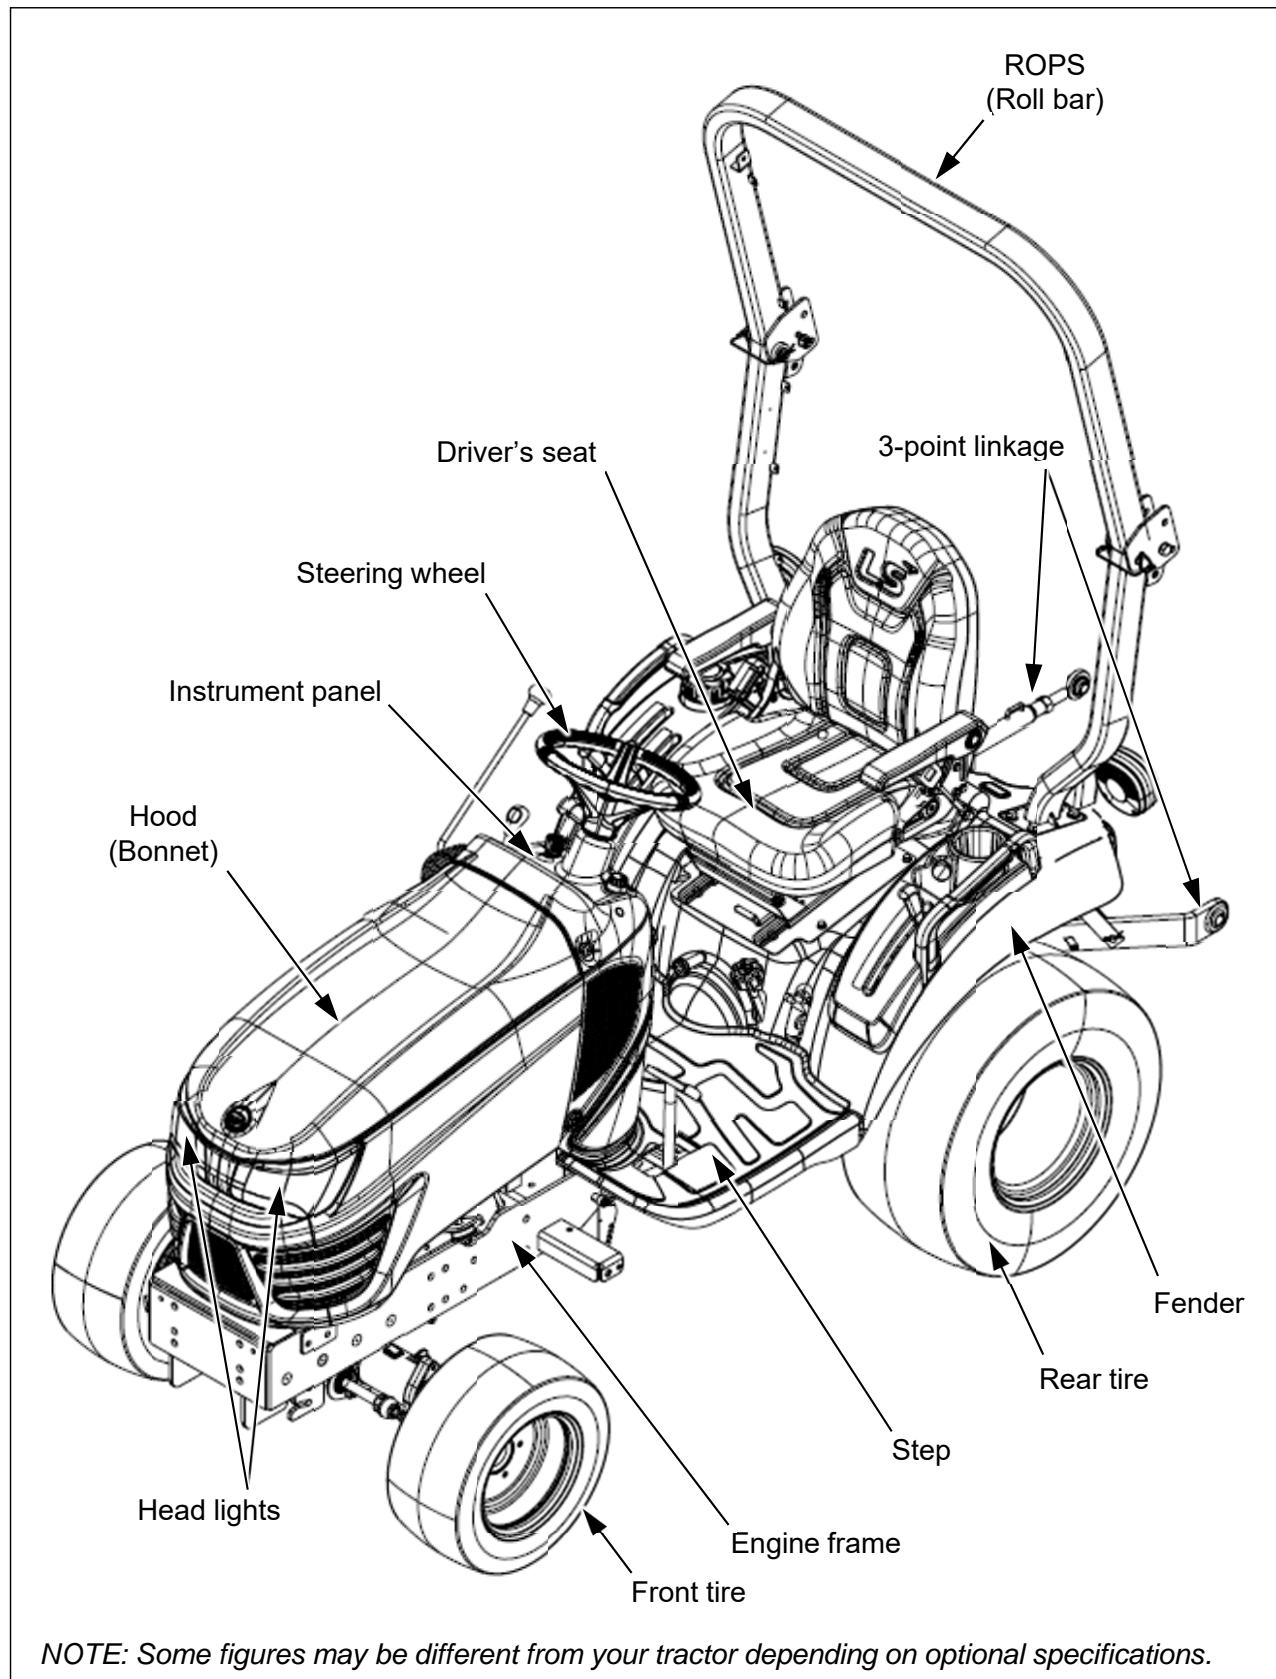

2-1. Boarding and Exiting the tractor

(1) Boarding the tractor

- Whenever possible, use the left-hand side step for entering.
- When boarding the tractor, use the steering wheel and grab handle on the left fender.
- Do not jump up/down for your safety. *Jumping on/off the tractor could cause an injury. Always face the tractor, use the grab handle, steering wheel and step, and get on/off slowly. Maintain a three-point contact to avoid falling: both hands on the grab handle and steering wheel and one foot on the step, or one hand on the grab handle and both feet on the step.*

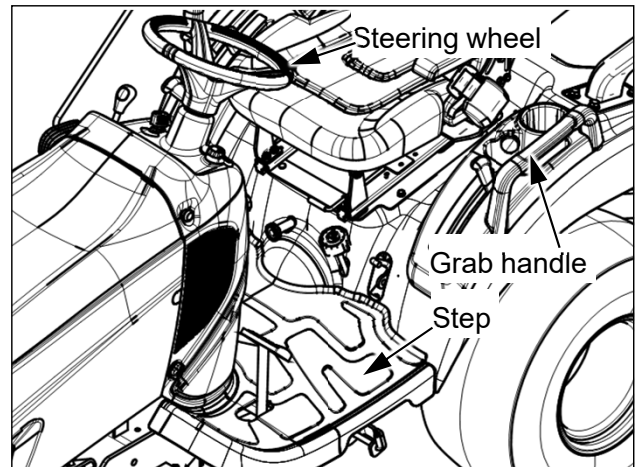


Caution

- ▶ **Operator's condition** : The persons such as patients, drunks, people on drugs, etc. are never allowed to operate this tractor. Only well-educated operators should use the tractor after learning the usage of controls for moving, stopping, turning and other operating.
- ▶ Do not grasp the gear levers when entering the cabin from the right-hand side.

(2) Driver's seat switch

- At the lower end of the driver's seat, there is a seat switch to detect operator's presence.
- **If the operator gets up from the seat while engine is running**, the engine will stop automatically for safety in case that;
 - ① Operator gets up from the driver's seat for more than 2 seconds while the HST pedals are NOT placed in the neutral position.
 - ② The parking brake is not applied while the HST pedals are in the neutral position and the rear PTO is engaged.
 - ③ The PTO select lever is in the "MID" or "REAR/MID" position.
- Before leaving the driver's seat, turn off the PTO switch and place the PTO select lever on the "REAR" position, and apply the parking brake.

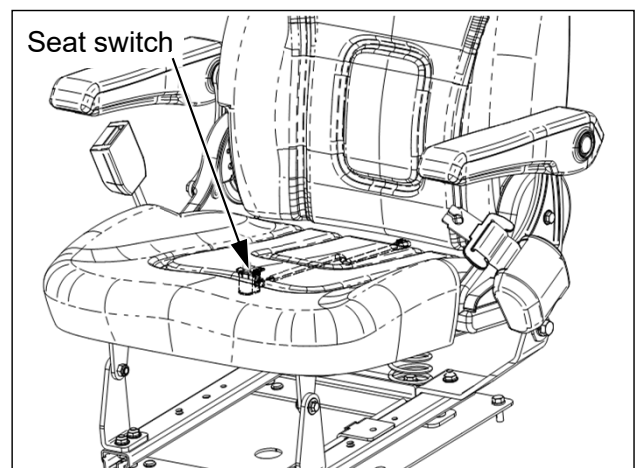

Warning


- ▶ Do not arbitrarily remove the seat switch. When replacing the driver's seat, make sure to check if the seat switch is correctly secured in place. Otherwise, the engine cannot be started.

(3) Seat adjustment

① Seat (Standard)

- Before operating the tractor, adjust the position of the driver's seat according to your body size and length

- 1) After sitting on the driver's seat, move the seat adjustment lever upward to release the lock.
- 2) Move the driver's seat forward or backward according to your body length.
- 3) Release the seat F/R adjustment lever and check if the driver's seat is locked in place.

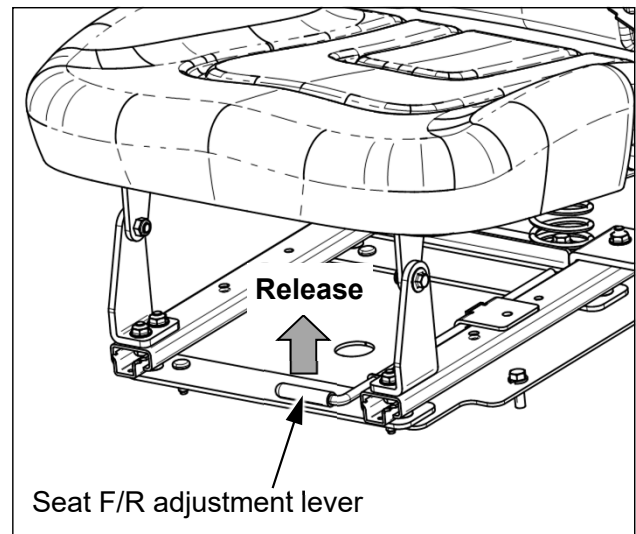

Warning

- ▶ DO NOT put your hand under the driver's seat while sitting. It may cause a serious injury by the seat suspension.
- ▶ DO NOT adjust the seat position while driving.

② Seat (Reversible, optional)

- Before operating the tractor, adjust the position of the driver's seat according to your body size and length.

● Seat F/R adjustment lever


- 1) After sitting on the driver's seat, move the seat F/R adjustment lever upward to release the lock.
- 2) Move the driver's seat forward or backward according to your body length.
- 3) Release the seat F/R adjustment lever and check if the driver's seat is correctly locked in place.


● Latch

- It must be used to lock the linkage frame in the reverse seat position. For further information, refer to the seat reverse lever as followings.


● Seat reverse lever

- It is used to reverse the driver's seat forward or backward. Please comply with the following instructions when reversing the reversible seat.

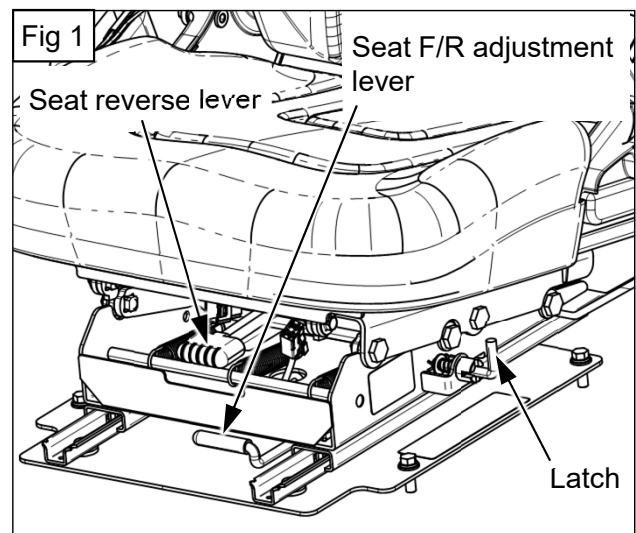



 warning	Avoid injury !
	<ul style="list-style-type: none"> ► Handle all parts carefully. Do not place your hands or fingers between parts. Use personal protective equipment including protective gloves and safety foot wear. ► Failure to comply could result in serious injury.

- 1) Move the driver's seat to the last position after lifting the seat F/R adjustment lever as shown in the [Fig 1].
- 2) Grab the back cushion and the front side of the bottom cushion with both hands as shown in the [Fig 2], and lift up the driver's seat.

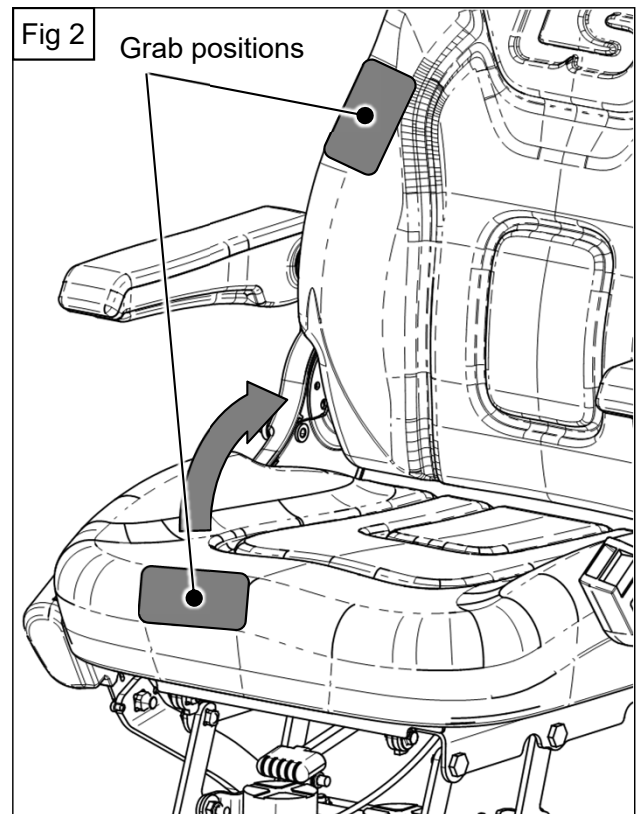

- 3) Lift up the seat reverse lever with finger, do not grasp, and rotate the seat as shown in the [Fig 3].

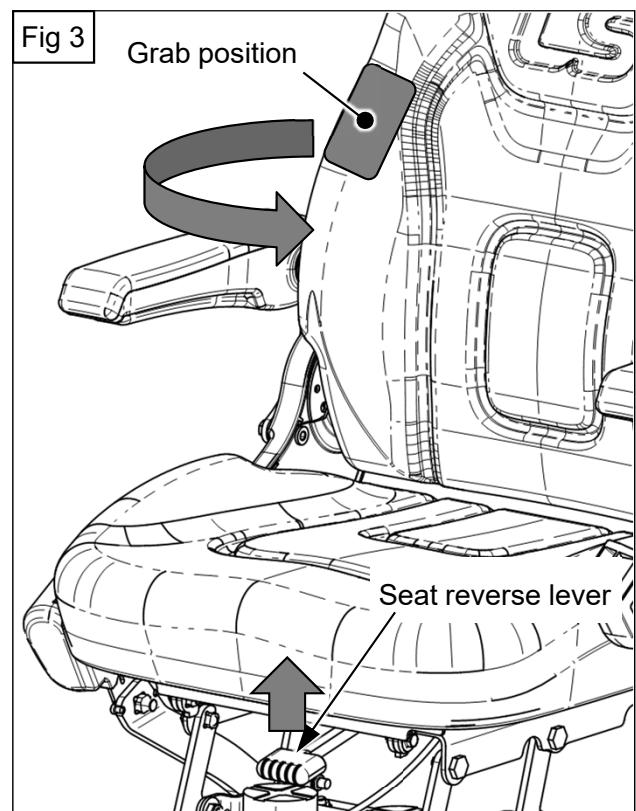


 warning	Avoid injury !
	<ul style="list-style-type: none"> ► DO NOT put your hand under the seat while rotating. It may cause a serious injury by the seat suspension. ► When lifting the seat reverse lever upward, do not grasp, move the lever with your fingers gently.

- 4) You must turn the latch to the lock position before sitting on the driver's seat as shown in the [Fig 4].

NOTE : Do not flip up the driver's seat in the backward position. Failure to comply, it may cause damage or cut off the electric wire harness.

- 5) When rotating the seat to the forward position, comply with the above procedure in reverse.

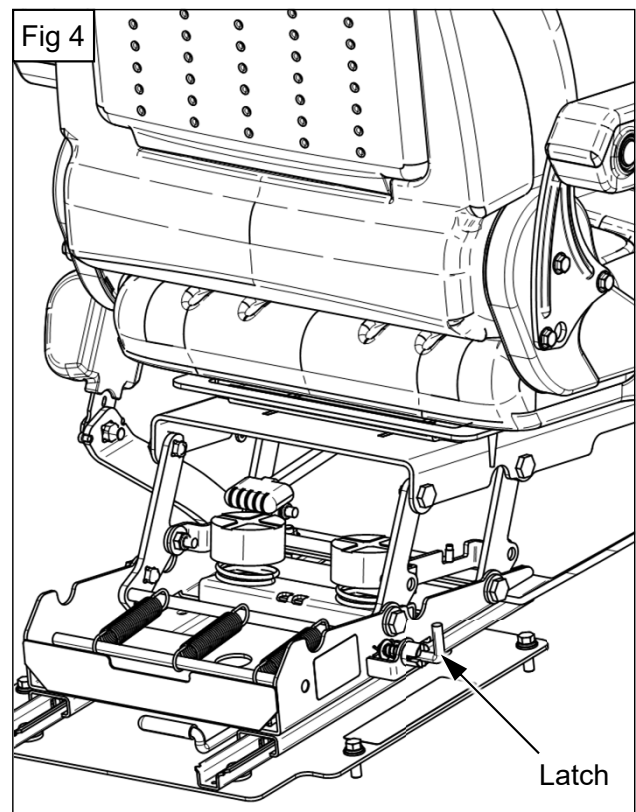

! warning


Avoid injury !

- You must turn the latch to the lock position before sitting on the driver's seat in the backward position. Failure to comply could result in serious damage or death.


(4) Replacing the Driver's seat

- When replacing the driver's seat from standard type to reversible type, comply with the following procedure.


1. Flip up the driver's seat forward and disassemble the harness connector from the main electric harness as shown in the [Fig 1]

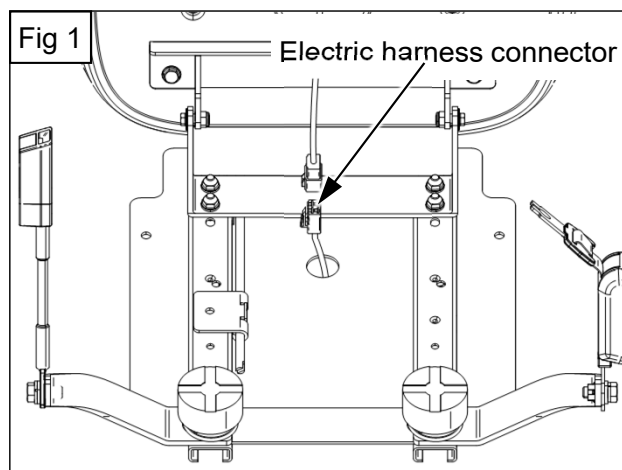

2. Remove four bolts(M8x1.25) to disassemble the standard type driver's seat from the tractor as shown in the [Fig 2]. And, move the driver's seat to the clean and even work place.

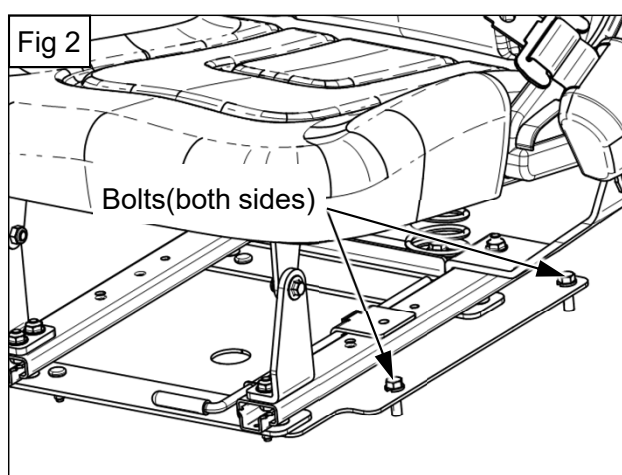

3. Remove two bolts(M8x1.25) at the front side to disassemble the lower frame from the standard seat as shown in the [Fig 3].

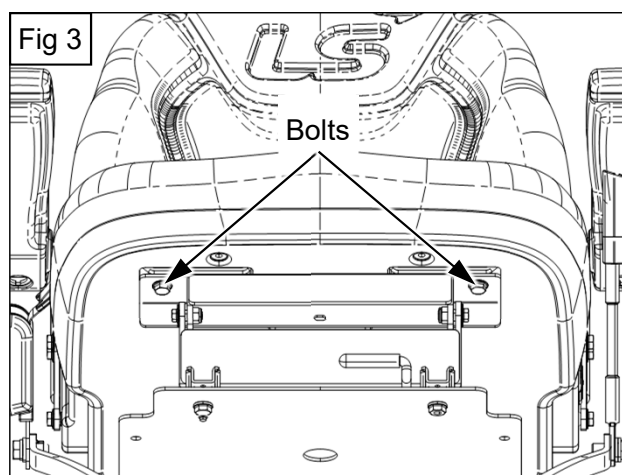


warning

Heavy parts !


- ▶ The reversible seat is very heavy. Handle with care. Make sure that the reversible seat, when stored, cannot fall over.
- ▶ Failure to comply could result in death or serious injury.

4. Remove two bolts to disassemble the safety belt (both sides) from the lower frame as shown in the [Fig 4].


NOTE : This safety belt will be used again when it comes to the reversible seat as well.

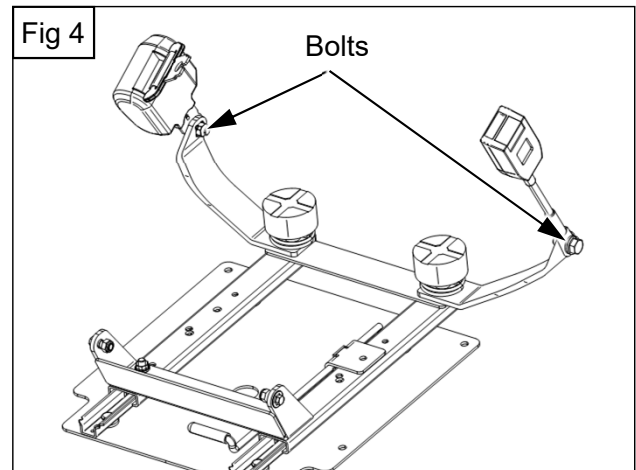


5. Assemble the safety belt (both sides) to the reversible frame with using two used bolts as shown in the [Fig 5].

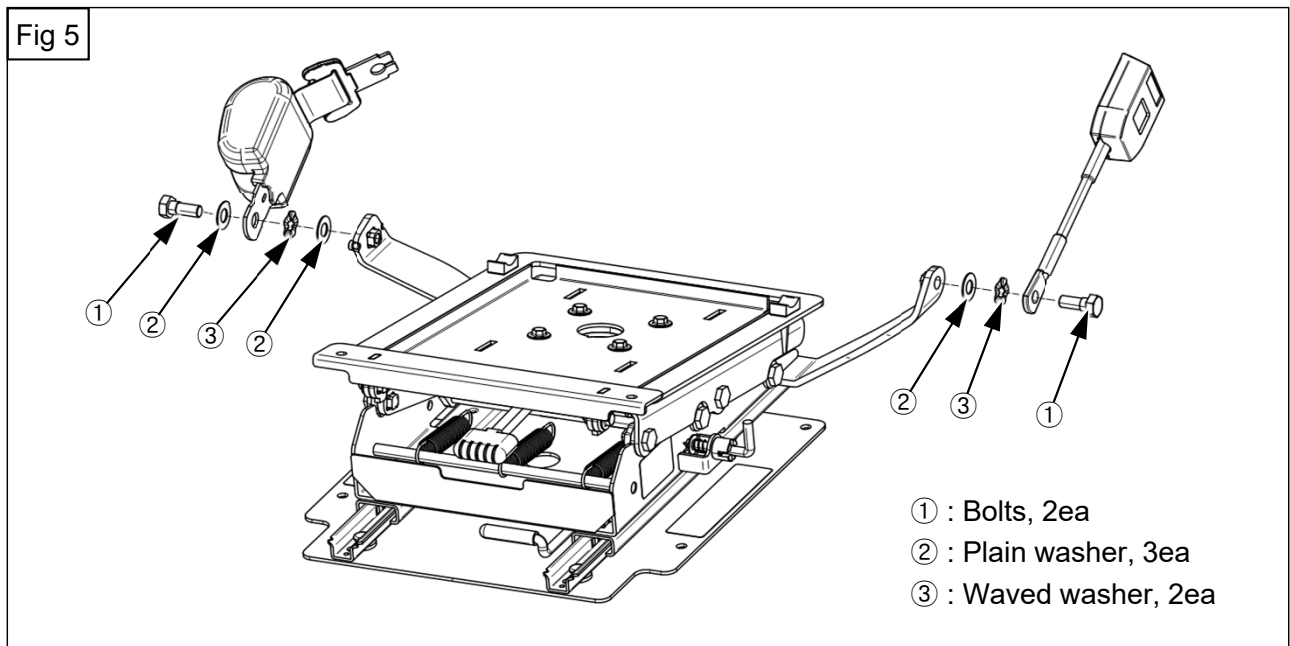

6. Assemble the cushion parts to the reversible frame with using two used bolts (M8x1.25) as shown in the [Fig 6].

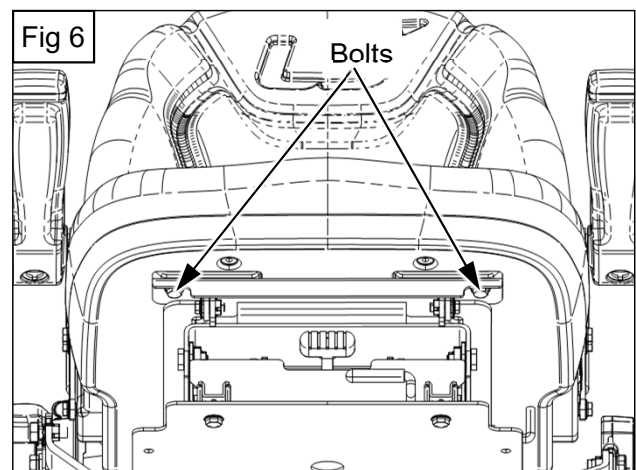


7. Arrange the main harness through the hole to be able to connect to the seat harness. And, install the reversible driver's seat to the tractor and tighten the four used bolts (M8x1.25) as shown in the [Fig 7].

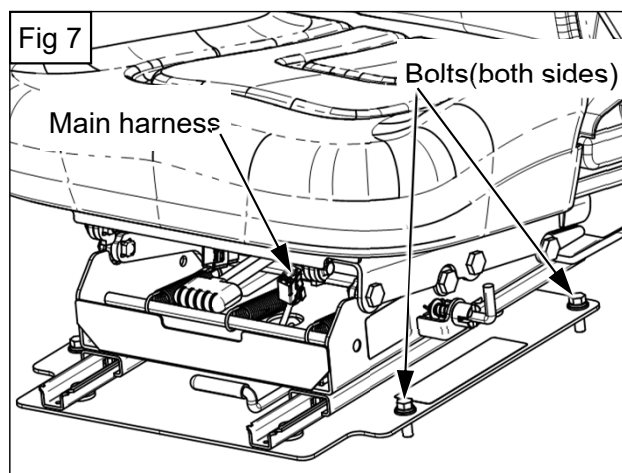



8. Lift up the cushion part and turn the latch to the locking position. Connect the seat harness, connection harness and main harness, tie up the harness slightly with cable tie to the marked position as shown in the [Fig 8].

NOTE : Do not fold or wind the harness when tying it up. It may cause a fault when reversing or tilting the seat. Make sure to check the margin of the harness from the tied position when reversing or tilting the seat.

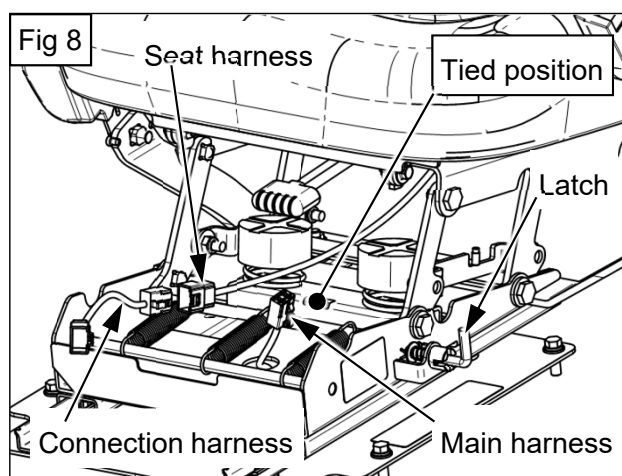


9. Release the latch and place the cushion part to the lower position. Check if three decals are properly attached to the marked positions, and read and understand the description carefully as shown in the [Fig 9].
10. When replacing the driver's seat from reversible type to standard type, comply with the above procedure in reverse.

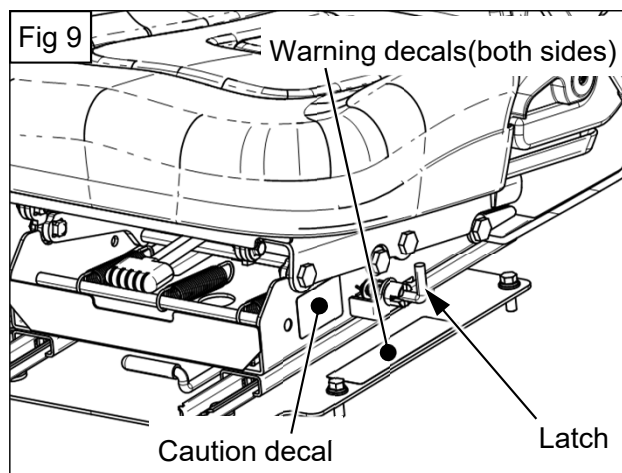

 warning	<p>Heavy parts !</p> <ul style="list-style-type: none"> ▶ The reversible seat is very heavy. Handle with care. Make sure that the reversible seat, when stored, cannot fall over. ▶ Failure to comply could result in death or serious injury.
---	---

(5) Seat belt

- Always wear the seat belt before operating the tractor and adjust the belt to fit your body.
 1. Insert the seat belt end into the buckle until a 'click' indicates it is properly engaged.
 2. To remove the seat belt from the buckle, press the red release button on the buckle.
- Check the seat belt regularly. If damaged or frayed, replace it with a new one.

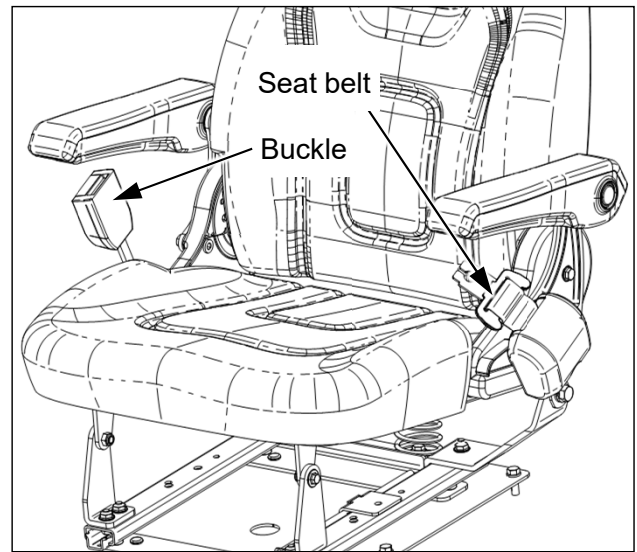


Warning



- ▶ If not wearing the seat belt, it may cause a serious injury in case of an accident.
 - While operating in a cabin or with a roll bar installed, you must wear the seat belt. After wearing the seat belt, adjust the seat belt to fit your body.
- ▶ If the roll-bar is folded down or removed, do not wear the seat belt.

(6) Exiting the tractor

- Whenever possible, use the left-hand side step for exiting. In an emergency state, you can use the right-hand side step for exiting.
- When exiting the tractor, use the step, steering wheel and grab handle on the left fender.
- Do not jump up/down for your safety. *Jumping on/off the tractor could cause an injury. Always face the tractor, use the grab handle, steering wheel and step, and get on/off slowly. Maintain a three-point contact to avoid falling: both hands on the grab handle and steering wheel and one foot on the step, or one hand on the grab handle and both feet on the step.*
- Stop the engine and remove the ignition key before leaving the tractor.

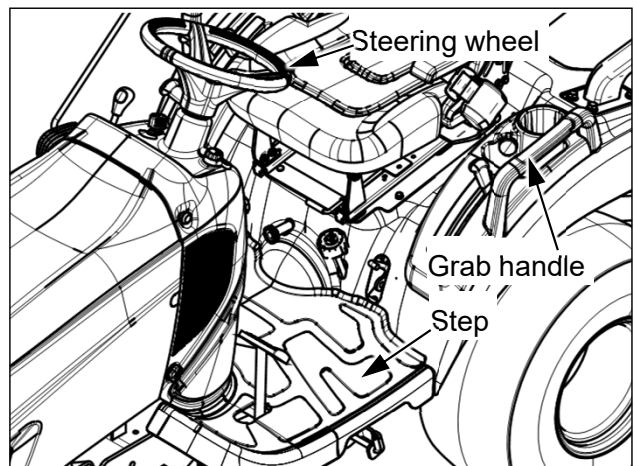


Caution

- ▶ Do not press the control pedals when entering/exiting the driver's seat.
- ▶ Do not grasp the gear levers when entering/exiting the driver's seat.

2-2. Safety Device


(1) Hood (Bonnet)

- Hood is a protection device to prevent an unintended access to the rotating parts around engine; cooling fan, fan belt and rotating shaft and pulley.
- Do not remove and modify the hood.

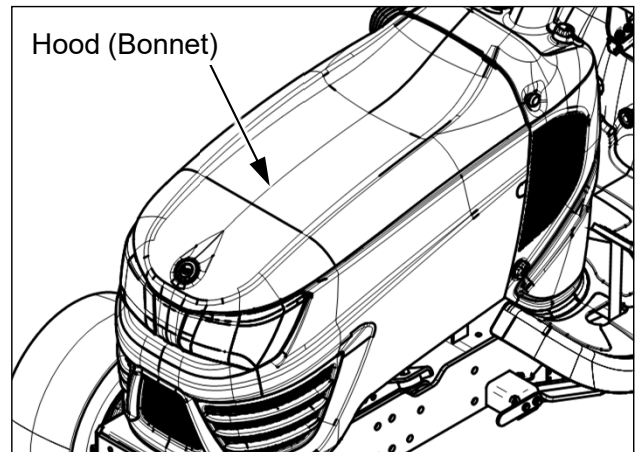


(2) Fender

- Fender is a protection device to prevent an unintended access to the rear tires and to prevent mud from irrupting to the driver.
- Do not remove and modify the fender.

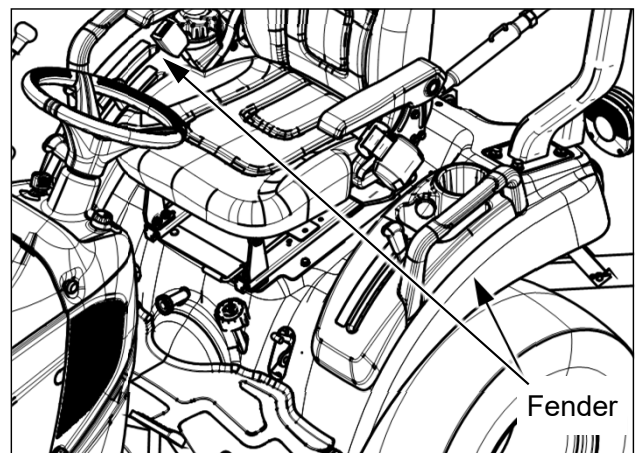

(3) PTO safety cover and protection cap

- The PTO safety cover is a protective device to prevent unintended access to the PTO shaft and to prevent accidents caused by the rotating drive shaft.
- Do not remove the PTO safety cover. If the PTO safety cover or protection cap is damaged or removed, replace it with a genuine part.
- Do not step on the PTO safety cover.
- After using the PTO shaft, apply grease and insert the PTO shaft protection cap.

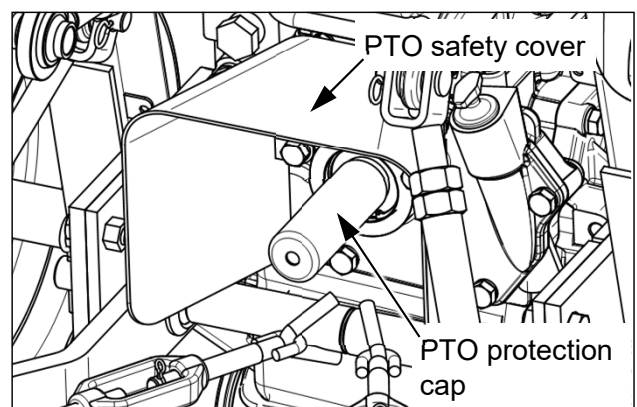


- If you contact the rotating shaft, it may cause a serious injury.
- DO NOT try to touch the rotating shafts.
 - DO NOT remove the safety covers.
 - Avoid loose clothes that can easily be rolled up in the rotating shaft.

(4) Roll-Over Protective Structure (ROPS)

① Rear foldable Roll-bar type


- The Roll-Over Protective Structure (ROPS) is integrated and certified structure for driver's safety. This structure will reduce the risk of serious injury or death when being over-turned.
- DO NOT remove, modify or repair the ROPS arbitrarily. The welding, bending, drilling, grinding, or cutting of any part of the ROPS, it can weaken the structure.
- If the ROPS is loosened or removed for any reason, make sure that all parts reinstalled correctly before operating the tractor.

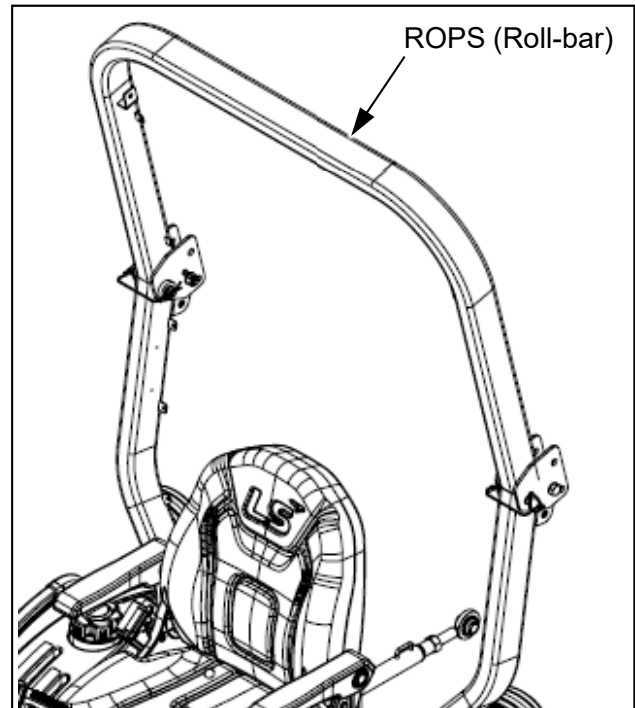

Warning

Roll-over hazard!



Failure to comply could result in death or serious injury.

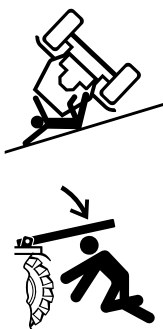

- ▶ Do not modify or remove the Roll-Over Protective Structure(ROPS) arbitrarily for safety. Unless the ROPS is applied correctly, it may cause a serious accident or death when being overturned.
- ▶ Be sure to stand up the Roll-Over Protective Structure(ROPS) and check the bolts, pins and nuts correctly kept in place.
- ▶ Always wear the seat belt when operating the vehicle with the ROPS in the upright position.
- ▶ Do not connect chains or ropes to the ROPS for pulling purposes, as the vehicle could tip over.
- ▶ When driving through door openings or under low overhead objects, make sure there is sufficient clearance for the ROPS.
- ▶ In case of folding/standing the roll-over protective structure(ROPS).
 - A folded ROPS does not provide roll-over protection. Do not operate the vehicle with the ROPS folded as a standard operating mode. Stand up the ROPS immediately as soon as the low clearance work is finished.
 - The ROPS is a heavy assembly. Be careful not to be injured by sudden folding, which might occur when folding or standing up the ROPS by its own weight. If possible, do cooperate with other people for the folding/standing.
 - Do not wear seatbelt when the ROPS is folded down.



① Folding method 1

- How to fold the roll-bar upper frame.
- 1. Loosen the bolts② ④ and nuts (both sides) loosely. (Do not unscrew them completely)
- 2. Remove the pins③ on the both sides and fold down the upper frame⑤ backward as shown in the right picture 2.
- Be careful of the possibility that your head, hand and shoulder might be hurt by sudden folding result from the weight of the roll-bar frame.
- 3. Set the holes of the frame ① and ⑤ in line, and put the pins③ into the hole to fix the roll-bar frame and apply the snap pin.
- 4. Fasten the bolts② ④ and nuts (both sides) tightly.
- When standing up the roll-bar upper frame, follow the same procedure reversely.

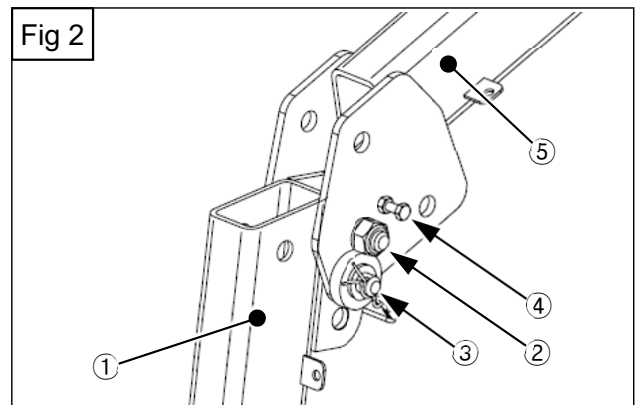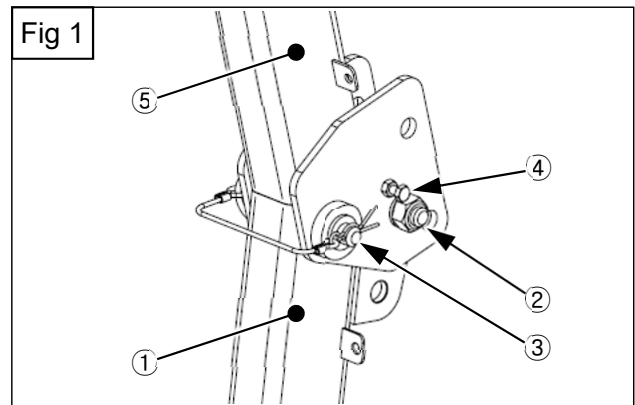

② Folding method 2

- How to fold the roll-bar upper frame fully.
- 1. Unfasten the bolts② ④ and nuts (both sides) completely.
- 2. Remove the pins③ on the both sides and fold down the upper frame⑤ backward as shown in the right picture 4.
- Be careful of the possibility that your head, hand and shoulder might be hurt by sudden folding result from the weight of the roll-bar frame.
- 3. Set the holes of the frame ① and ⑤ in line, and put the pins③ into the hole to fix the roll-bar frame and apply the snap pin.
- 4. Fasten the bolts② ④ and nuts (both sides) tightly.
- When standing up the roll-bar upper frame, follow the same procedure reversely.
- When the roll-bar upper⑤ is fully folded, check the upper limit of 3-point linkage.

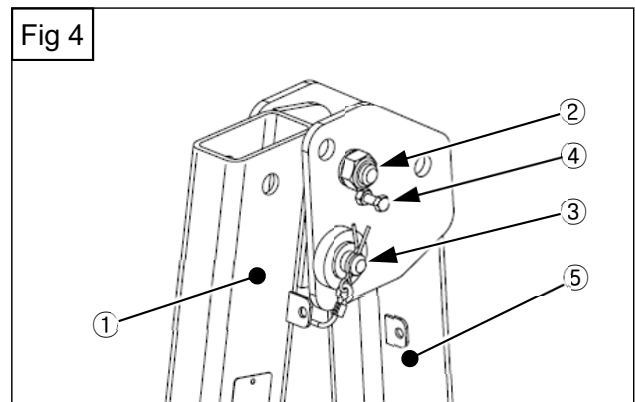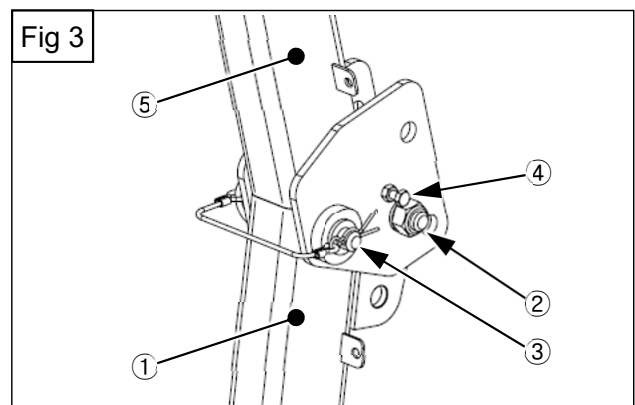


3. Instruments and Controls

3-1. Instrument panel and Front controls

Important to owner, read carefully


HST type

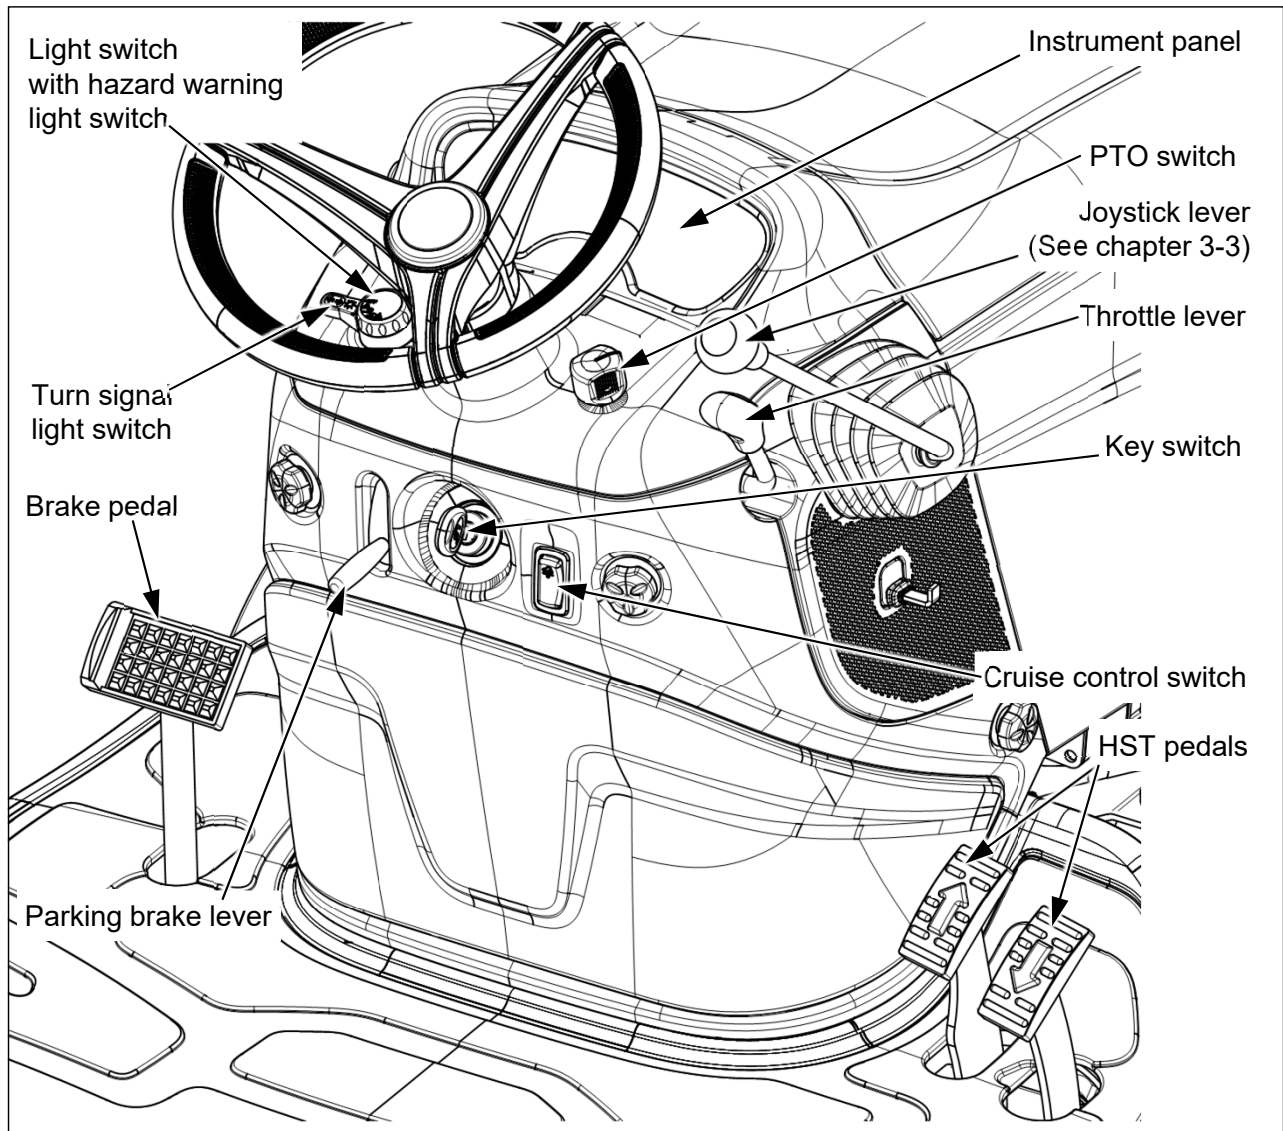

- Depending on the optional specifications, some figures may be different from your tractor.

(1) Instrument panel

Note: Some of indicators on the instrument panel may be not available depending on the model.

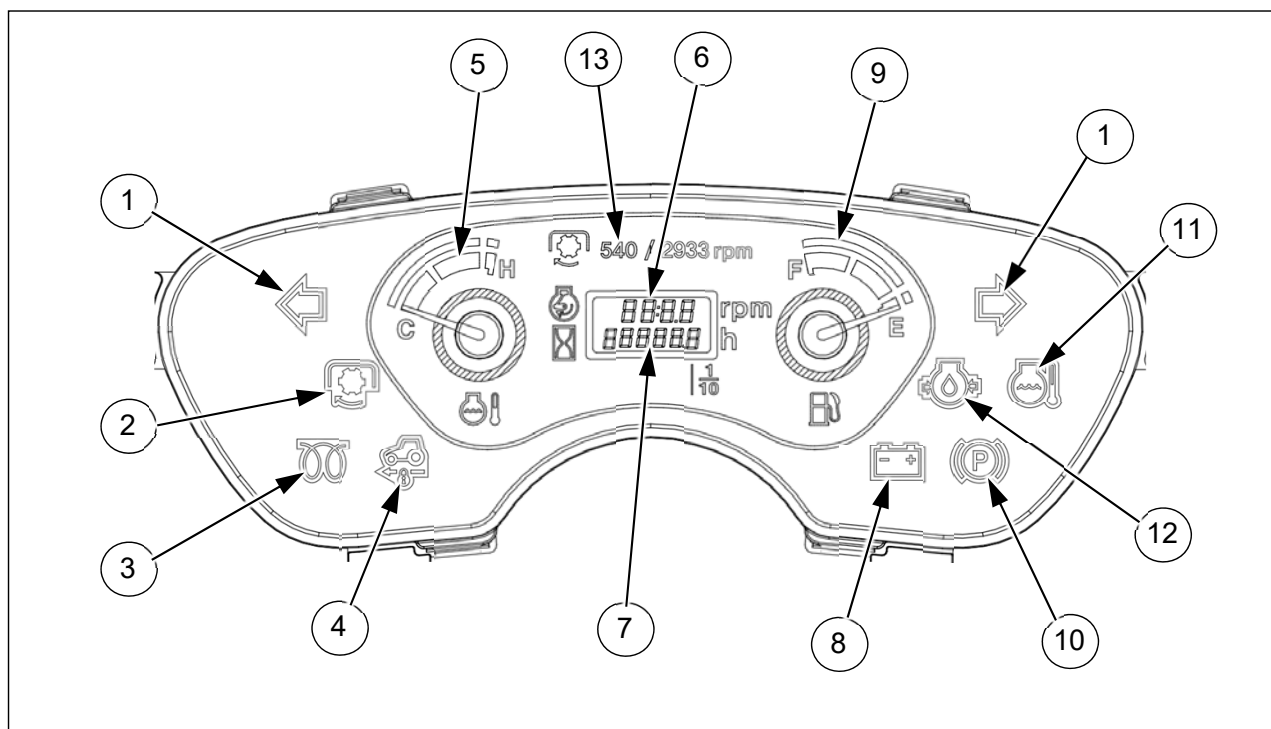


- | | |
|--|--|
| 1 Turn signal indicator (Left / Right) | 7 Hour meter |
| 2 PTO operation indicator | 8 Battery charging warning indicator |
| 3 Cold start aid indicator | 9 Fuel level gauge |
| 4 Cruise drive indicator | 10 Parking brake indicator |
| 5 Engine coolant temperature gauge | 11 High temperature warning indicator |
| 6 Tachometer | 12 Engine oil pressure warning indicator |
| | 13 PTO speed indicator |

1 Turn signal indicator (Left / Right)

- When turning on the turn signal lights with the combination light switch, the front/rear turn signal lights and this indicator will flash simultaneously. The key switch should be in the "ON" or "Start" position. Before turning the vehicle while driving on public roads, turn on the turn signal lights.
- When turning on the hazard warning light switch, all the turn signal lights will flash simultaneously regardless of the key switch position. Use the hazard warning light switch in an emergency situation according to your local traffic regulations.

2 PTO operation indicator

- When the key switch is in the “ON” position, and the PTO switch is activated, this indicator will be turned on.
- If the engine is running and the PTO select lever is engaged, the PTO shaft will rotate.

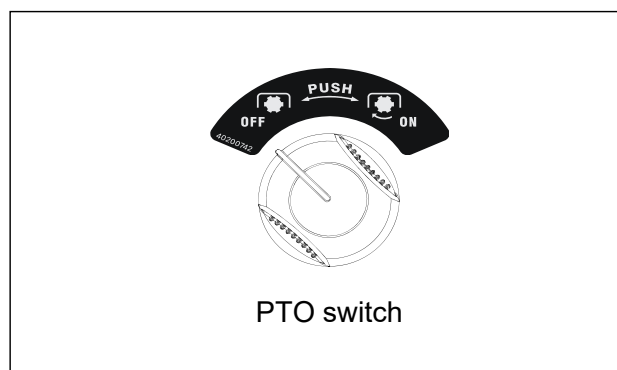


3 Cold start aid indicator

- When turning the start-key switch to the “Preheat” or “Start” position, this indicator is turned on and the glow plugs are heating the engine combustion chambers.

4 Cruise drive indicator

- This indicator will be turned on when the key switch is in the “ON” position and the cruise control switch is activated.

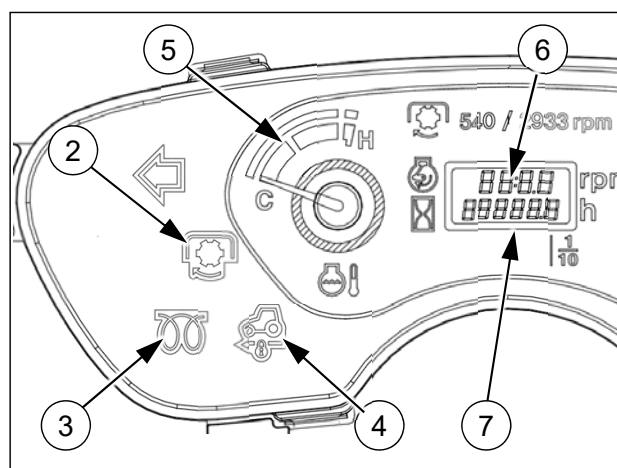

5 Engine coolant temperature gauge

- This gauge indicates the engine coolant temperature during operation. It activates when the operator turns the key switch to the ON position. The gauge will register cold with the key switch in the OFF position.
- The closer the needle approaches “H” mark, the higher the temperature of engine coolant is. If the needle moves to red portion of the gauge, this indicates an overheated condition. Stop the engine immediately and check the problem.
- Coolant is very hot. When checking the coolant, *comply with the instructions of the chapter 5-11-(1), “Replacement of Engine coolant” in this manual.*

6 Tachometer


- Tachometer shows running engine speed in Revolutions Per Minute (RPM). The display will return to zero when the engine is not running.

7 Hourmeter

- For example, the number 0005.3 in the hourmeter shows that the tractor has been used for 5.3 hours (5 hours and 18 minutes). It records the hours that your tractor has been operated regardless of the engine RPM. Use the hourmeter as a guide to determine hourly service and maintenance intervals.

8 Battery charging warning indicator

- This indicator will be turned on when turning the key switch to the “ON” position and it will be turned off after the engine starts.
- If this bulb becomes lit during operation, it indicates that the charging system is not operating normally. As the battery can be fully discharged under these conditions, contact your authorized local dealer for checking the electrical charging system.

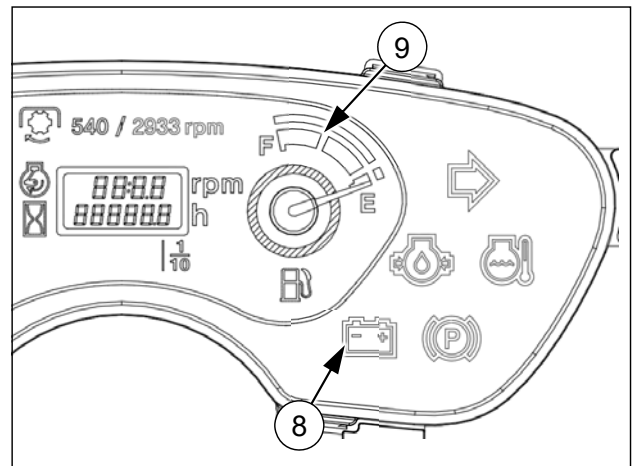

9 Fuel level gauge

- This gauge shows the fuel level in the fuel tank. If the needle indicates “E”, fill the fuel tank immediately with fuel.
- The gauge activates when the key switch is in the “ON” position. It will register “empty” with the key switch in the “OFF” position.
- The theoretical fuel level is the same as below.

Refer to the right figure.


“F” : 15.6~25.8 Liter (4.1~6.8 U.S.gals)

“3/4” : 12.1~13.0 Liter (3.2~3.4 U.S.gals)

“1/2” : 7.8~9.0 Liter (2.1~2.4 U.S.gals)


“1/4” : 4.9~5.5 Liter (1.3~1.5 U.S.gals)

“E” : 0.0~3.7 Liter (0.0~1.0 U.S.gals)

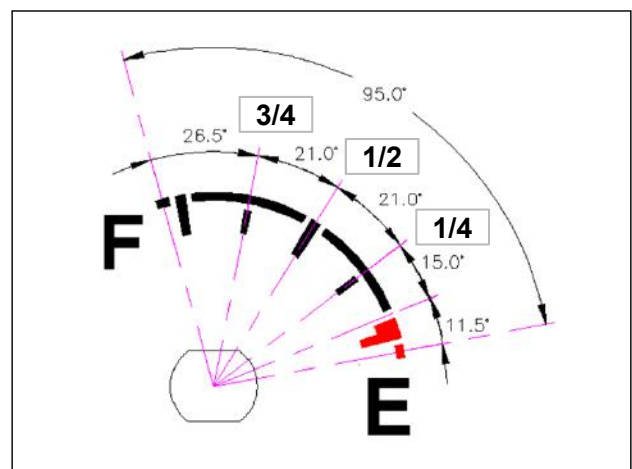

10 Parking brake indicator

- This indicator will be turned on when the key switch is in the “ON” position and the parking brake lever is engaged.
- Do not drive the vehicle with the parking brake applied.

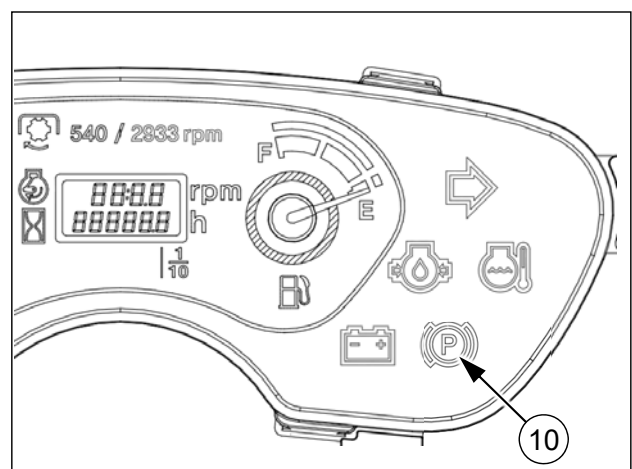

11 High temperature warning indicator


- If the engine coolant temperature goes over the designated level, this indicator will be turned on. At this time, stop the engine immediately and check the engine cooling system including engine coolant level and engine belt.
- If not cleared, contact your authorized local dealer for check.

12 Engine oil pressure warning indicator

- The light indicates oil pressure only and goes out when sufficient oil pressure is present at the oil sender.
- This indicator will be turned on when turning the key switch to the “ON” position and it will be turned off after starting engine.
- If the indicator is turned on during operation, stop the engine immediately and check the engine oil level. If the engine oil level is normal, contact your authorized local dealer for checking the engine lubrication system.


13 PTO speed indicator


- This text informs to obtain a rear PTO speed of 540 RPM the engine speed must be 2933 RPM.
- If the tachometer registers above the 2933 RPM, this indicates a dangerous over-speed condition. Reduce the engine speed immediately.

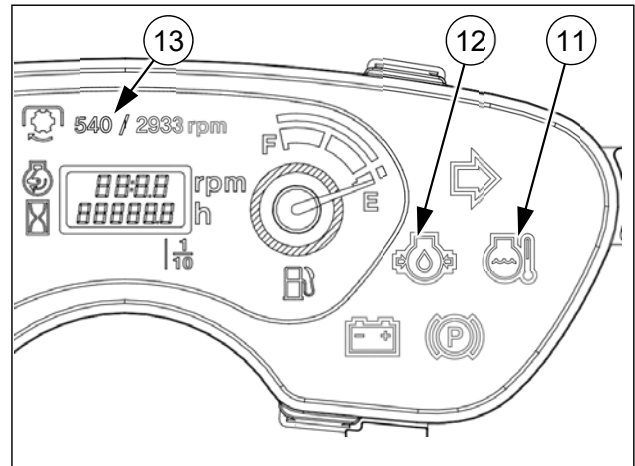

(2) Key switch




- **“Preheat”** – Preheat (Cold start aid)
- **“OFF”** – Engine stops, Power off
- **“ON”** – Power on
- **“Start”** – Engine start up
- As soon as the engine starts, turn the ignition key to the “ON” position immediately. Otherwise, it may cause damage to the starter motor.

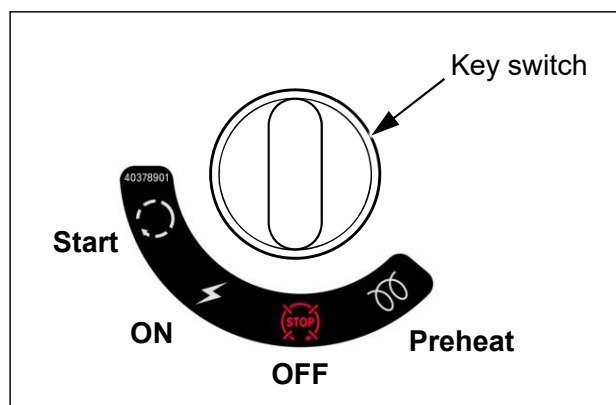

 Caution	<ul style="list-style-type: none">▶ To start the engine, the start-up safety switches should be engaged.<ul style="list-style-type: none">- sit in the driver's seat and put the PTO switch to the “OFF” position.- place the HST pedals in the neutral position, and then turn the key switch to the “Start” position. <i>See chapter 4-2-(1), “Engine Start” in this manual.</i>▶ If the tractor is not in use, the ignition key should be removed.
--	---

(3) Turn signal light switch

- This switch is used to give information to other vehicles when turning to the left or right.
- When the key switch is placed in the ON position,
 - If turning the switch clockwise, the right turn signal light② will flash.
 - If turning the switch counter-clockwise, the left turn signal light③ will flash.
- If the hazard warning lights are operated at the same time when the turn signal is activated, the hazard warning light for the opposite side of turning direction will stop flashing and illuminate continuously.

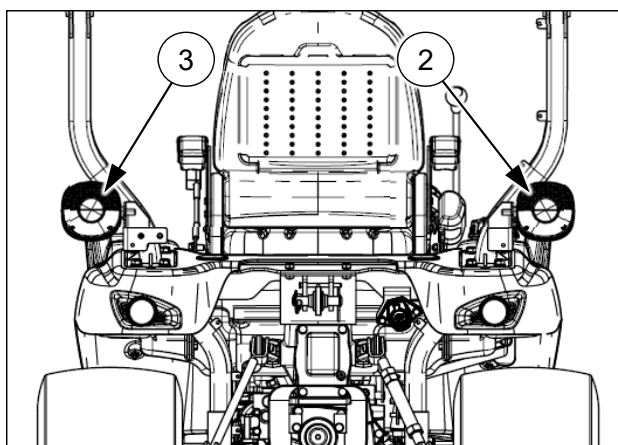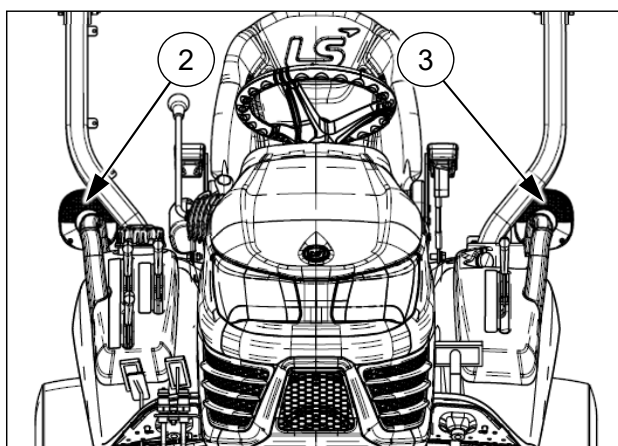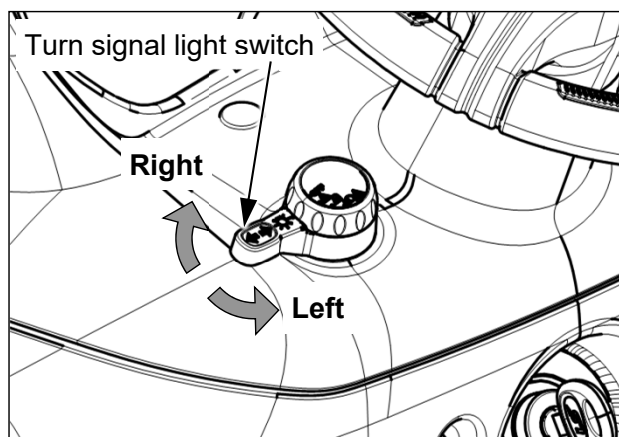

Caution

► When driving on public roads, operate the turn signal lights to give information to other vehicles before changing your direction.

(4) Light switch

- Combination light switch is used to turn on/off the following lights.


① Instrument panel lights, ② Side lights,


③ Tail lights, ④ Headlights,


⑤ Hazard warning lights.



- This switch has four functions as follows.


OFF – Instrument panel and all lights are turned off.



 – Instrument panel, sidelights and hazard warning lights are turned on.

 – Instrument panel, sidelights and headlights are turned on.
(use when working)

 – Instrument panel, sidelights, headlights and hazard warning lights are turned on. (use when driving)



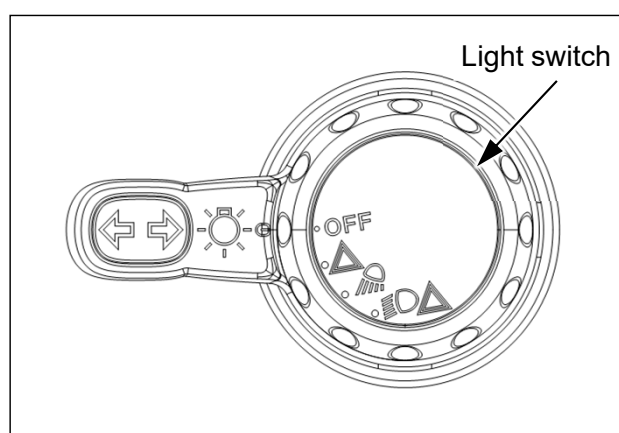
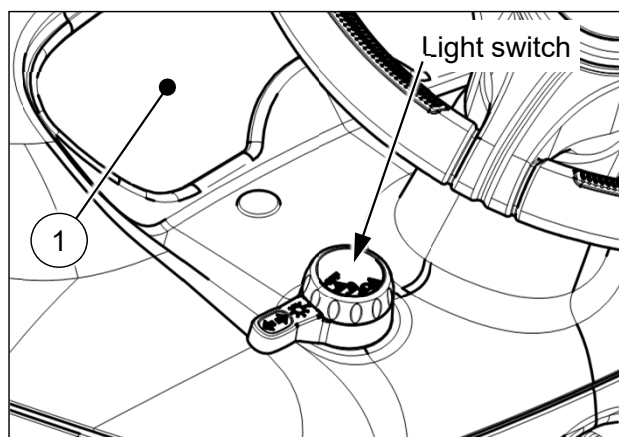



 Caution	<p>► When passing with other vehicles in the opposite lane at night, turn the headlights to the low beam not to distract oncoming cars.</p>
--	---

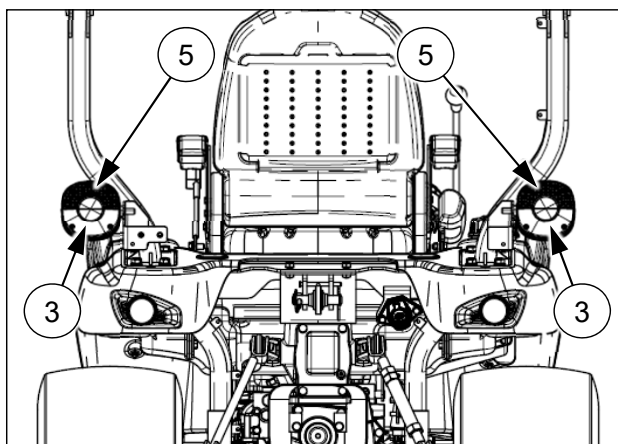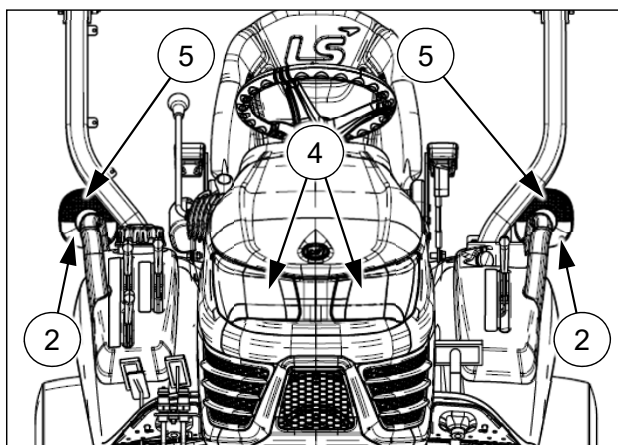

(5) Hazard warning light switch



- This is used to give information to other vehicles in case of an emergency situation.
- If turning the light switch ① one step clockwise, all the turn signal lights ②③ will flash.
- When turning the light switch to the “**Low beam**” position, the hazard warning lights are automatically turned on.
- If the hazard warning lights are operated at the same time when the turn signal is activated, the hazard warning light for the opposite side of turning direction will stop flashing and illuminate continuously.
- Use this hazard warning light switch in emergency situations according to your local traffic regulations.

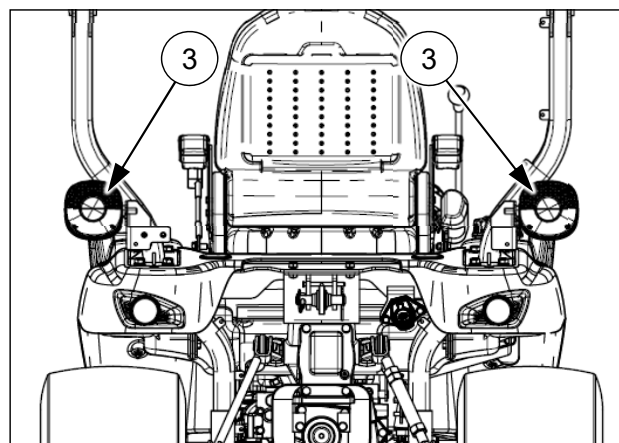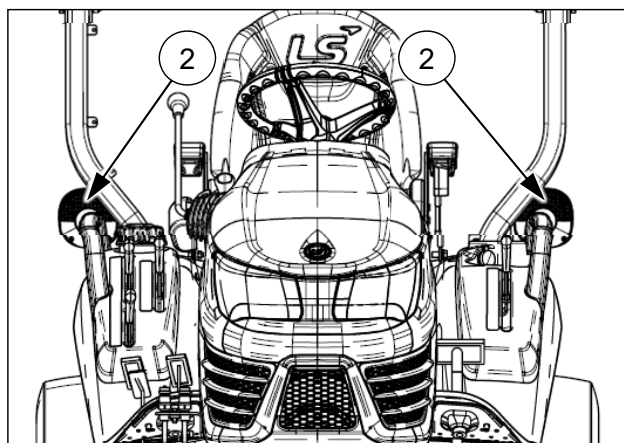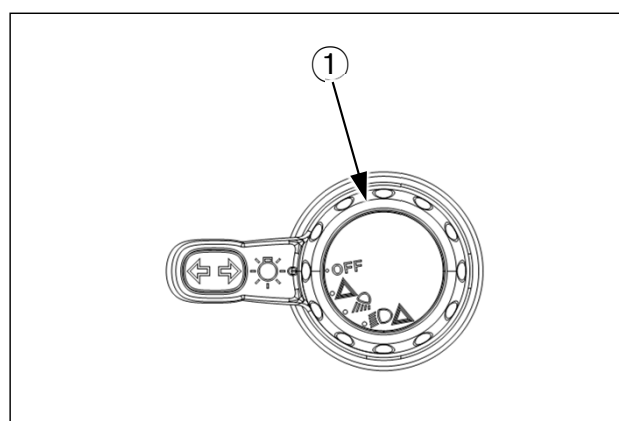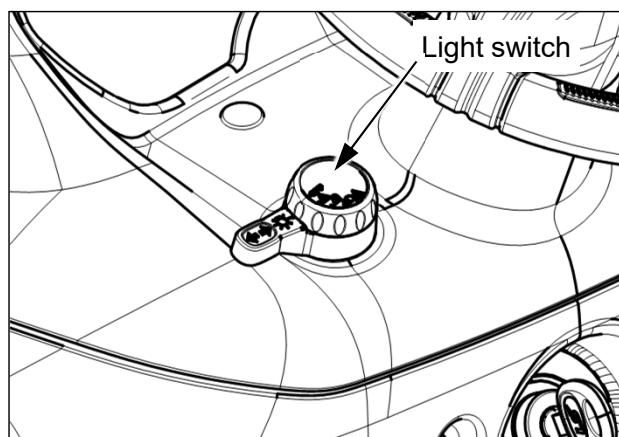


 Caution	<p>► If using the hazard warning lights for a long time while the engine is stopped, the battery can be discharged due to high electrical power consumption.</p>
<p>Notice</p>	<p>► The hazard warning lights can be turned on regardless of the key switch position.</p>

(6) PTO switch



- The engine can be started only when the PTO switch is placed in the OFF position for safety.
For the details of the engine start, see chapter 4-2-(1), “Engine start” in this manual.
- To operate the independent PTO, comply with the instructions as below.
 1. Check the safety conditions around the implement.
 2. Sit in the driver’s seat and start the engine.
 3. Place the PTO select lever to the desired position.
 4. Put the PTO switch to the ON position.
 5. To stop the PTO temporarily, push down the PTO switch to the OFF position.
 6. To change the PTO gear lever (if fitted), make sure to push down the PTO switch to the OFF position.

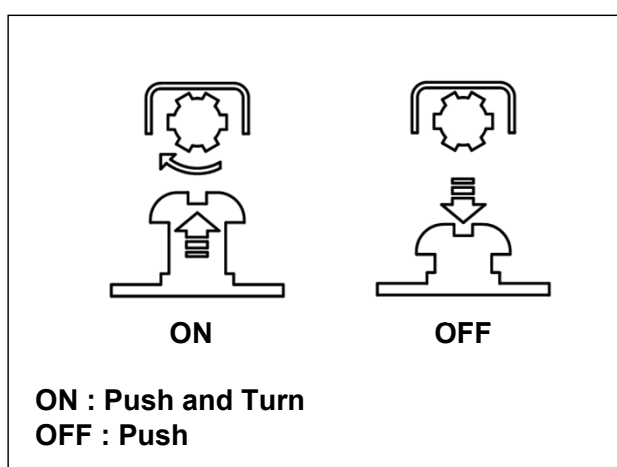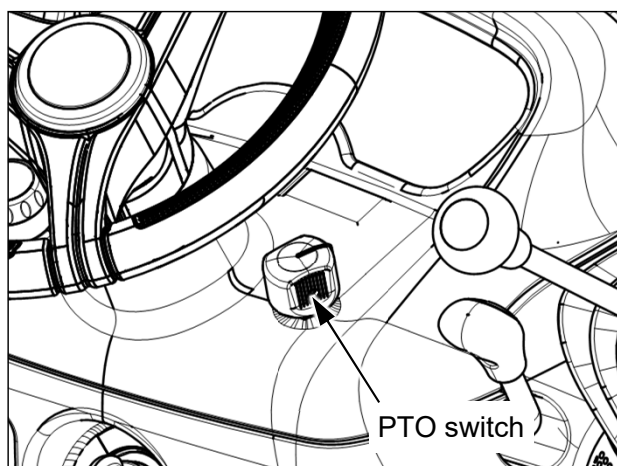

 Warning	<ul style="list-style-type: none"> ▶ To start the engine, the PTO switch must be placed to the “OFF” position. ▶ Before connecting or checking the implement, place the PTO switch to the “OFF” position. ▶ The PTO shaft rotates even if the tractor moves backward. Pay attention to the surroundings to prevent an accident. ▶ Do not engage the PTO while the engine is running at high speed. Sudden engagement can cause damage to the implement and PTO clutch. Engage the PTO at low idle rpm, and then raise the engine speed.
--	---

(7) Brake pedal


- The brake pedal of the HST model is installed in front of the left-hand side of the driver's station.
- To stop the tractor, release the HST pedals. As the HST pedals are returned to the neutral position, the tractor will be stopped.
- *This brake system is designed for parking brake or emergency stop only. Do not use this brake pedal for service brake.*
- If the 4WD is engaged, the braking force is applied on the front and rear wheels.
- The brake lights③ will illuminate when the brake pedal is depressed and the key switch is in the ON position.

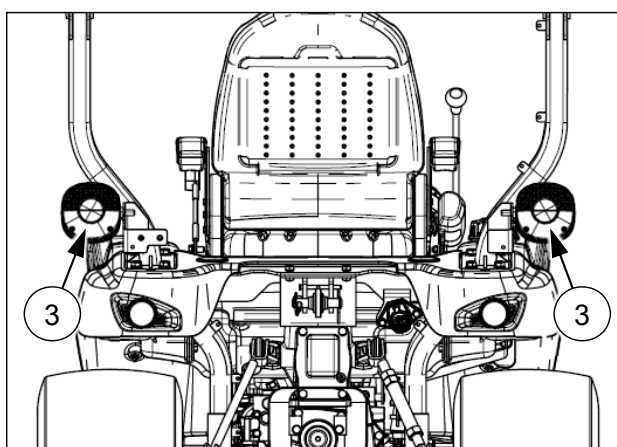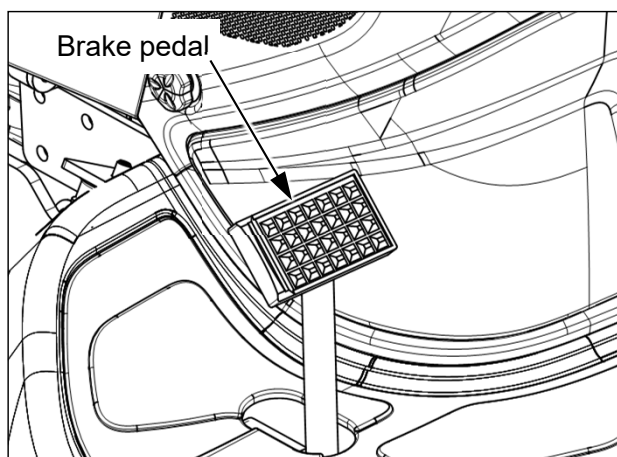

	Caution	<ul style="list-style-type: none">▶ For HST models, when releasing the HST pedals, the pedals will be return to the neutral position and the HST brake begins to work. But, you must press down this brake pedal additionally in an emergency situation.▶ DO NOT ride your foot on the brake pedal while driving to prevent the brake disks or other brake system components from being damaged.
--	---------	---

(8) Parking brake lever

- To apply the parking brake, press the brake pedal, and lift the parking brake lever upward to engage the parking brake ratchet.
- Release the brake pedal slowly with checking slippage of the tractor.
- To release the parking brake, press the brake pedal little bit harder, and then the parking brake lever will be released by spring.

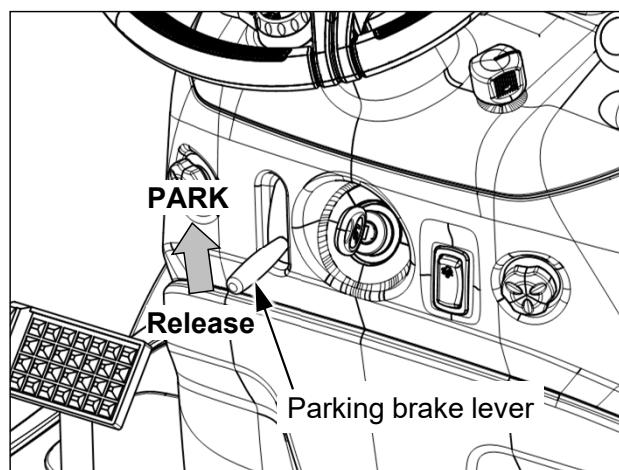


Caution

- DO NOT drive the tractor while the parking brake is engaged. It may cause damage to the brake or parking brake device.

(9) Throttle lever

- It is used to set or change the engine speed.
Low speed : Pull it backward
High speed : Push it forward.

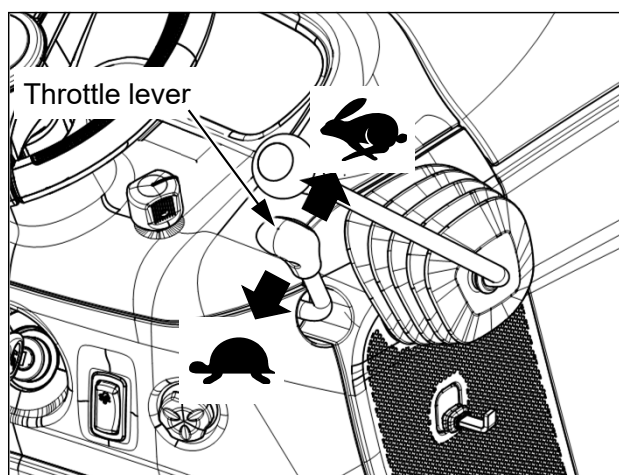




Notice

- When driving or working with the HST model, run the engine at 1500 rev/min or higher to maintain the hydraulic system stable. (HST models only)

(10) HST forward / reverse pedal

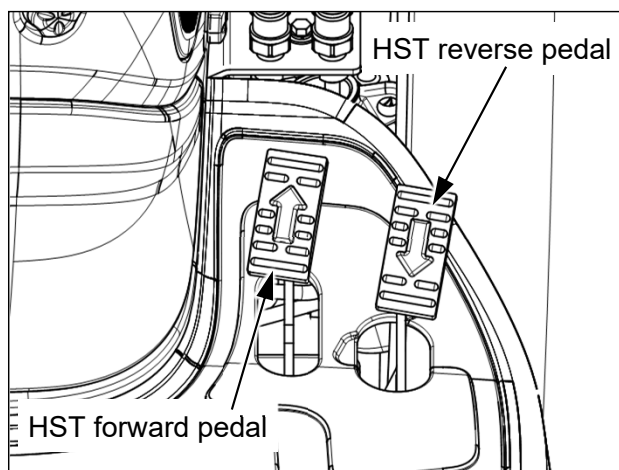
- Press down the HST forward pedal slowly in order to move the tractor forward. If releasing the HST pedal, it returns back to the neutral position and the tractor will be stopped.
- The deeper the pedal is pressed down, the faster the tractor will drive.
- The HST reverse pedal is worked in the same way as the HST forward pedal.
- To start the engine, these pedals must be placed in the neutral position. *For the details of the engine start, see chapter 4-2-(1), "Engine start" in this manual.*




 warning	<ul style="list-style-type: none"> ▶ When releasing the HST pedal while driving in high speed, the braking distance can be extended depending on the load conditions. At this time, press down the brake pedal(s) to stop the tractor. ▶ DO NOT operate the HST pedals hastily. It may cause a shock to you.
 Caution	<ul style="list-style-type: none"> ▶ To prevent serious damage to the HST unit, do not arbitrarily adjust the stopper bolts related to the HST pedal stroke and linkage system.

(11) Cruise control switch

- This switch is used to activate/release the cruise control drive for HST models.
- For the cruise drive, press down the symbol part of cruise control switch while driving forward. And then, the HST pedal will be fixed and the tractor will drive forward with constant speed.
- To stop the cruise drive ;
 - 1) Press down the brake pedal or
 - 2) Press the non-symbol part of the cruise control switch. And then, The HST pedal returns to the neutral position and the cruise drive will be disengaged.

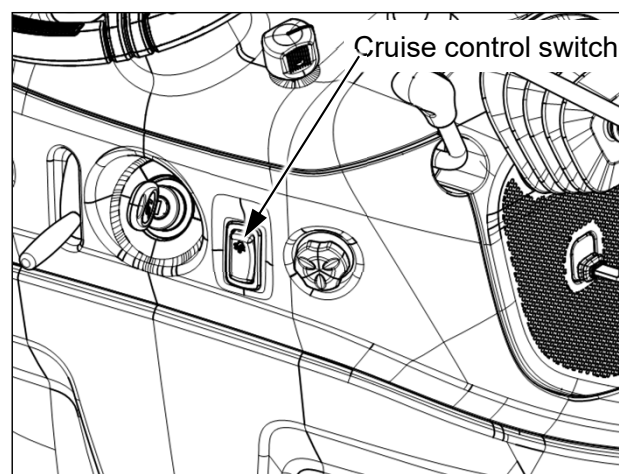


 warning	<ul style="list-style-type: none"> ▶ During the cruise control drive, do not press down the HST reverse pedal to exit the cruise drive or to reverse the tractor. After stopping the cruise control drive as described, press the HST reverse pedal.
---	---

3-2. Left / Right-hand side Levers and Pedals


Important to owner, read carefully.

HST type

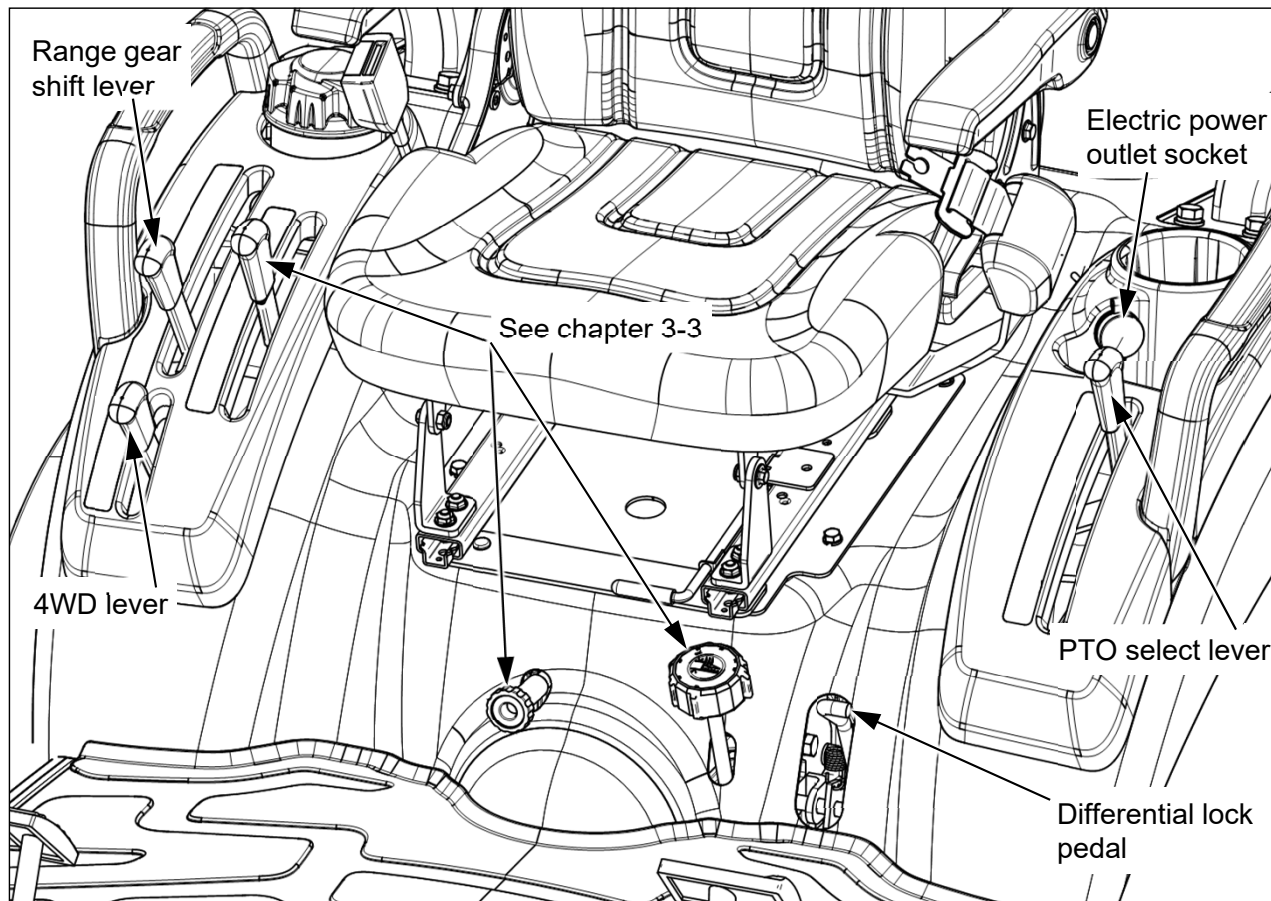

(1) Range gear shift lever

- Low speed, neutral, and high speed positions are available.
- Before operating the range gear shift lever, release the HST pedal to return to the neutral position, press down the brake pedal, and stop the tractor completely.

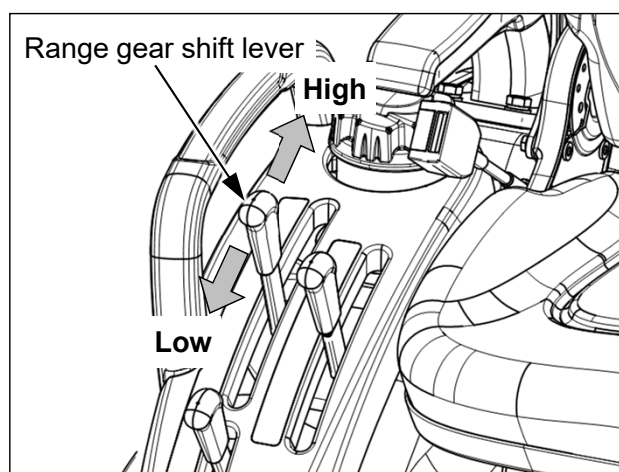


Caution

► Before operating the range gear shift lever, you must stop the tractor completely.

(2) 4WD lever

- This lever is used to engage/disengage the four wheel drive (4WD).
- Before operating the 4WD lever, press down the brake pedal and stop the tractor completely.
- Push the 4WD lever forward to engage the 4WD and pull the lever backward to disengage the 4WD.
- The four wheel drive (4WD) is effective for the followings.
 - When traction is needed in plow ground.
 - When working on slippery ground.
 - When working with tiller on hard ground.
 - When crossing a ridge

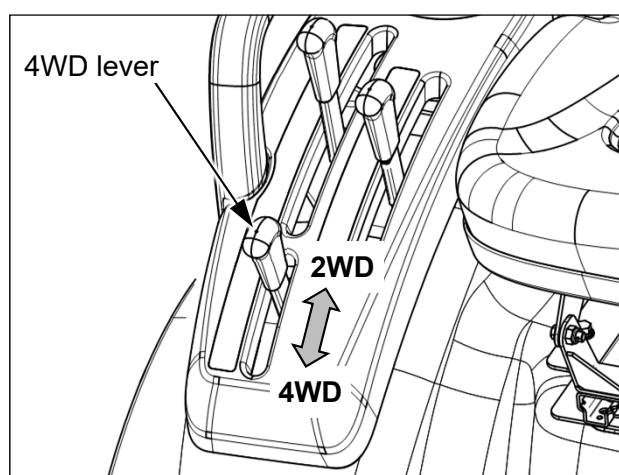


Caution

- When driving on public roads, disengage the 4WD. If not, it may cause damage to the tires and transmission drive lines and a serious accident. After working in the field, disengage the 4WD lever before coming out from the field.
- If you drive the tractor at high speed while the 4WD is engaged, sharp steering may cause a serious accident.

(3) Work light (optional)

- The rear work light has a switch on its back. To turn on/off the rear work light, operate the switch as shown in the right figure.

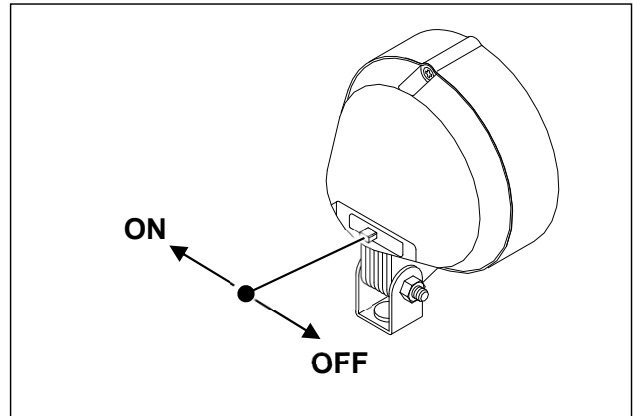


Caution

- ▶ When driving on the road at night, do not leave the rear work light on. It may cause a distraction to the drivers of the following cars.

(4) PTO select lever

- It is used to select the Middle PTO and/or REAR PTO. If placing the lever as below;
REAR : Rear PTO will only rotate.
MID+REAR : Middle PTO and rear PTO shaft will rotate together.
MID : Middle PTO shaft will only rotate.
- For further information about the PTO shaft, see chapter 4-5-(2) in this manual.
- Before starting engine, place the PTO select lever on the "**REAR**" position. If the lever is placed on the other positions, you can not start the engine, due to the safety interlock system.

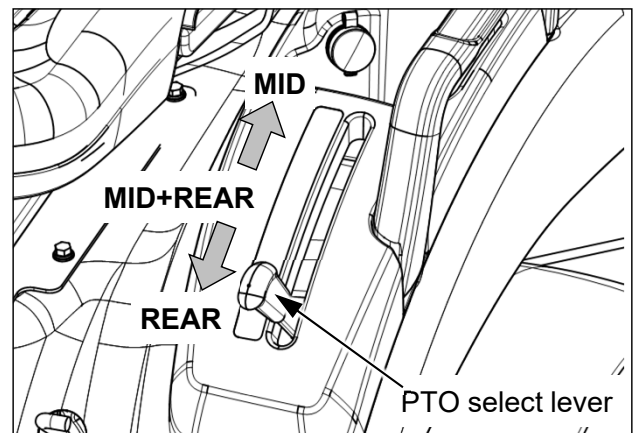


Caution

- ▶ Before shifting the PTO select lever, you should place the PTO switch in the **OFF** position and the PTO shaft has been stopped completely.
- ▶ If the PTO select lever is NOT engaged smoothly, shift the lever again after lifting up the implement from the ground to align the drive shaft.

(5) Electrical power outlet socket


- This is used to withdraw the electric power for charging of the cigarette lighter jack or cellular phone.
- In case of using a cigarette lighter jack(optional), push the cigarette lighter jack into the socket to heat the coil. If the heating process is finished, the jack is retracted automatically, and it can be used as a substitute for a lighter.
- In case of using it as a power supply(12V), use a electrical equipment less than 10A of current flow.

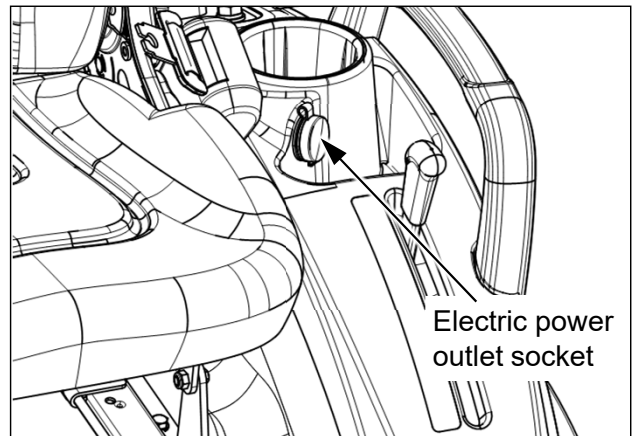

- ▶ When using a cigarette lighter jack, cares must be taken not to touch the heating coil. The heated coil is very hot and may cause the danger of a burn.

(6) Differential lock pedal

- If the tractor cannot move forward as one side rear wheel is slipping, release the HST pedal and press down the differential lock pedal.
- The differential lock is effective for working on a slippery ground.
- If the differential lock is engaged, both rear wheels will rotate at the same speed and you can escape the slippery ground. However, It can interfere the steering operation and you cannot turn smoothly.
- Take your foot off the pedal to release the differential lock. If the differential traction force is reduced to some extent, the differential lock is released automatically.
- If the differential lock does not disengaged automatically, i.e., the turning radius is larger than normal operation and the turning is not smooth, turn the steering wheel left and right after stopping the tractor .

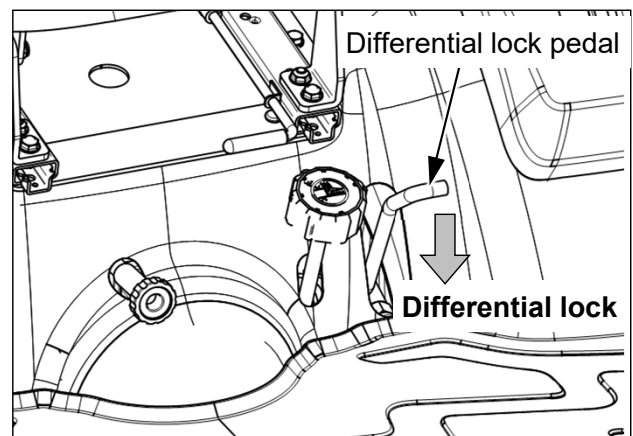



- ▶ Do not turn the tractor while the differential lock is engaged.
- ▶ Do not use the differential lock while driving on public roads.
- ▶ Stop or drive slow the tractor before engaging the differential lock.

3-3. Hydraulic system

(1) Safety precautions

- Hydraulic oil leaks under high pressure can penetrate skin and cause infection or other injury. To prevent personal injury, comply with the instructions as below.
 - Relieve all pressure before disconnecting hydraulic lines.
 - Before applying pressure, make sure all connections are tight and components are in good condition.
 - Never use your hand to check for suspected leaks under pressure.
 - If injured by leaking fluid, get medical attention immediately.
- The hydraulic hoses and fittings on your tractor meet engineering specifications for the particular function. When replacing damaged parts, use only manufacture authorized service parts.
- Care in hydraulic hose installation is a must:
 - Make sure pressure is relieved before starting installation procedure.
 - DO NOT kink or twist a hose, failure may occur. Properly route the hose.
 - Have a certified hydraulic technician install the hose.
 - Remove air from the hydraulic system after installing any hydraulic component.
- Periodically check hydraulic system for leaks or damaged parts - kinked, crushed, flattened, hard blistered, heat cracked, charred, twisted, soft or loose covered hoses and fittings.
- DO NOT pull or apply external forces to the hose. The hose may fail and cause injury.
- Keep all persons away from the working area. If a hose fails, mechanisms controlled by fluid power can become hazardous. Lifted mechanisms can fall to the ground, steering system may fail, etc.
- Stay clear of a pressurized hose assembly that has blown apart. Hose fittings can be thrown off at high speed and a loose hose can whip around with great force.
- Hydraulic oil can reach high temperatures. *Wait for all components to cool before you perform any maintenance or adjustment operation. Do not handle any service fluid (engine coolant, engine oil, hydraulic oil, etc.) at temperatures that exceed 50 °C (122 °F). Allow fluids to cool.*
- Vibration can reduce hose service life. Make sure all retaining clamps and/or devices are secured.
- Environmental conditions can cause hose and fittings to deteriorate. *You must periodically inspect the hydraulic hoses. See the Maintenance chapter for general inspection precautions. The hoses do not require any operator-performed maintenance. Always see your authorized local dealer for hydraulic hose repair or replacement.* Replace worn or damaged hoses and fittings.
- Before checking or repairing the hydraulic system, make sure the engine is stopped, and all the transmission gears are in neutral, and lower the implements to the ground.


 Warning 	<ul style="list-style-type: none">▶ Before removing hydraulic pipes or hoses and other parts, make sure to check that hydraulic pressure is relieved completely. The leaks of pressurized oil can cause a fatal physical injury.▶ Use proper protection equipment, before servicing the hydraulic system.▶ Before connecting or disconnecting the hydraulic quick couplers, lower the implements to the ground, and check if the hydraulic pressure is relieved.
---	--

(2) Steering system

- The hydraulic steering system controlled by fluid power provides you more convenience to operate the steering wheel.
- Notices when using the steering system.
 1. If there is too much of a load in front-end loader bucket, it could be difficult to operate the steering wheel. In this case, it is necessary to reduce the size of the load.
 2. Do not operate the tractor unnecessarily in a state of fully steered front wheels for a long time. As unnecessary hydraulic force is applied to the steering linkage, it may cause damage to the steering system and excessive increase of the hydraulic oil temperature which may cause reduction of the product life or a failure of the hydraulic and steering system. Especially, DO NOT operate the steering wheel excessively when a front wheel is mired in a ditch. The rim and disk of the wheel could be damaged or deformed.
 3. If an abnormal noise sounds off when operating the steering wheel, this may mean that there is some air in the steering components or lines. In this case, turn the steering wheel to the left and right direction fully about 2~3 times. It will exhaust the air and the abnormal noise will disappear. If it's not cleared, contact your authorized local dealer for check.
 4. When starting the engine in cold weather, an abnormal noise may occur. In this case, warm up the tractor before using in order to reduce the oil viscosity.


Notice	<ul style="list-style-type: none">▶ When the engine is stopped, the steering wheel becomes hard to turn. But this does not mean a failure. It can be only used in an emergency situation.▶ When releasing the steering wheel after steering operation while driving, the steering wheel does not return to neutral position automatically.
--------	---

(3) Hydraulic lift control (Mechanical Hydraulic Lift, MHL)

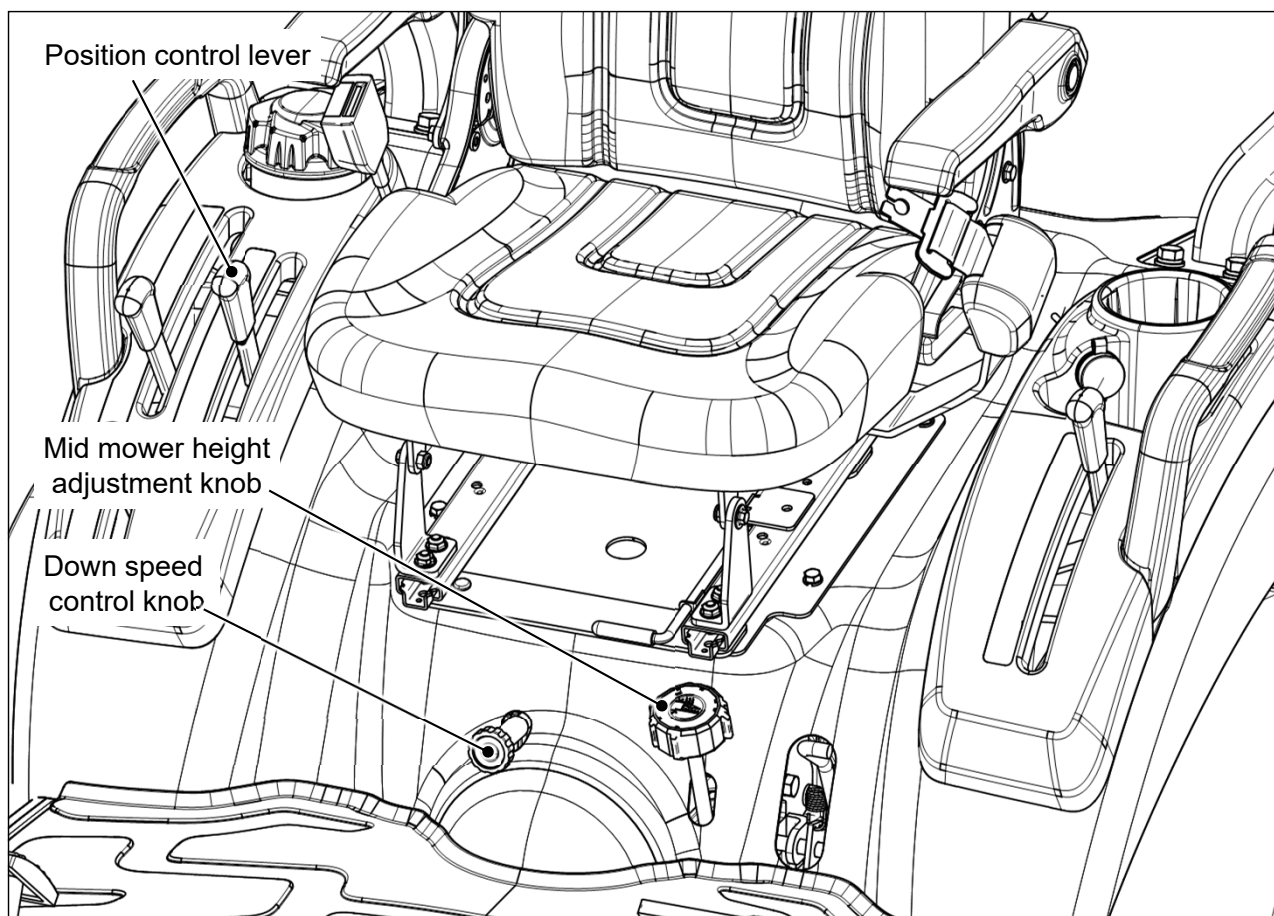

① Position control

- The 3-point linkage can go up/down by using the position control lever as below.
1. Push the position control lever forward, the 3-point linkage goes down.
 2. Pull the position control lever backward, the 3-point linkage goes up. The raising speed is depend on the engine speed. If it does not raised at the low rpm, increase the engine speed.
 3. If releasing the position control lever, the lever goes to the neutral position automatically and the 3-point linkage will be stopped on that position.

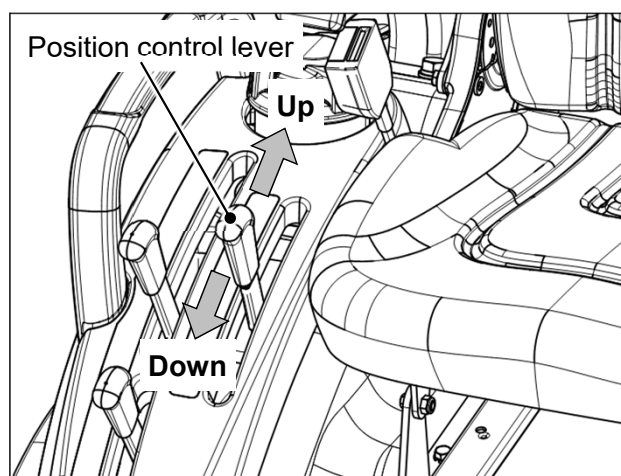

Danger

Crushing hazard!


- Make sure area is clear of all persons before lowering equipment. Failure to comply will result in death or serious injury.

② Float operation

- Move the position control lever fully forward. The three-point linkage will now be free to “float” or follow the ground contour. This mode is useful for scraper blades, etc.

③ Down speed control knob

- It is used to adjust the down speed of the rear 3-point linkage. Turn the down-speed control knob clockwise to decrease the down speed of the implement and turn the knob counter-clockwise to increase the down speed.
- If turning the knob clockwise fully, the implement will be fixed and even if lowering down the position control lever, the implement does not let down.
 - Tiller: Slow in down speed
 - Plough: Fast in down speed
- When working in hard ground, slow down the down speed to avoid bounding of the implement.

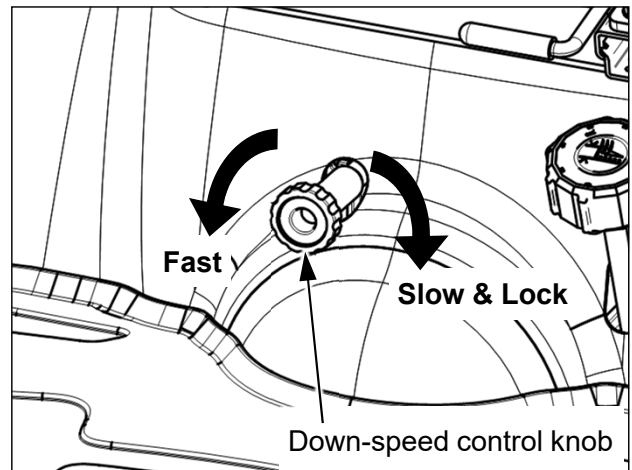


Warning

- ▶ When driving on the road, replacing tiller blades or removing grass around the tiller blades, turn the down-speed control knob clockwise slightly to lock.
- ▶ The knob rotates about two revolutions. Do not over-tighten the knob. It may cause damage to the control valve and connection parts.

(4) Mid mower height adjustment knob

- This is used to adjust the height of the mid mower while working.
- At first, lift up the 3-point linkage and mid mower.
- If rotating the knob counter-clockwise, the height of the mid mower will be lowered, and otherwise the height will be lifted.
- Lower down the 3-point linkage and mid mower.

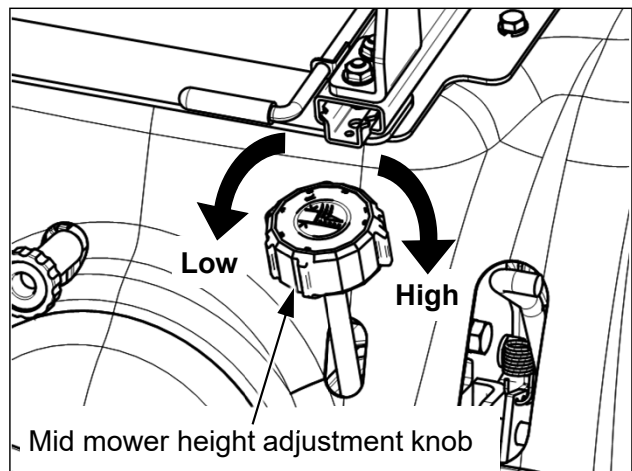


Notice

- ▶ Do not try to turn the mid mower height adjustment knob clockwise without lifting the position control lever.

(5) Remote control lever and Quick coupler (optional)

- This is used to operate the hydraulic cylinder and/or motor of the implement attached to the standard models by the hydraulic oil pressure. ***It is not available for backhoe attached models.***
- If you **lift up** the remote control lever, the hydraulic pressure works **to the upper coupler**, and the **lower coupler** is connected **to the drain line**.
- When releasing the lever, the remote control valve is returned to the neutral position.
- After connecting and preliminary operating the hydraulic equipment, check again the transmission oil level of the tractor.

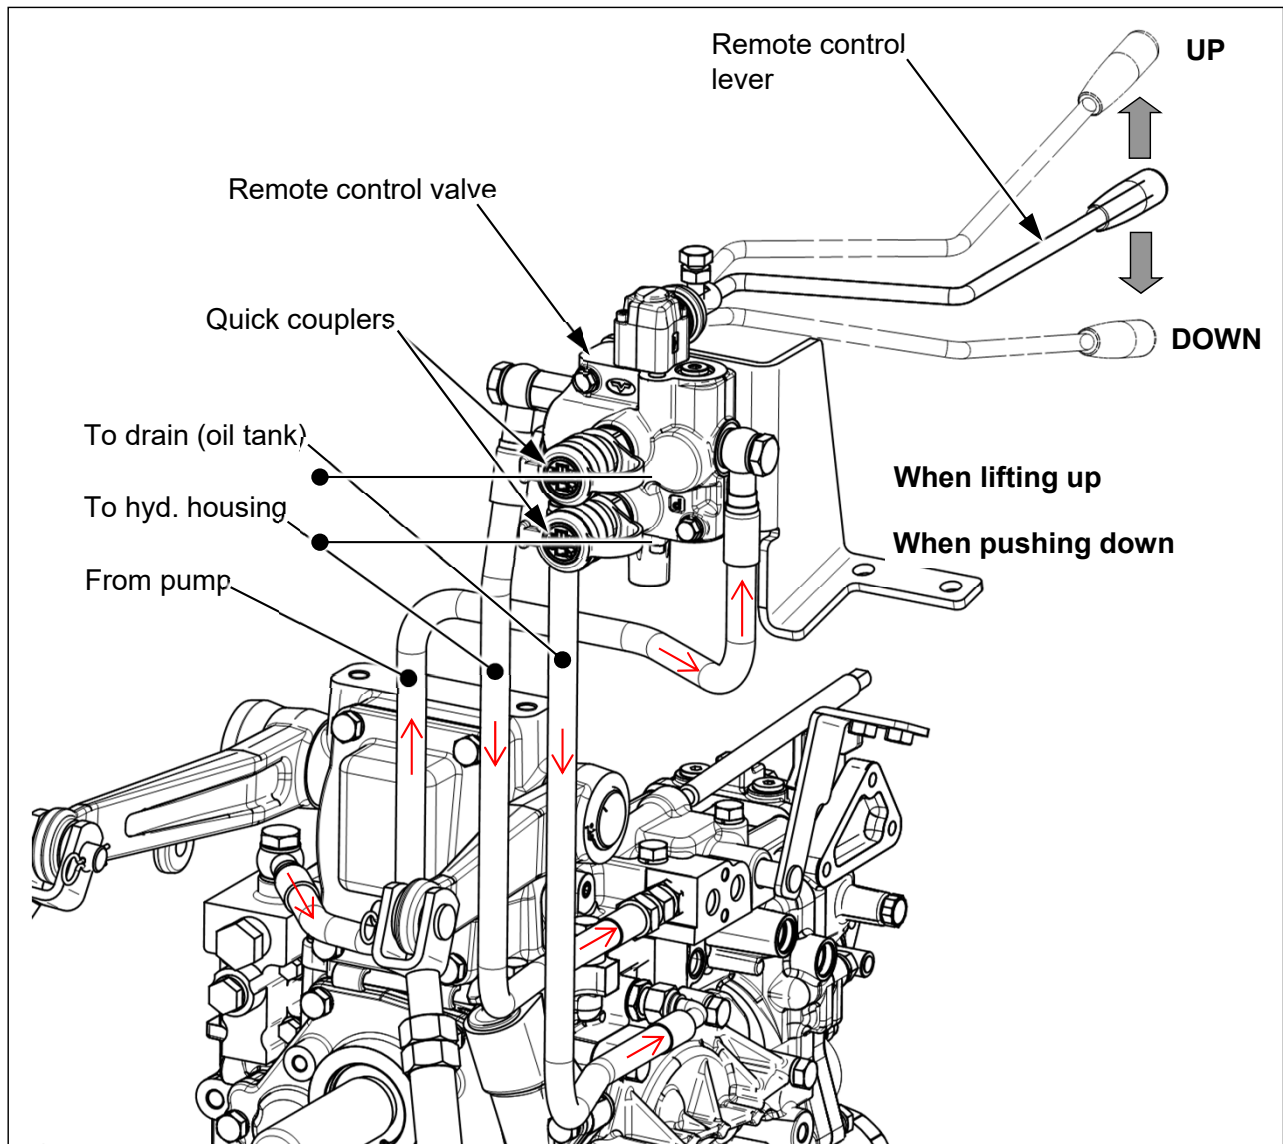

Warning



- ▶ Before removing the hydraulic pipes, hoses or other parts, make sure to check that the hydraulic pressure in the hydraulic lines is relieved completely. The leaks of pressurized oil can cause a fatal physical injury.
- ▶ Use proper personal protection equipment before servicing the hydraulic system.
- ▶ Before connecting or disconnecting the hydraulic quick coupler, lower the implements to the ground, and check if the hydraulic pressure is relieved completely.





Caution

- ▶ When connecting a high volumetric capacity cylinder to the remote control system, lower the implement to the ground, and check if the transmission oil level is marked between “Min” and “Max” scale on the oil gauge. If necessary, add new oil.


(6) Joystick lever

- The multi-functional joystick lever helps you operate the front-end loader comfortably.
- The joystick lever can be operated basically in four directions as shown in the right figure.
- If you move the joystick lever diagonally, the boom and bucket cylinders will be operated at the same time. In this case, the cylinder with a relatively light load may be moved first.
- If you want to float the bucket along the ground, lower the front-end loader and push forward the joystick lever to the float position. After finishing work, pull the lever and place it in the neutral position.
- The locking lever shown in the right figure is used to lock the joystick lever when you are not using the joystick lever.
 - Pull away from the joystick : Unlock
 - Push towards the joystick : Lock
- For further information, see chapter 4-5-(7) "Using Front-end loader" in this manual.

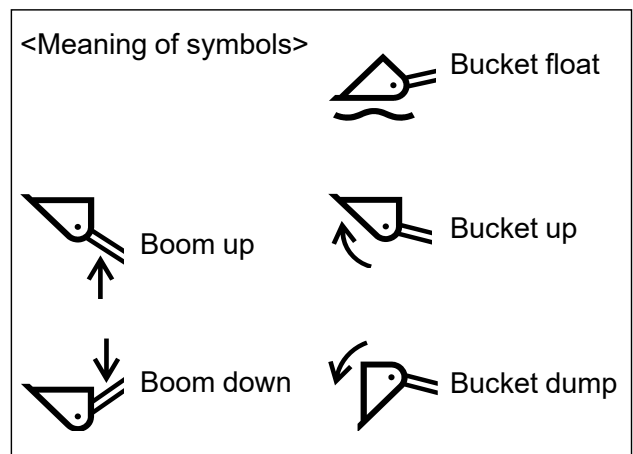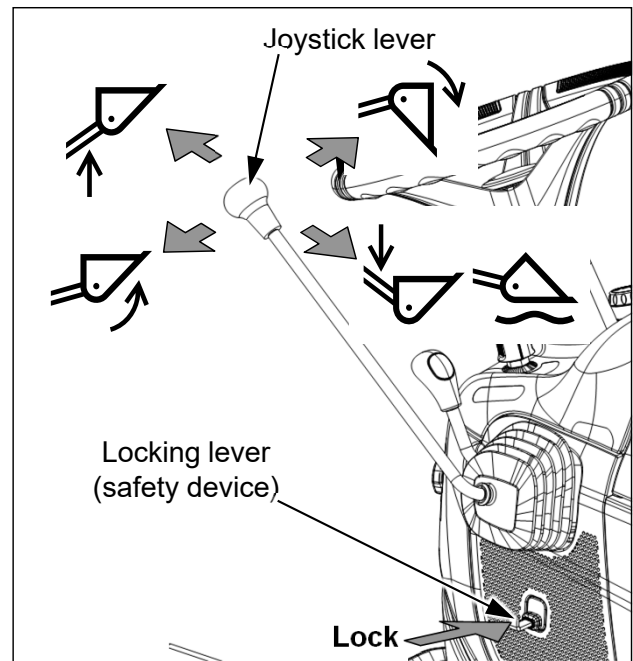

Warning

► To prevent an accident, secure the joystick lever with the locking lever when the joystick lever is not in use.

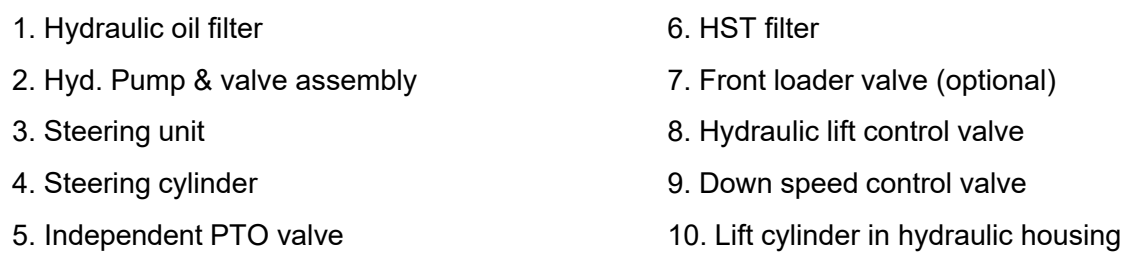HST type


4. Operation and Work

4-1. How to handle new tractor

(1) Check points


※ For new tractor, the followings must be checked once again even though there was sufficient quality management, inspection, regulating of each part in the factory.

- Appearance check
 - Is there any damage while transporting?
- Engine cooling system check
 - Is there anti-freeze solution in the radiator? And any leakage?
- Fuel system check
 - Is there any leakage of fuel in the fuel system?
- Oil level check
 - Is there optimal oil amount in each part ?
- Electric system check
 - Is there any cut-off or any other problem in the wiring?
 - Is there any problem to operate the instruments?
 - Is the state of battery charging sufficient?

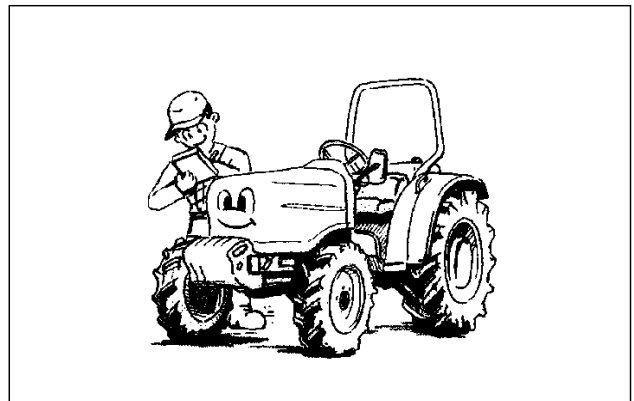

(2) Notices in handling new tractor (Engine brake-in procedure)

- To get the best performance, comply with the followings.
 - DO NOT start or stop the tractor suddenly.
 - DO NOT operate heavy loaded work and do not increase the engine rpm to high speed suddenly.
 - Despite warm ambient temperature, warm up the engine for about 5 minutes at low idle rpm.
 - Use the lower gear ratios when pulling heavy loads and avoid continuous operation at constant engine speeds. You will save fuel and minimize engine wear by selecting the correct gear ratio for a particular operation
 - Avoid prolonged operation at either high or low engine speeds without a load on the engine.
 - Check the instruments frequently and keep the radiator and oil reservoirs filled to recommended levels. Daily checks include the engine oil level, radiator coolant, and air cleaner.
 - After using the first 50 hours, be sure to perform the maintenance items listed in the maintenance schedule. *Refer to the chapter 5-4, "First 50 hour check" in this manual.* If possible, contact your authorized local dealer for "First 50 hour check".

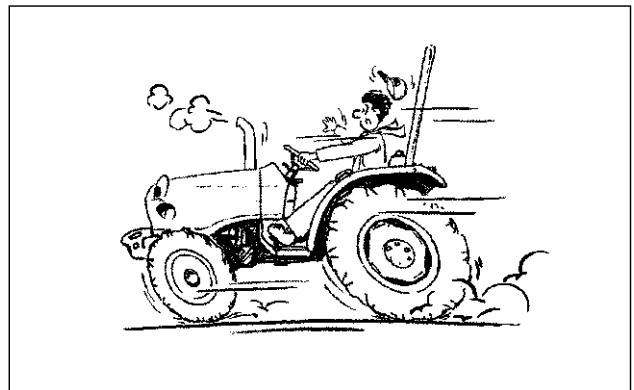


4-2. Engine Start and Stop



Caution

- ▶ Check each part before starting engine.
- ▶ Check if there are any other people around before starting.
- ▶ Place all the transmission gear levers and switches in the NEUTRAL or "OFF" position.

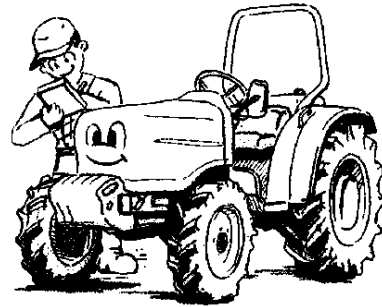


(1) Engine start

HST type

1. Sit in the driver's seat and apply the parking brake lever.

2. Place the range gear shift lever and HST pedal in the neutral position and the PTO switch in the **OFF** position. Pull the throttle lever to the low speed position.

3. Place the PTO select lever on the "**Rear PTO**" position.

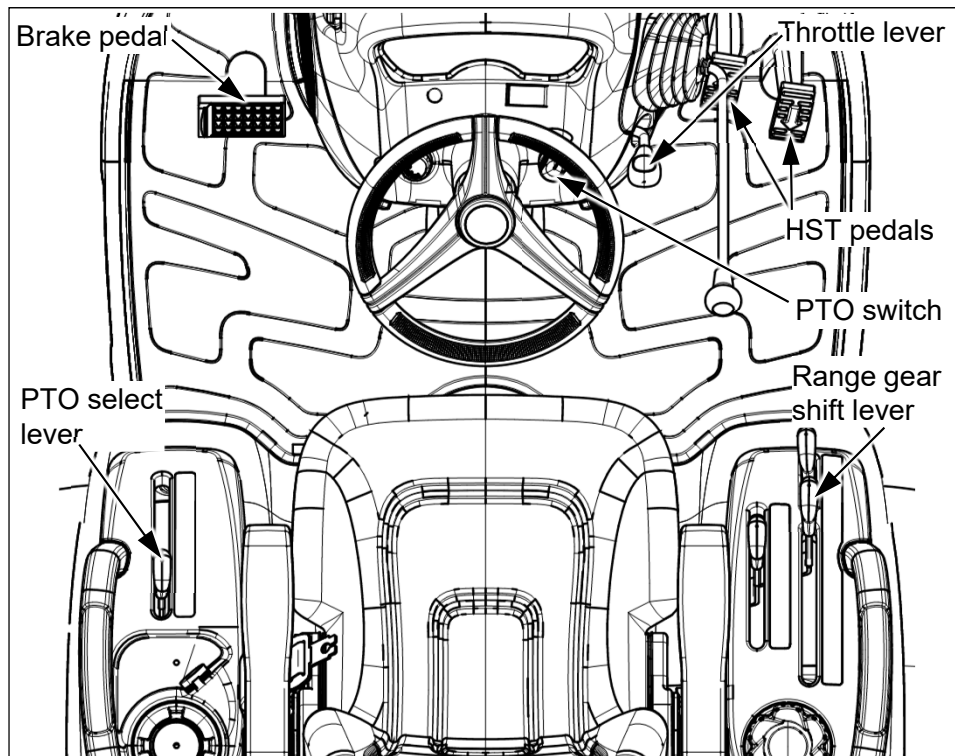





4. Turn the key switch to the **ON** position and check if the battery charging indicator and engine oil pressure indicator are turned on.

5. Turn the key switch to the "**Preheat**" position for **about 4 seconds** with checking if the pre-heating indicator is turned on.

8. Run the engine a few minutes to allow the engine oil and transmission oil to warm up. *For the details, see chapter 4-3-(1) in this manual.*


7. Check if the engine oil pressure indicator and battery charging indicator are turned off. Otherwise, stop the engine immediately and check the problem.


6. Turn the key switch to the start position. As soon as the engine starts, release the key switch to the ON position.

 Warning	<p>▶ Only start the engine outdoors or in a well ventilated place, as the engine exhaust fumes may cause sickness or death. .</p>
 	<p>▶ To avoid an explosion, never use starting fluid to start the engine.</p> <p>▶ Start the engine only from the driver's seat while all the transmission gear levers are placed in the neutral position.</p> <p>▶ DO NOT start the engine by shorting across the terminals of the starter motor. If the engine starts, the tractor can be moved suddenly.</p>
 Caution	<p>▶ To start the engine, - be sure to release the HST pedals in the neutral position, put the PTO switch to the "OFF" position, and place the PTO select lever in the "Rear" position. If not, the engine cannot start even if turning the key switch to the "Start" position.</p> <p>▶ DO NOT operate the starter motor more than 10 seconds. If the engine does not start, wait for 1~2 minutes before restarting.</p> <p>▶ When the engine is running, DO NOT turn the key switch to the "Start" position. It may cause a failure of the starter motor.</p> <p>▶ In cold weather, be sure to warm-up the engine sufficiently. If using the tractor suddenly in cold weather, the engine life can be reduced. <i>For the details, see chapter 4-3-(1) in this manual.</i></p>

(2) Start in cold weather


- Pull the throttle lever to the low idle position.
- Start the engine after operating the cold start aid for about 4 seconds.
- After starting the engine, carry out the warm-up for 5~10 minutes at the low idle rpm. *For the details, see chapter 4-3-(1) in this manual.*
- Use the engine oil for winter in cold weather. Refer to "Lubricants and Capacity" at the end of this manual.
- Use the diesel for winter when it is very cold weather. It is much easier to start engine.
- **NOTE:** *In wintertime below -20°C (-4°F), use a block heater to start the engine (if applicable). To purchase the block heater parts, contact your authorized local dealer or service center.*

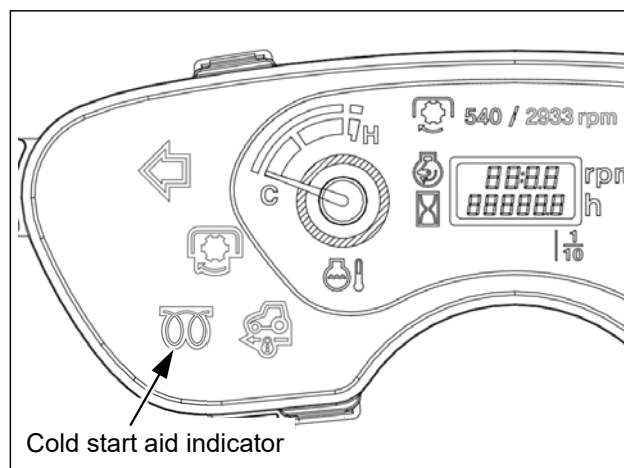

 Caution	<p>▶ When storing the tractor in cold weather, the battery must be removed and stored in a cool, dry place that is not frozen away from children.</p> <p>▶ Allowing engine to idle for a long time will waste fuel and cause a build-up of carbon.</p>
--	--

(3) Engine stop

- Place all the transmission gear levers or switches in their “NEUTRAL” or “OFF” positions.
- Pull the throttle lever backward to reduce the engine speed and turn the key switch to the “OFF” position to stop the engine.
- Remove the ignition key after stopping engine.

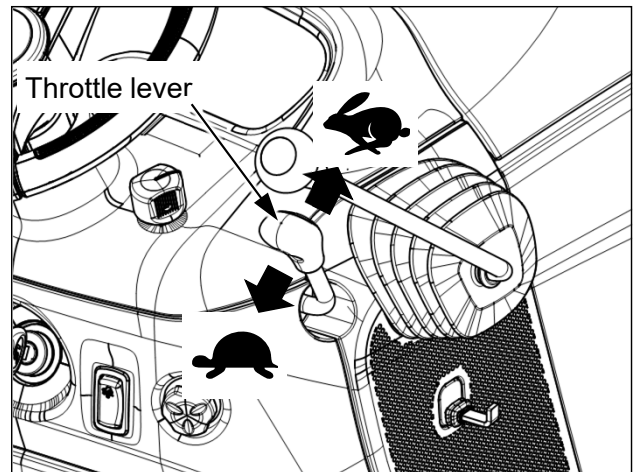

Caution

- To stop the engine after finishing heavy work, run the engine for about 2 minutes at low idle rpm to cool down the engine. If you stop the engine suddenly, the engine life could be reduced.

4-3. How to drive and stop

(1) Engine and transmission Warm-up


- **Engine warm-up:** We strongly recommend that you should always warm-up the engine basically for five minutes after starting to lubricate and protect the engine. In cold weather, comply with the below table.

- **Transmission warm-up:** The tractor hydraulic oil also serves as the tractor transmission fluid. During cold weather operation, the hydraulic oil viscosity increases. This increase in oil viscosity restricts the oil's ability to flow and lubricate in the transmission and hydraulic circuits. The cold oil can result in abnormal noises and delay or slower operation times due to the increased oil viscosity.

NOTE: A warm up time at **50%** rated engine speed is recommended to assure proper vehicle functionality, transmission lubrication and operation.

NOTE: Do not operate the tractor under full load condition until the hydraulic oil is sufficiently warmed up.


Ambient Temperature	Recommended Warm-Up Time
Above 0 °C (32 °F)	Minimum of 5 minutes
0 – -10 °C (32 – 14 °F)	5 to 10 minutes
-10 – -20 °C (14 – -4 °F)	10 to 15 minutes
Below -20 °C (-4 °F)	More than 15 minutes

 Warning	<p>► Unexpected movement!</p> <p>During the warm-up operation, do the following: Engage the parking brake, set all shift levers to their NEUTRAL positions, and place the Power Take-Off (PTO) switch in the OFF position.</p> <p>Failure to comply could result in death or serious injury.</p>
---	---


(2) How to drive

HST type


1. Lift up all the implements (front/middle/rear) from the ground after starting engine.



2. Set the engine speed more than 1500 rev/min.



3. Place the range shift lever on a suitable position.




4. Press down the brake pedal and release the parking brake lever.






5. Press the HST pedal slowly forward or backward to move the tractor.



6. If necessary, press the symbol part of the cruise control switch fix the forward driving speed constantly.



7. If pressing the brake pedal or turning off the cruise control switch, the cruise control mode will be stopped.

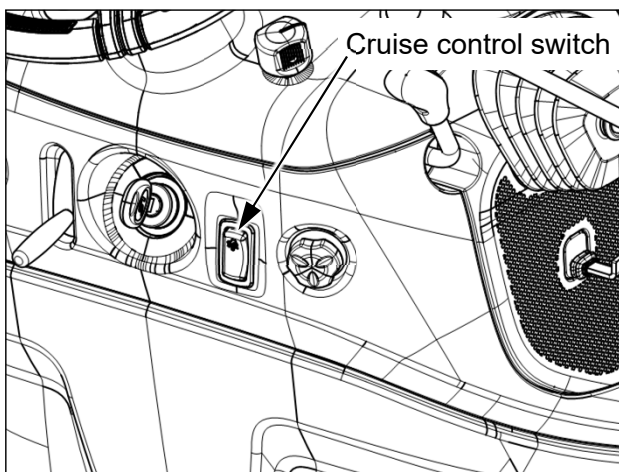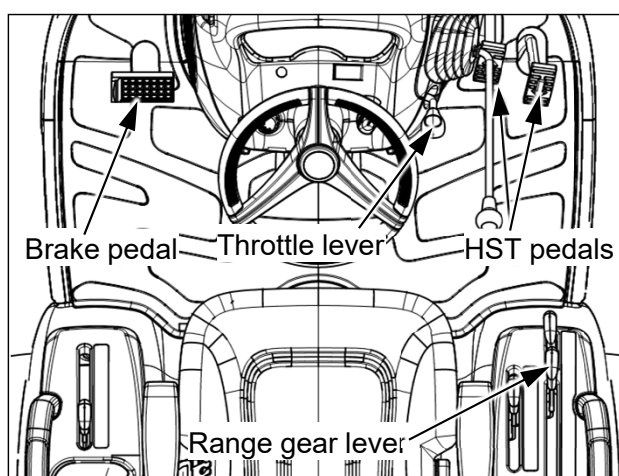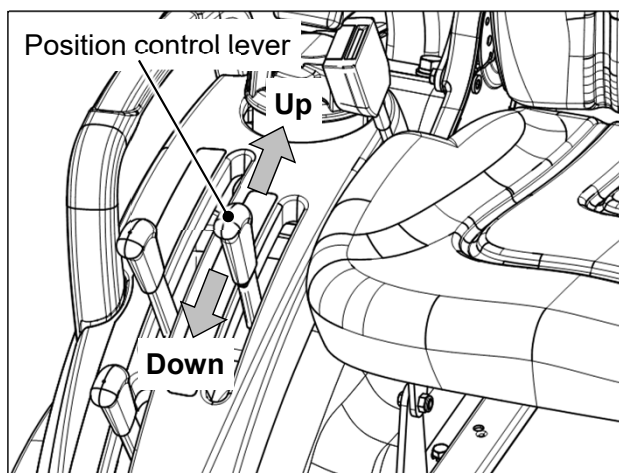



Caution

- ▶ There is a switch in the driver's seat to control the engine cut-off system for driver's safety. If you leave the driver's seat without safety measures, the engine will be stopped automatically. (For further information about the driver's seat, see chapter 2-1-(2) in this manual.)
- ▶ When driving or working with the HST model, run the engine at 1500 rev/min or higher to maintain the hydraulic system stable.
- ▶ Operate the HST pedals slowly to prevent the tractor from sudden start or stop.

(3) Changing speed

HST type


- Move the throttle lever forward to increase the driving speed.
- Press down the HST pedals slightly or fully to control the driving speed.
- Set an appropriate driving speed according to the road conditions.
- Before operating the range gear shift lever, release the HST pedal to return to the neutral position, press down the brake pedal, and stop the tractor completely.

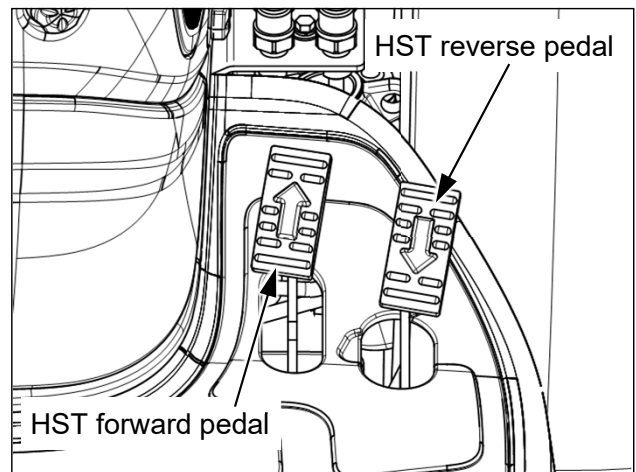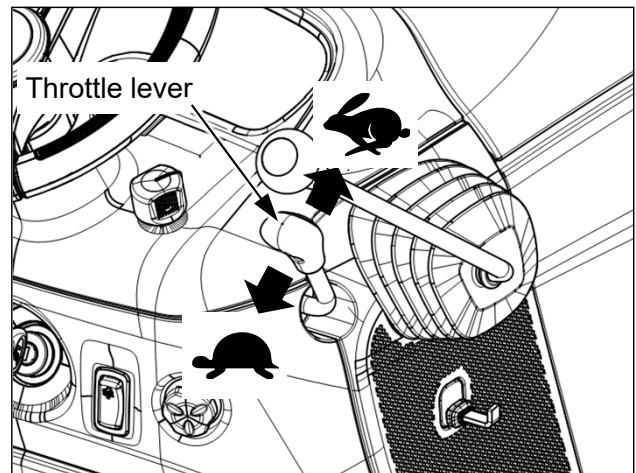


(4) Emergency Stop

HST type



1. Take a foot off from the HST pedals and press down the brake pedal immediately.



2. Turn the key switch to the "OFF" position.
Do not press the HST pedals before the engine stops completely.




3. Apply the parking brake while pressing the brake pedal.

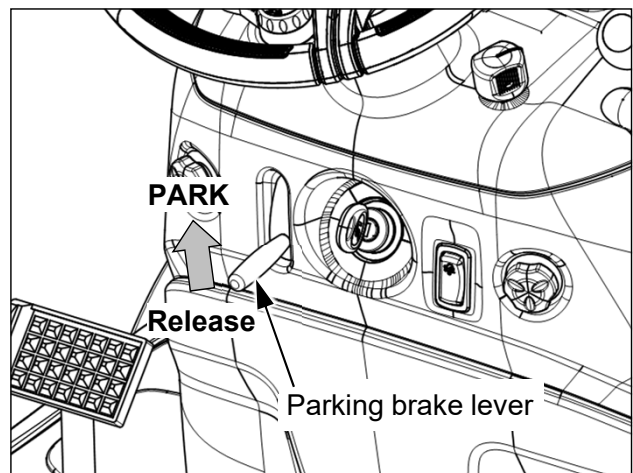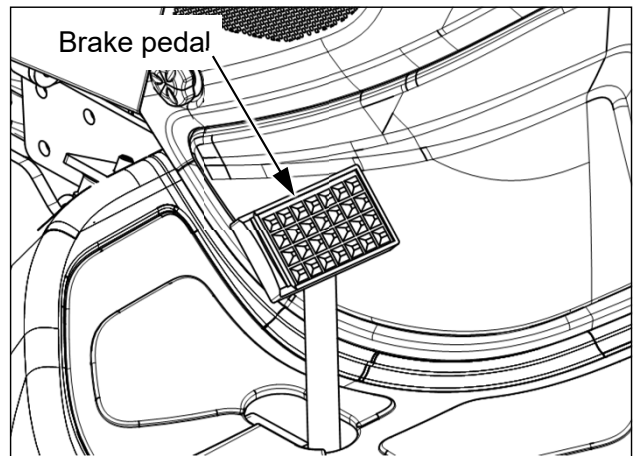


(5) Stopping tractor

HST Type



1. Release the HST pedals, and if necessary, press down the brake pedal. Pull the throttle lever backward to lower the engine speed. Place the range gear shift lever in the neutral position and the PTO switch to the OFF position.



2. Lower the implements to the ground and turn the key switch to the OFF position.



3. Engage the parking brake lever after pressing the brake pedal, and take foot off from the brake pedal slowly.

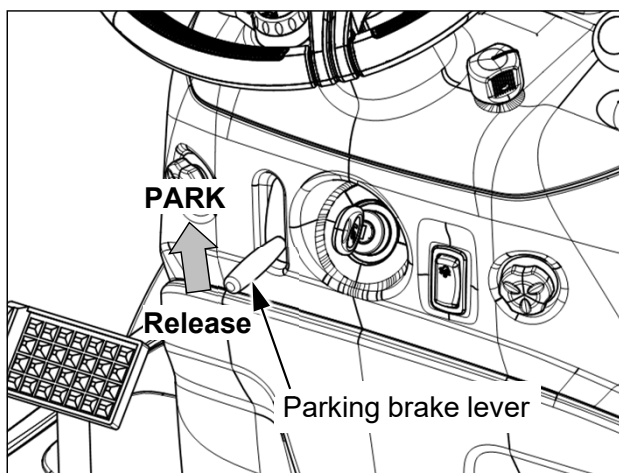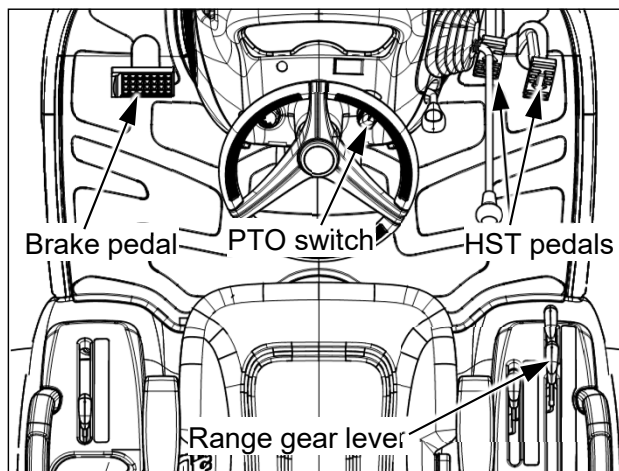


Caution

- ▶ DO NOT leave the tractor while the transmission gear is placed in the neutral position and the parking brake is not applied. The tractor may roll down. Apply the parking brake at all times before leaving the tractor.
- ▶ Remove the ignition key always after stopping engine.

(6) Parking

- Stop the tractor on a level surface, not on a slope.
- Disengage the PTO and place all the transmission gear levers in the neutral position.
- Lower the mounted implements on the ground.
- Apply the parking brake.
- Stop the engine and remove the ignition key.
- Before you leave the operator's station, wait until the engine and all the moving parts have been stopped.
- Apply the wheel chocks to the wheels when parking the tractor on a slope unavoidably.

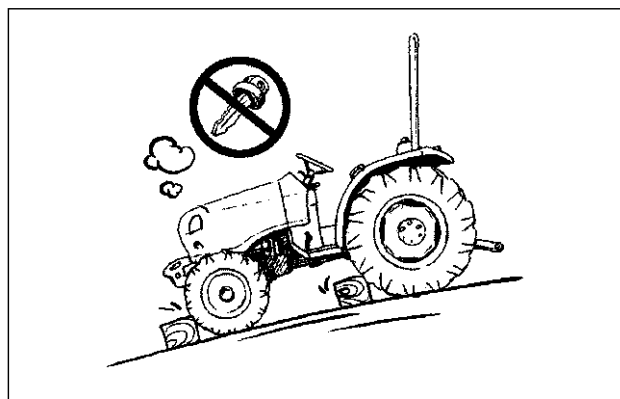

Caution




► If it is necessary to park your tractor on a slope, furthermore with a loaded trailer, the tractor may roll down, even though the parking brake is applied. In this case, apply all the transmission gears in their lowest speed positions and apply the wheel chocks or blocks to the all tires.

- HST Type : Place the range gear shift lever to the lowest speed position.

4-4. Transport on public roads

(1) Safety rules when driving tractor on the roads

- When facing downhill, DO NOT place the transmission gear lever in the neutral position.
- When driving the tractor on an unpaved road with a heavy rear implement on the 3-point linkage, do not drive fast and do not lift up the implement to the highest position. The hydraulic lift system may be damaged by vibration and impact. In this case, place the position control lever on the 3/4 rising position of the full stroke and select an appropriate driving speed before entering the unpaved road.

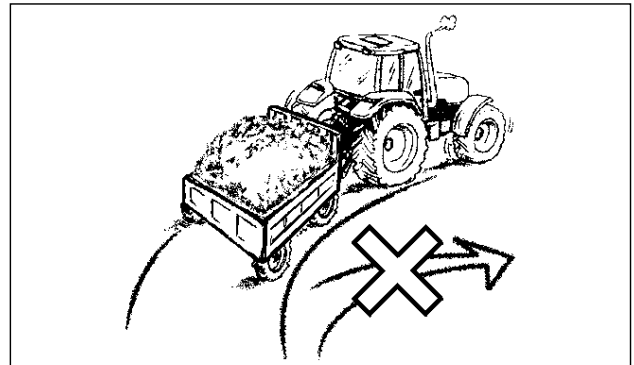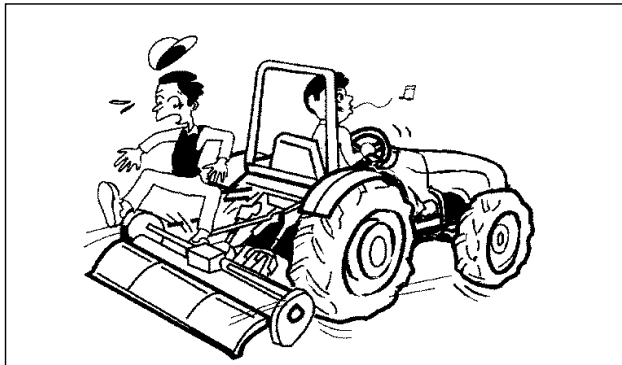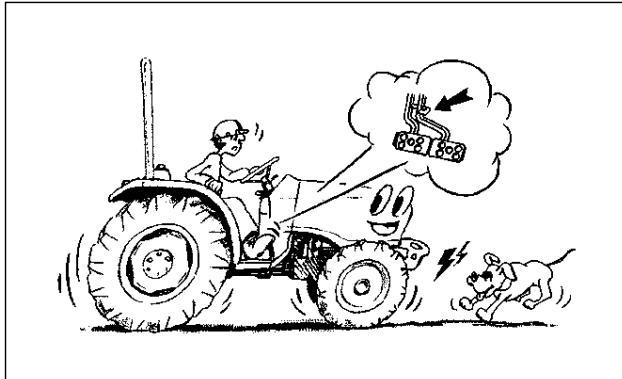



Caution

- ▶ Avoid a sudden start, sudden brake and sharp turn.
- ▶ DO NOT allow people on the tractor or implement.
- ▶ DO NOT place baggage on the tractor or implement.
- ▶ Place the PTO select lever in the "REAR" position and put the PTO switch in the "OFF" position.
- ▶ DO NOT use the differential lock and four wheel drive(4WD) on the road.
- ▶ When traveling with an implement on the rear 3-point linkage, tighten the stabilizer to avoid lateral movement.
- ▶ When traveling with a long and heavy implement, turn slowly with a wide turning radius.
- ▶ While traveling on public roads, do not ride your foot on the brake pedal, and do not operate any implement such as tiller, loader etc.
- ▶ When starting the tractor on a slope, select a suitable driving speed to avoid damage to the transmission drive lines.



(2) Light operation

- Your tractor is equipped with the following lights.

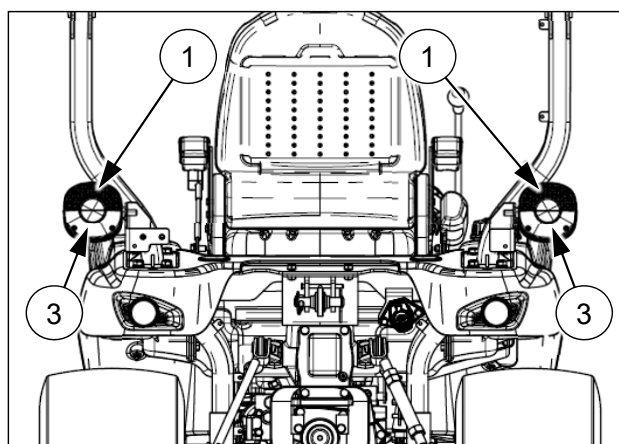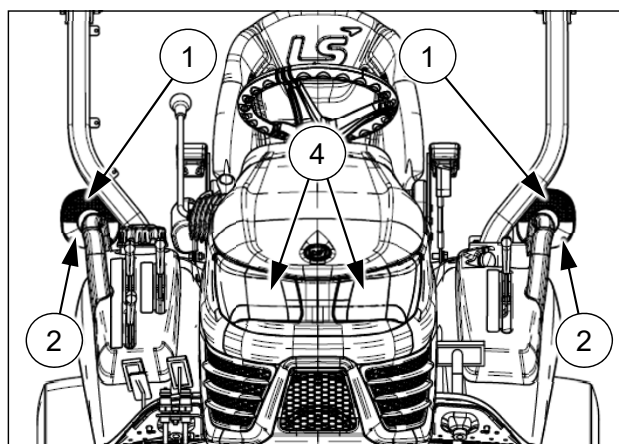- ① Turn signal lights and Hazard warning lights
- ② Side lights.
- ③ Tail lights and brake lights
- ④ Headlights
- ⑤ Rear work light (optional) on the right-hand rear ROPS frame.



- Use the hazard warning lights and headlights (low beam) when you are traveling on public roads day or night. (North America only)
- Do not modify the lamps or change the bulb capacity arbitrarily.
- When driving the tractor on public roads, operate the lights according to your local traffic regulations.
- *For the details about light operation, refer to the chapter 3 in this manual.*



 Warning	<ul style="list-style-type: none"> ▶ Modified lamps or changed bulb capacity may cause a traffic accident by distracting approaching driver's views. ▶ If the lamp is blown out, replace it immediately with a genuine part. In case of driving at night, it may cause a traffic accident.
 Caution	<ul style="list-style-type: none"> ▶ If using the hazard warning lights for a long time while the engine is stopped, the battery can be discharged completely due to high electrical power consumption.

(3) 7-Pole connector (optional)

- The one of the standard 7-pole trailer connectors is provided and is mounted at the rear of the tractor. The connections of the 7-pole connector (as viewed from rear of tractor) are as follows.


- **ASAE Version**

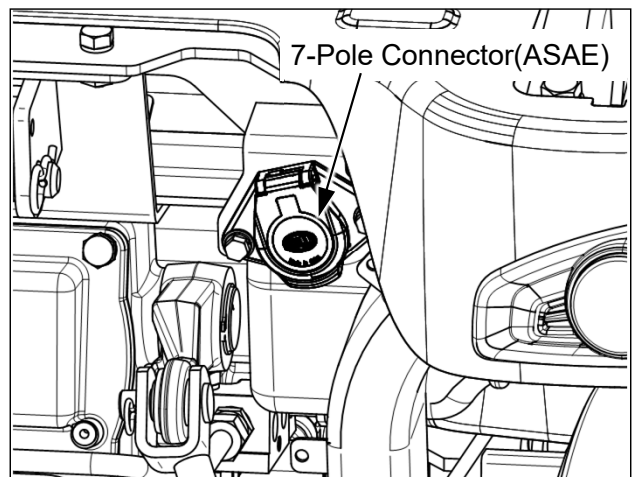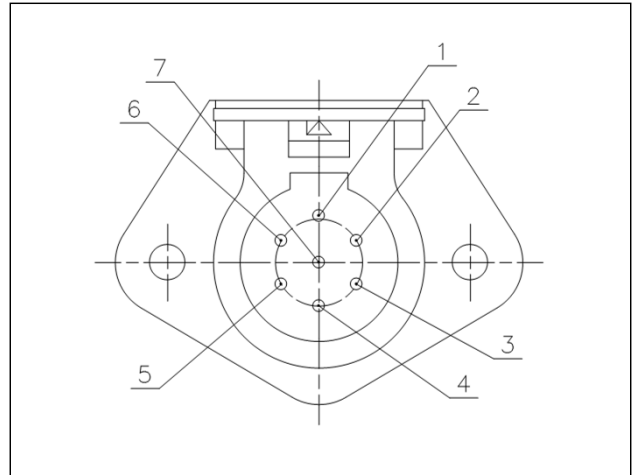


Pin No.	Function
1	Ground (Earth)
2	Working light
3	Left turn signal light
4	Brake light
5	Right turn signal light
6	License number plate light
7	Auxiliary



(4) Notices when towing the tractor

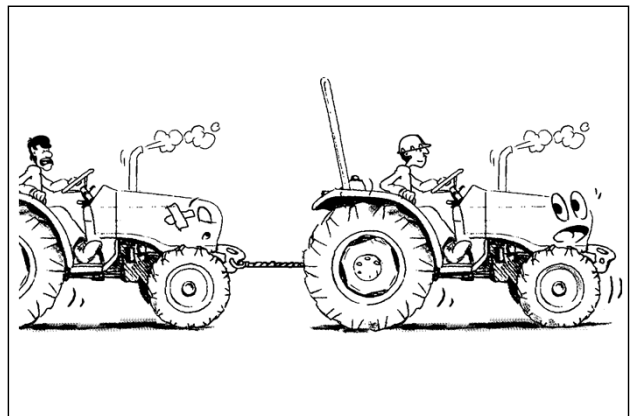- If your tractor needs to be towed for a short distance, use the hitch (or drawbar) or front towing hook. Do not connect to the other structure such as rear axle, ROPS, front axle, and steering components for towing. These components could be damaged by the chain or by excessive strain.
- Your tractor can be steered for a short distance without engine running, but it will be hard to turn the steering wheel. If possible, run the engine for steering and lubrication.
- When being towed, disengage the followings;
 - Front wheel drive (4WD)
 - Differential lock
 - Parking brake,
 and place all the transmission gear levers in the neutral position.
- Check the horizontal and vertical permissible load of the hitch (or drawbar), and total weight of the towed vehicle before towing. (See chapter 4-5-(3). "Hitch and Drawbar" in this manual.)
- Make sure to install the towing pins and locking pins after connecting the chain.
- Tow the tractor slowly in a longitudinal straight line.




 Warning	<p>► Unexpected machine movement!</p> <p>Never attempt to start the machine by towing. The machine could start unexpectedly.</p> <p>Failure to comply could result in death or serious injury.</p>
 Warning	<p>► Transport hazard!</p> <p>Do not tow the machine on public roads. Towing could cause a safety hazard for other vehicles using the roadway.</p> <p>Failure to comply could result in death or serious injury.</p>
 Warning	<p>► Hazard to bystanders!</p> <p>Do not use cables or rope to tow the machine. If the cable or rope breaks or slips, it may whip back with enough force to cause serious injury. When using a chain, attach the chain with the hook's open side facing UP. If the hook slips, it will drop down instead of flying up.</p> <p>Failure to comply could result in death or serious injury.</p>
Notice	<p>► If it is necessary to tow the tractor, all the transmission gear levers must be moved to their neutral positions before stopping the engine. Otherwise, it can cause damage to the transmission components may occur during towing.</p>

- Use a strong chain when towing the tractor. Tow the tractor from the rear using only the drawbar. Tow the tractor from the front using the tow pin in the front weights or front support. Have an operator steer and brake the tractor. If possible, run the engine to provide lubrication to the transmission and power steering.


NOTE: The tractor should only be towed a short distance, such as out of a building. Do not tow on roadways or as a method of transport.

- When connecting a chain to the front towing hook on the front ballast weights (optional), make sure to check the snap pin is installed in place firmly on the front towing hook pin①. Otherwise, the front towing hook pin may be out of place while towing and it may cause a serious injury or death.

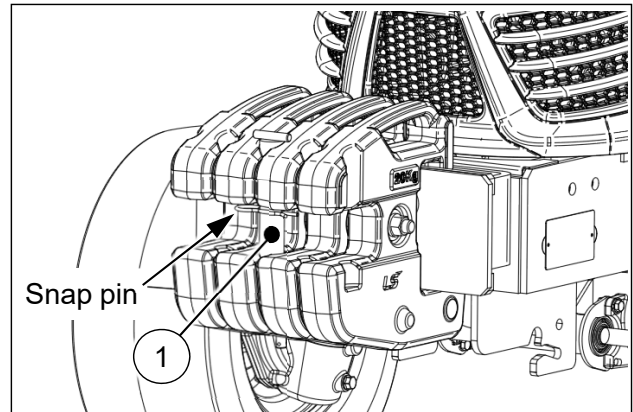

(5) Notices when transporting the tractor



- When transporting the tractor by truck, trailer, etc., use suitable equipment or facilities to load or unload the tractor.
- Fix the tractor tightly to the vehicle with heavy-duty straps or chains.
- When fixing the rear of the tractor, use the hitch or hitch support.
- When fixing the front of the tractor, use the towing hook.
- When driving on public roads, the transporting vehicle must have signs and lights required by local regulation to avoid collision with a vehicle.

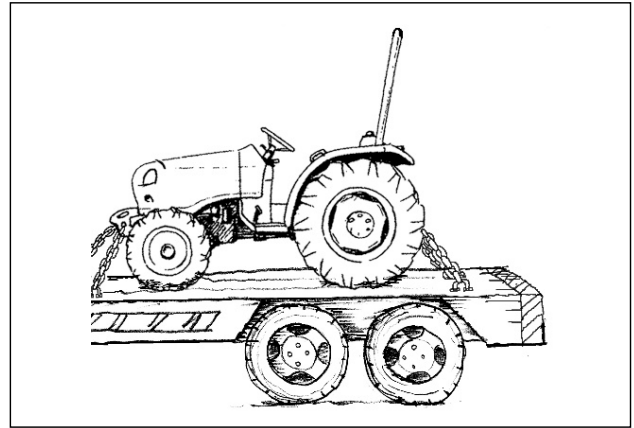

Caution


- ▶ When fixing the tractor, do not hook or connect chains to the 4WD shaft, steering cylinder, tie-rod or front axle. These can be damaged by the chain or excessive strain.
- ▶ In case of turbocharger engine (where fitted), cover the exhaust outlet to protect that the turbocharger does not rotate by air without lubrication.

- Transport the tractor with all four wheels on a flatbed trailer or truck. Secure the tractor as follows:
 - Secure the front of the tractor at the front towing hook①. (optional)
 - Secure the rear of the tractor at the rear drawbar or hitch②. (optional)

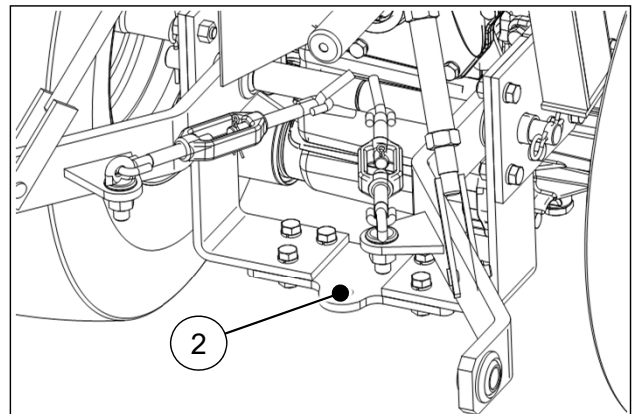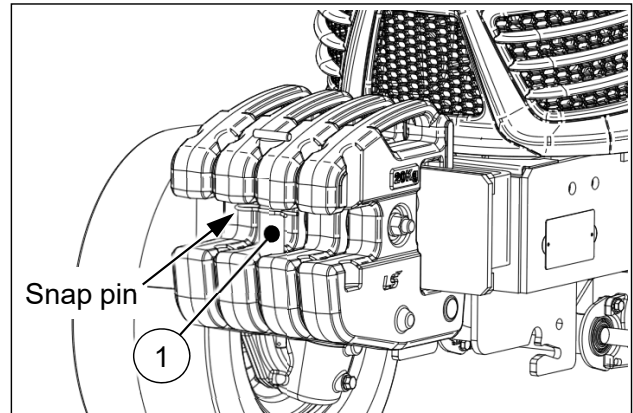


4-5. Field Operations

(1) Rear 3-point linkage

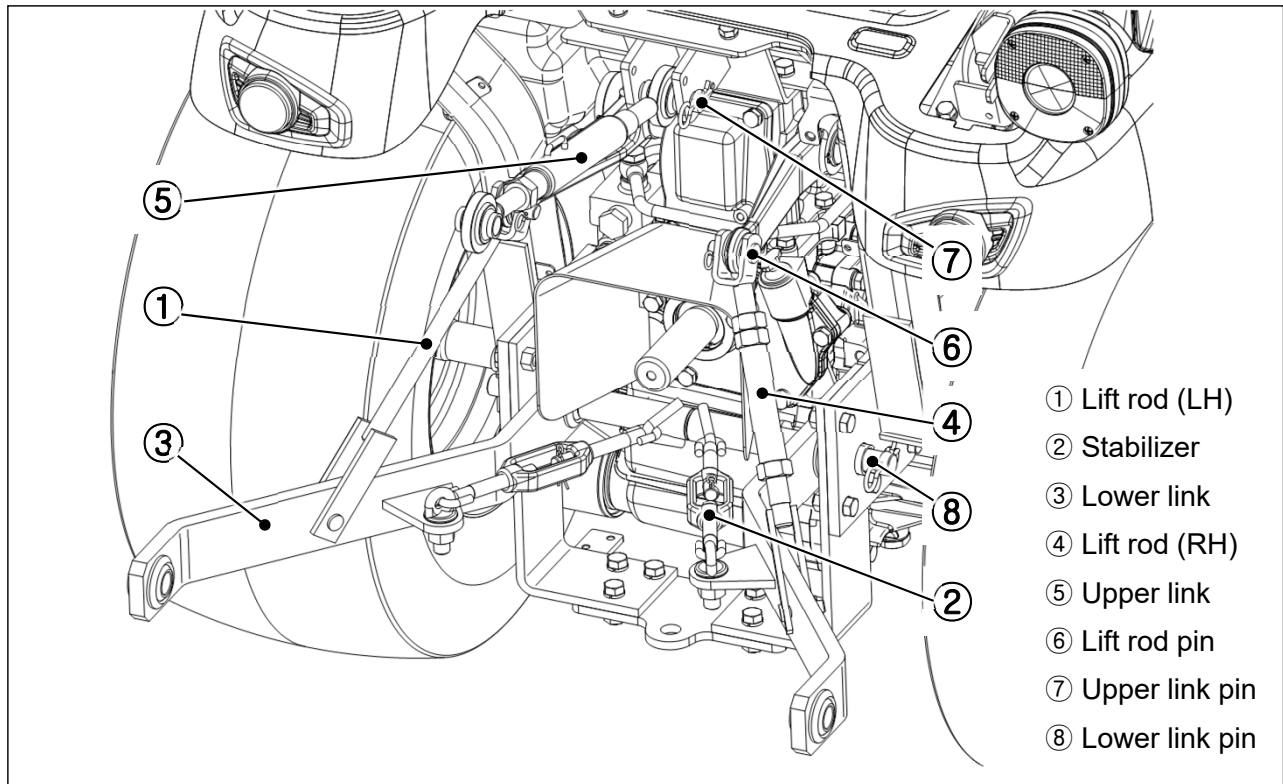


- When attaching a rear implement, comply with the followings.
 1. Set the implement upright on a level surface and approach the implement in reverse.
 2. Stop the tractor on an adaptable attaching position and apply the parking brake.
 3. Connect the lower link(3) to the implement and insert the lock pin firmly. (left, right)
 4. Connect the upper link(5) to the implement and insert the lock pin firmly. Wide adjustable range of the upper link provides you easier attachment.
 5. Fix the implement firmly with stabilizer(2).(left, right).
 6. When detaching the implement, comply with the same procedure in reverse.

 Warning	<ul style="list-style-type: none"> ▶ Before attaching/detaching an implement, place the PTO switch in the OFF position and the PTO gear lever (if fitted) in the neutral position, and apply the parking brake. ▶ When attaching/detaching an implement, make sure to assemble and tighten the connecting parts correctly. ▶ If your tractor is used to tow heavy loads, always use an approved drawbar or hitch to avoid a tipping, turnover and personal injury. Never connect the loads to the 3-point linkage, rear axle, or other parts. ▶ Never connect an implement that requires more power than capacity of your tractor. ▶ Never stand between implement and tractor when connecting implement. ▶ Do not change the pressure set of the relief valve arbitrarily to increase the lift capacity of the 3-point linkage. It can cause fatal damage to the hydraulic system.
--	---

① Handling and Adjusting Upper link

① Adjusting the upper link's length

- Adjust the upper link ① depending on the implements.
- Length of the upper link ① can be adjusted by turning the grip ②.
- Fasten the lock nut ③.
- Adjusting range : 15.7 ~ 29.5 inch.


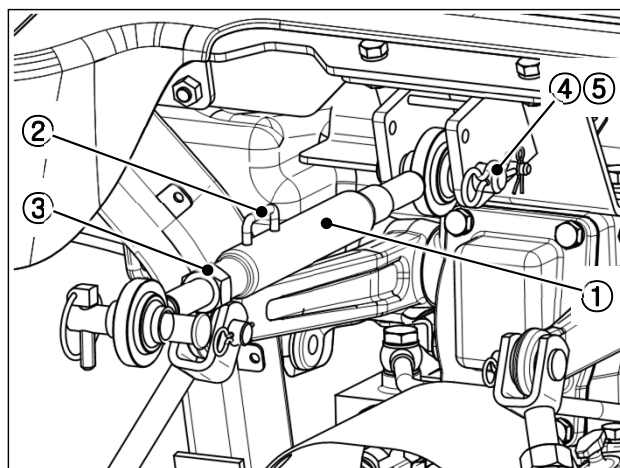


Notice

► Insert the snap-pin ⑤ firmly to prevent the upper link pin ④ from being escaped.



② Using the upper link

1. Remove snap pin ① and disassemble the locking pin ② with holding the upper link ③ in the right figure [Fig.1].
2. Lay down the upper link ③ to the rear side.
3. Assemble the locking pin ② and snap pin ① the designated hole as shown [Fig.2].

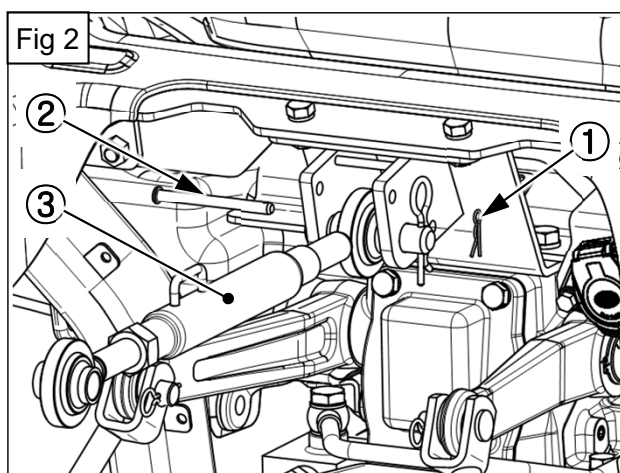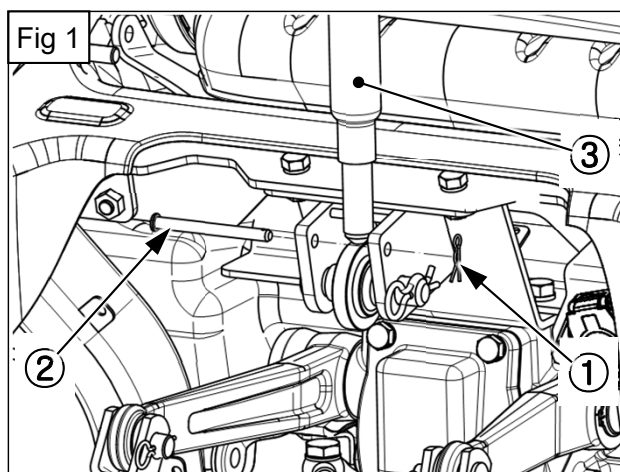


© Keeping the upper link

1. Remove snap pin① and disassemble the locking pin② as shown [Fig.1].
2. Upright the upper link③.
3. Assemble the locking pin ② and snap pin ① the designated hole in the right figure [Fig.2].

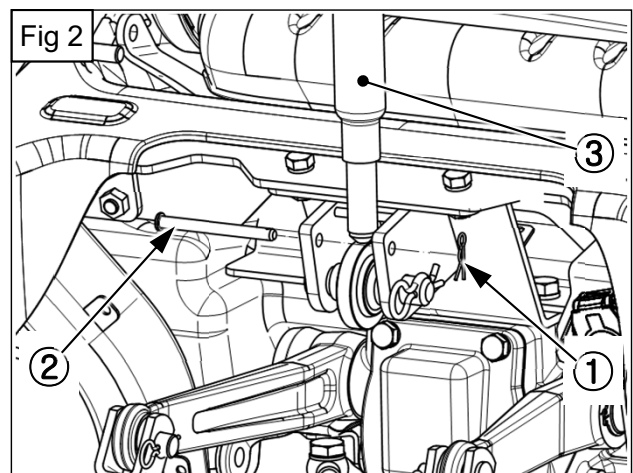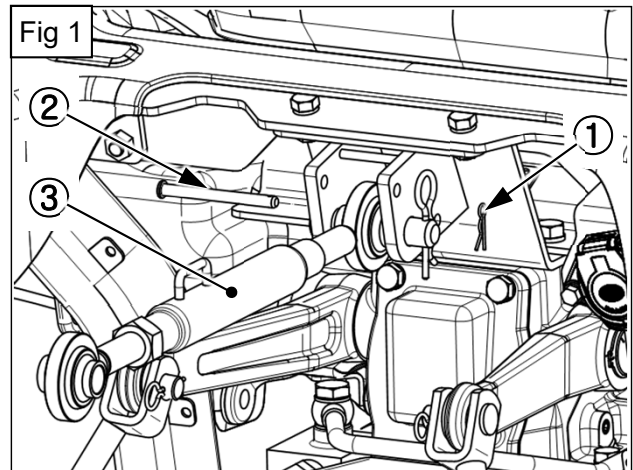


④ Using the upper link with the backhoe attachment

1. Remove snap pin① and disassemble the locking pin② with holding the upper link③.
2. Upright the upper link③ for storage.
3. Pull out the upper link③ to the rear side for attaching implement.
4. Assemble the locking pin ② and snap pin ① the hole in the right figure [Fig.3].

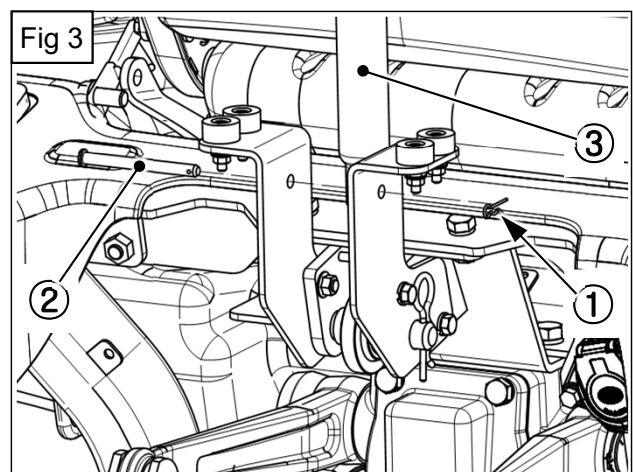


② Adjustment of the lift rod's length

- Lift rod (RH) can be adjusted by loosening the lock-nut ②, and turning the body ①.
- After adjusting, tighten the lock-nut ② again.

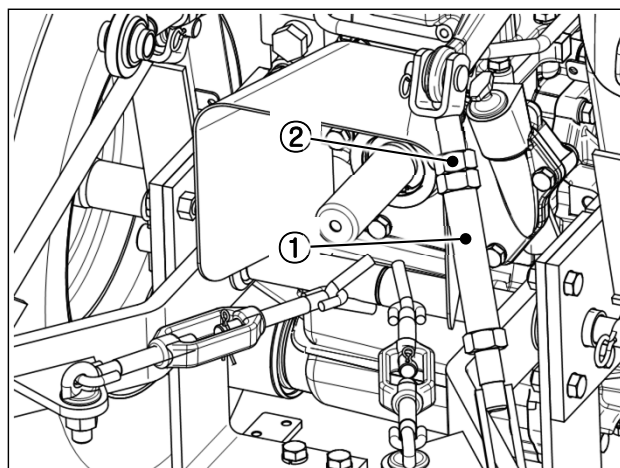

③ Adjustment of stabilizer's length

- The length of the stabilizer can be adjusted by turning the handle ②, after removing the fixing-pin ①.
- After adjusting, insert the fixing-pin ① again.

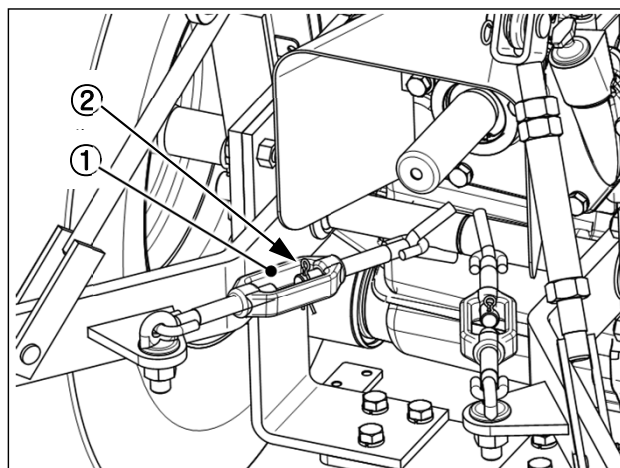

Notice


- Adjust the lateral swinging clearance of the implement to be within 20~40mm (0.8~1.6 in).

④ Reference of Implement installation part


	A	B	C (Max)	D (Min)	E (Max)	F (Min)	G	H	J	K	L	N
CAT.1	19 (0.74)	19.3 (0.75)	44 (1.73)	76 (2.99)	69 (2.71)	44.5 (1.75)	22 (0.86)	22.4 (0.88)	35 (1.53)	39 (1.53)	4.5 (0.18)	683 (26.8)

Unit : mm
(unit : inch)

⑤ Handling of the 3-point linkage

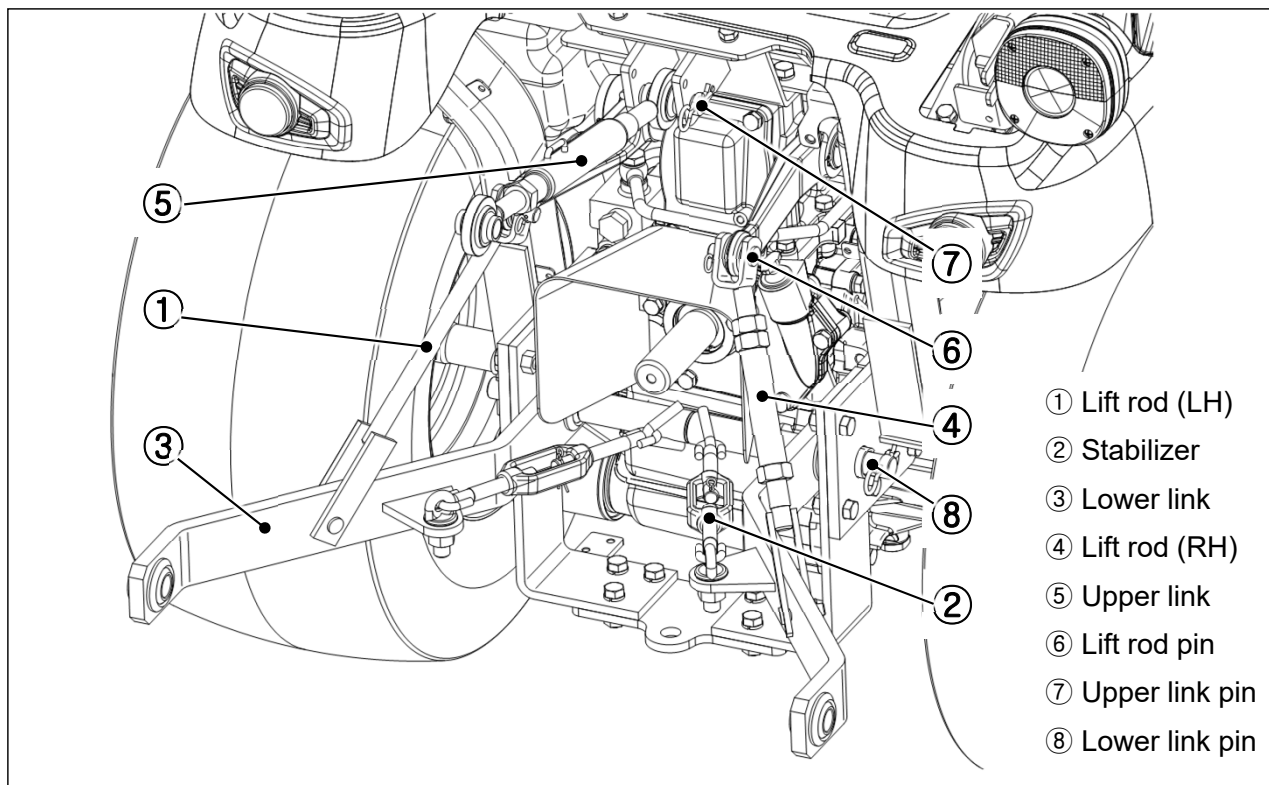

- When driving the tractor without attaching implement, comply with the followings.
 1. Secure the upper link⑤ or remove it.
 2. Connect the stabilizer② to the lower link③ to avoid lateral movement of the lower link.
- When using a hitch or drawbar, or driving on the road with a rear implement, lift up the 3-point linkage and fix it by turning the down speed control knob to the locking position.

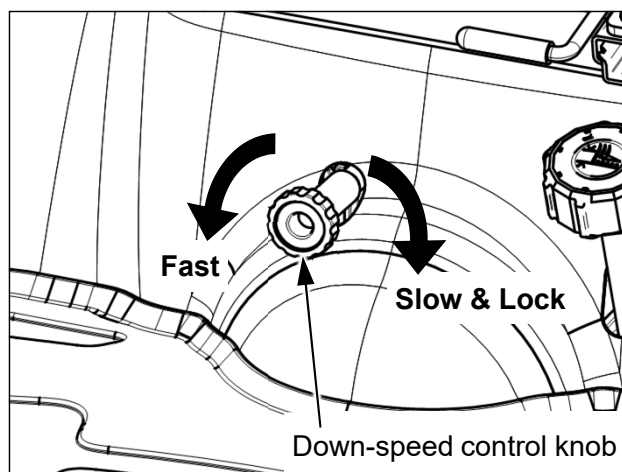


- If the 3-point linkage is not necessary for attaching other special equipment, remove it as follows.

	! warning	<p>Heavy parts !</p> <ul style="list-style-type: none"> ▶ The 3-point linkage is very heavy. Handle with care. ▶ Failure to comply could result in serious injury.
--	------------------	---


Ⓐ Remove top-link

1. Remove snap pin① and disassemble the locking pin② with holding the upper link③ in the right figure [Fig.1].
2. Remove snap pin④ and disassemble the upper link pin⑤ with holding the upper link③ .
3. Remove the top link③.

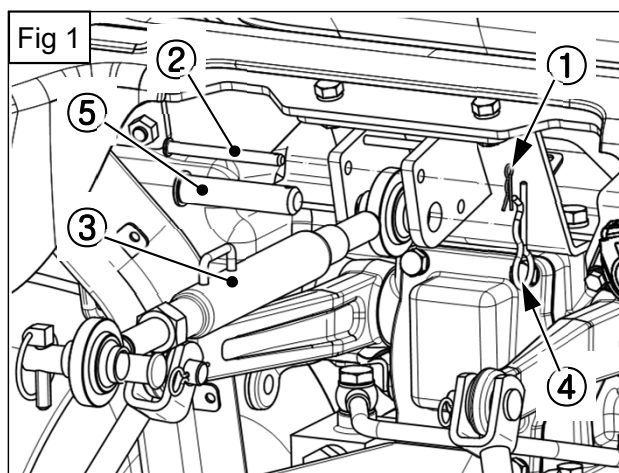


Ⓑ Remove lift-rod (LH/RH)

1. Remove snap pin①, and disassemble the lower lift-rod pin② with holding lower link(RH)③ tightly as shown [Fig 2].
2. Lay down the lower link(RH)③ to the ground.
3. Remove snap pin④, and disassemble the upper lift-rod pin⑤ with holding lift-rod(RH) ⑥.
4. Remove the lift-rod(RH)⑥.
5. Disassemble the lift-rod(LH) as the same procedure.

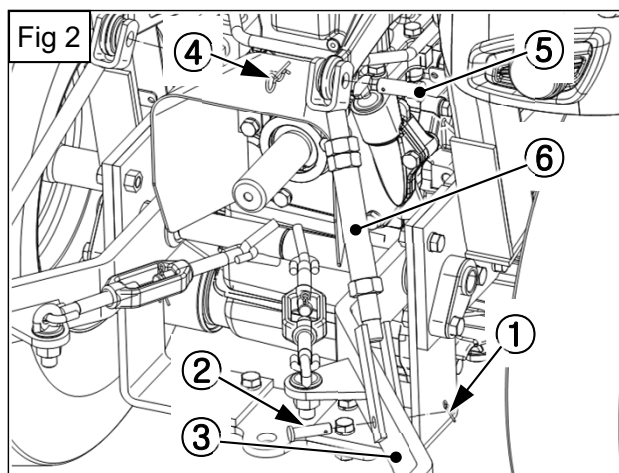

Ⓒ Remove lower-link and stabilizer (LH/RH)

1. Unscrew the locking bolt① and pull out the lower link pin② and spacer③ to the outside in the right figure [Fig 3].
The spacer③ is only available for the basic model that backhoe is not attached.
2. Disassemble the parts ①, ② and ③ for the other side as the same procedure.
3. Remove the lower link④ and check-chain assembly⑤ (both sides) to the rear side.

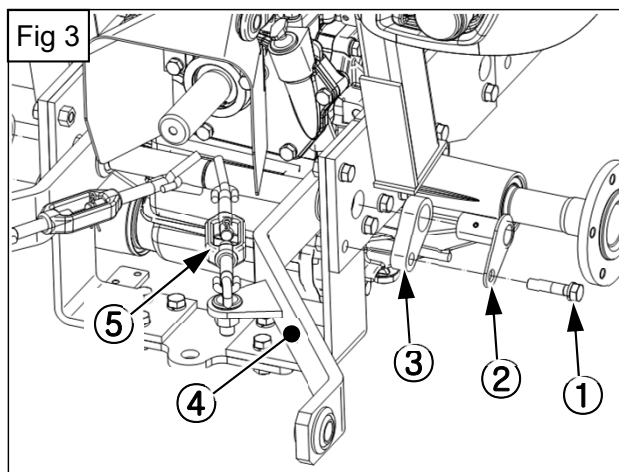


! warning

Heavy parts !

- The 3-point linkage is very heavy. Handle with care.
- Failure to comply could result in serious injury.

4. Pull out the lower link shaft① as shown [Fig.4]

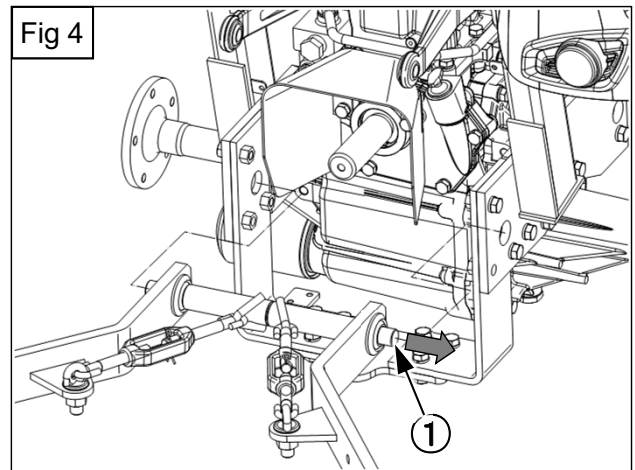


Caution

► When assembling the 3-point linkage to the tractor, comply with the removing procedure in reverse.

(2) Power take-off (PTO) operation

① Safety precautions

- When PTO shaft is rotating, NEVER APPROACH the shaft.
- Check if the PTO shield and protection cap is attached correctly. If they are removed or damaged, replace it with a new one. After using the PTO shaft, reinstall the PTO protection cap originally.
- **Suitable Clothes & Protect Entanglement :**
When checking or attaching implement to the PTO shaft, wear tight fitting clothes and safety equipment instead of loose or long clothes. Also, slippers, high heel shoes are not suitable. Wear the suitable clothes.

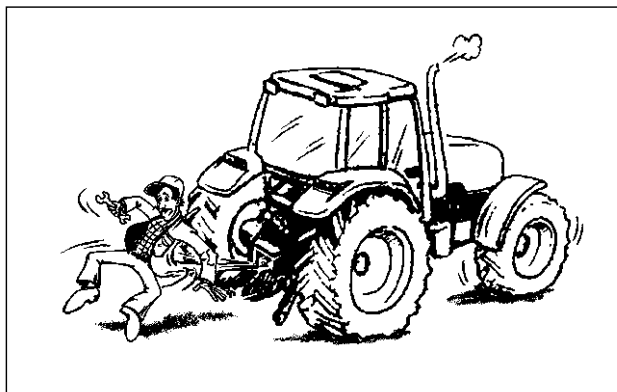

► Do not approach the rotating shaft such as PTO shaft or cooling fan, especially, with loose and long clothes. The entanglement in rotating shaft can cause serious injury or death. Stop the engine and be sure check that the PTO shaft has been stopped completely before getting near it.


② Specification and dimension of rear PTO shaft

- Check the specification of the rear PTO shaft before attaching an implement. The spline teeth may be different depending on the market.

- **Spline Teeth: 6T**, in conformity with ISO 500-3:2004, Type 1

Rear PTO	1-speed gear (Spline Teeth : 6T)
PTO / Engine speed	540 / 2933 rpm
Direction of rotation	Clockwise (as viewed from rear of tractor)
Shaft dimension (Unit : inch)	<p>Technical drawing of the rear PTO shaft. It includes a side view and a cross-sectional view of the spline teeth. The side view shows a length of 1.18 in (1.71 in). The cross-sectional view shows a diameter of 1.1 in, a tooth width of 0.34 in, and a total width of 1 3/8 in. The text '(Teeth : 6T)' is also present.</p>

③ Specification and Dimension of Middle PTO shaft

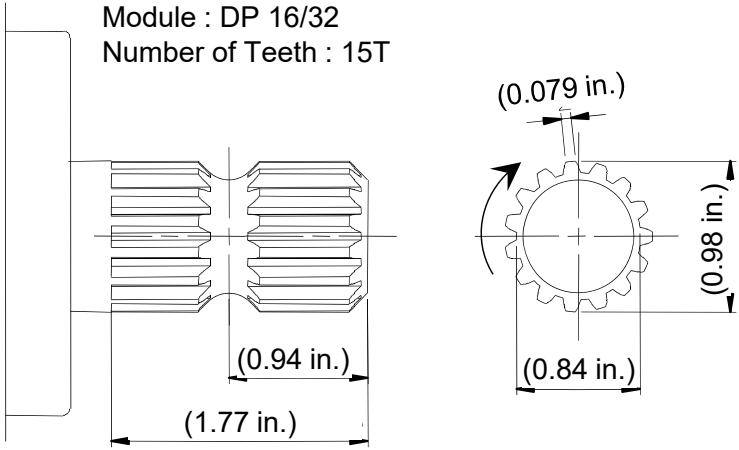MID PTO	1-speed gear (Spline Teeth : 15T)
PTO / Engine speed	2500 / 2841 rpm
Direction of rotation	Clockwise (When looking at PTO shaft end)
Shaft dimension (Unit : inch)	<p>Module : DP 16/32 Number of Teeth : 15T</p> 




④ Attaching power take-off(PTO) drive shaft

- When connecting PTO drive shaft to the PTO shaft and implement, make sure to check that the locking pin of the PTO drive shaft is locked in place.
- When attaching PTO drive shaft, refer to the drawings as below for safety clearance zone.
- After installing implement(s), check the followings according to the position of the 3-point linkage.
 - check the articulation angle of the PTO drive shaft and rotating noise is suitable.
 - check the interference with PTO safety cover and other structure.
 - check the effective engaging length of the PTO drive shaft.



Caution

► The steep inclination of the PTO drive shaft makes a loud noise and cause a failure of the PTO driveline. When working in the field, do not lift up the rear implement over the manufacture's limitation **that the maximum articulation angle of the PTO drive shaft is 18 degree when the PTO drive shaft is rotating.**

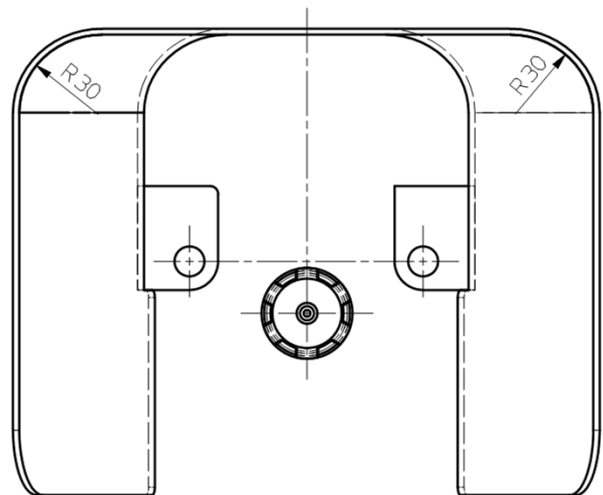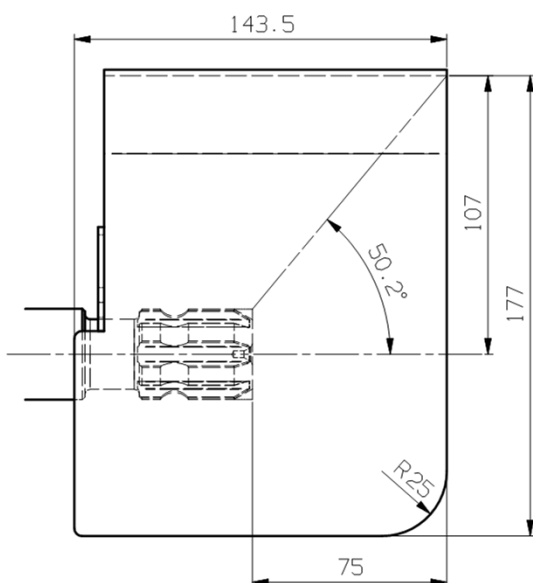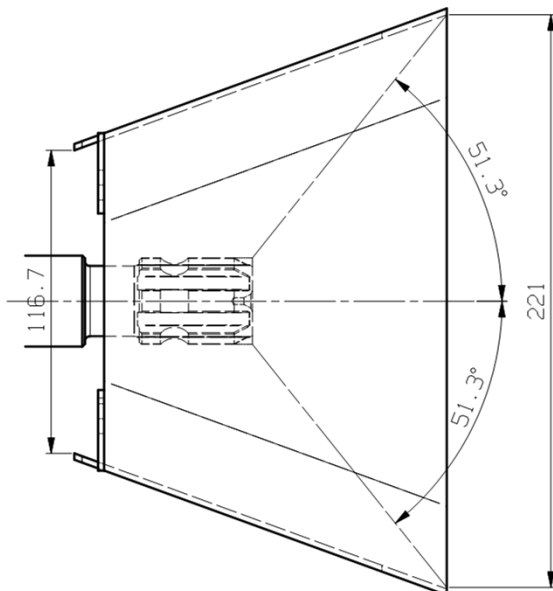

(3) Hitch and Drawbar (optional)



- When attaching towed equipment, use an approved hitch or drawbar. DO NOT use the 3-point linkage or other parts. If so, the tractor could be overturned.
- When attaching/detaching towed equipment, be sure to check the pins locked in place correctly.
- DO NOT exceed the maximum permissible vertical and horizontal load of the coupling.

① Hitch

- Vertical load : 400kg (882lbs)
Horizontal load : 1.6 tonnes (3527lbs)

② Drawbar (w/clevis)

- It is used to connect two-axle towed equipment.
- It is available to adjust the position of the drawbar after removing the snap pin and lock pin as shown in the right figure. After adjusting, the position, assemble the pins correctly.
- Insert the hitch pin and snap pin correctly after attaching/detaching the equipment.
- Vertical load : 350kg (772 lb)
Horizontal load : 1.6 tonnes (3527lbs)
- The maximum permissible towable mass is depending on the brake system type on the towed equipment as below. Check the brake system of your towed equipment.

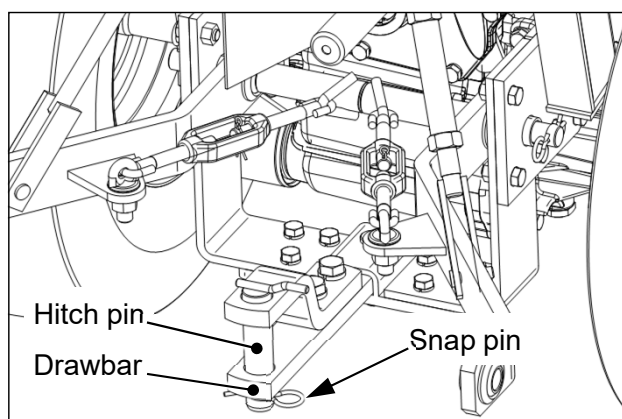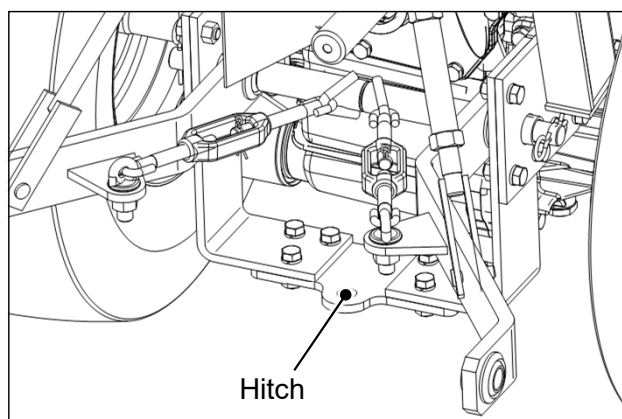

	Hitch	Drawbar (w/clevis)
Unbraked towable mass	N/A	N/A
Inertia-braked towable mass	1600kg (3527 lb)	1600kg (3527 lb)
Hydraulic or pneumatic braked towable mass	N/A	N/A

	Caution	<ul style="list-style-type: none"> ▶ Vertical loads on the coupling point of the drawbars, it may vary depending on the tire load rating. Consult your authorized local dealer. ▶ Use always the drawbar or hitch for pulling work. DO NOT use the 3-point linkage, rear axle or other parts. If so, the tractor could be overturned. ▶ When attaching/detaching towed equipment, apply the parking brake and stop the engine before applying the locking pins manually. ▶ Before transporting equipment on public roads, make sure you comply with your local traffic regulations.
--	----------------	---


(4) Technically maximum permissible mass

- When working with a front-end loader or a rear heavy loaded attachment installed to the 3-point linkage, install the ballast weights on the counter-part axle to maintain front and rear weight balance of the tractor. If not, the front or rear axle can be strained and damaged by the overloaded weight.
- When working with a front-end loader, place the attached rear weight to the highest position and turn the down speed control knob to the “**Lock**” position.
- **DO NOT exceed the total maximum permissible mass and/or permissible maximum mass on each axle** declared by manufacturer as below, **even if the load capacity of the tire is sufficient**.
- **If the load capacity of the tires is lower than maximum permissible mass on each axle**, the maximum mass on each axle must be loaded **under the load capacity of the tire**. **Check the load capacity of the tires**.

	All models	Remarks
Technically total maximum permissible mass	1180kg (2601 lb)	It may depend on the load capacity of the tires. (See next chapter)
Front axle (*)	650kg (1433 lb)	
Rear axle	740kg (1631 lb)	

* includes front mounted equipment or loader in the raised position but without load in the bucket.

- **Restrict operation** : In case that driving speed of the tractor does not exceed 8km/h (5 mph) and standard front/rear wheel tracks (*refer to the chapter 4-5-(6), “Adjusting wheel track and tire replacement” in this manual*) are applied, the intermittent maximum permissible load of the front axle can be **910kg (2006 lb)**. But, it is restricted by the load capacity of the tires.


	Caution	<ul style="list-style-type: none"> ▶ Maximum permissible mass is measured with only the front or rear wheels on the scales inclusive of ballasts and with mounted equipment in the raised position. ▶ Do not exceed the maximum permissible mass above and the load capacity of the tires. Overloaded operation may invalidate the warranty. ▶ DO NOT change the setting pressure of the relief valve arbitrarily to increase the lift capacity of the front loader or 3-point linkage. It can cause fatal damage to the hydraulic system and front axle.
---	---------	---

(5) Tires and Load capacity

- For safe operation and secure the reliability of the transmission driveline, use only approved tire combinations and manage the specified tire air pressure regularly as below table. If using an unapproved tire combination or unsuitable tire air pressure, it may cause a failure of the front/rear axle and reduce the reliability of the transmission driveline.

Axle No. (*)	Tires	Standard air pressure (kg/cm ²)	Load rating per tire (kg)	Max. mass per axle (kg)	Maximum mass (kg)
1	18x8.50-10 4PR HS610 (Industrial)	1.5 (147 KPa, 21 psi)	375 (827 lb)	650 (1433 lb)	1180 (2601 lb)
2	26x12.0-12 4PR HS610 (Industrial)	1.4 (137 KPa, 20 psi)	810 (1786 lb)	740 (1631 lb)	
1	18x8.50-10 4PR HS482 (Turf)	1.5 (147 KPa, 21 psi)	375 (827 lb)	650 (1433 lb)	1180 (2601 lb)
2	26x12.0-12 4PR HSR82 (Turf)	1.4 (137 KPa, 20 psi)	810 (1786 lb)	740 (1631 lb)	
1	18x8.50-10 NHS 73 A4 TR355	1.5 (152 KPa, 22 psi)	354 kg (780 lb)	650 (1433 lb)	1180 (2601 lb)
2	26x12.00-12 NHS 4PR 99 A4 TR355	1.4 (137 KPa, 20 psi)	775 kg (1709 lb)	740 (1631 lb)	
1	18x8.50-10 NHS 73 A4 TR332	1.5 (152 KPa, 22 psi)	354 kg (780 lb)	650 (1433 lb)	1180 (2601 lb)
2	26x12.00-12 NHS 4PR 99 A4 TR332	1.4 (137 KPa, 20 psi)	775 kg (1709 lb)	740 (1631 lb)	

(*) 1 : Front axle, 2 : Rear axle

	<p>► Do not exceed the maximum permissible mass(Total/Front/Rear) declared by manufacturer. Overloaded operation may invalidate the warranty. <i>For further information, refer to the chapter 4-5-(4) in this manual.</i></p> <p>► If the front/rear tires have enough load capacity, the permissible mass on each axle can be restricted by the maximum permissible mass of the front/rear axle.</p>
---	--

(6) Adjusting Wheel tracks and tire replacement

- If the front wheel track is adjusted, check the clearances between tires and tractor body case by case. If necessary, the steering angle must be adjusted.


(Refer to the chapter 4-5-(8) "Adjusting steering angle" in this manual.)

- When adjusting rear wheel track, check the radial and lateral clearance between rear tire and tractor chassis as below.

- **A : 15mm (0.6 in) (Minimum)**

- **B : 30mm (1.2 in) (Minimum)**

- Depending on the rim & disk type, the front and rear wheel tracks may vary. For the details, contact your authorized local dealer.

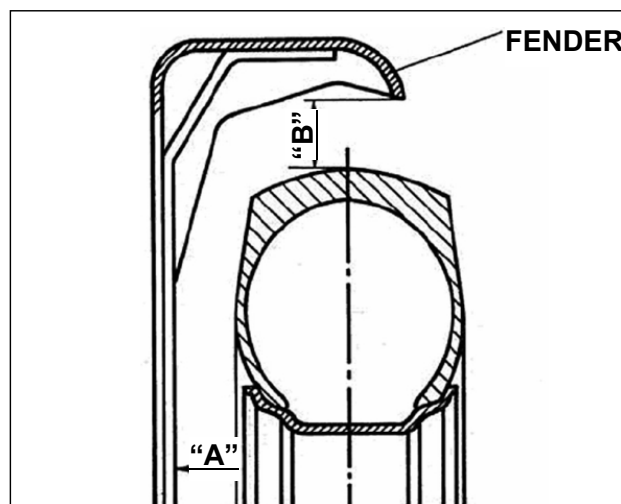

① Front wheel track

- 18x8.50-10 4PR with rim & disk (W7x10) – Fixed track
- Standard track: 916mm(36.1in.)

② Rear wheel track

- 28x12.0-12 4PR with rim & disk (W10.5Jx12) – Fixed track
- Standard track: 880mm(34.6in.)



Warning

- ▶ The tractor wheels are very heavy, PLEASE BE CAREFUL.
- ▶ When removing the wheels, proceed with extreme caution, use a suitable hoist and specific equipment to move the heavy parts.



Notice


- ▶ When adjusting the wheel track, pay attention to the direction of tire lugs. For agricultural tires, if it shows "Λ" **shape** when looked behind, it is correct.
- ▶ **Actual settings may vary depending on the brand of the rim and type of tire.**

(7) Using Front-end loader (optional)

① Safety precautions

- If attaching a non-approved front-end loader or heavy front-mounted implement, the engine block or front axle can be damaged or broken. Contact your authorized local dealer.
- Do not attach any non-approved front-mounted implement by manufacturer. If it is ignored, any warranty is not effective no longer.
- If an approved front-end loader is attached, multi-functional joystick lever in the right figure can provide you more convenient operation.
- When operating the tractor with a front-end loader, The center of gravity of the tractor may be higher, and the stability of the vehicle may be worse than unattached vehicle.
 - DO NOT drive fast on a traffic load. The rolling or tipping of the tractor can be happened easily.
 - When loading/unloading the bucket on a slope, move the tractor straight against the slope.
 - DO NOT try to approach a stiff slope.
 - Attach the rear ballast on the 3-point linkage or rear wheels(if applicable) to prevent overload of the front axle and to improve the stability of the vehicle.
- When working with front-end loader, the front visibility of the tractor may be worse than unattached vehicle. Make sure to observe people and other vehicles around the tractor.
- DO NOT allow people under the front-end loader while lifted.
- DO NOT allow people on the bucket.

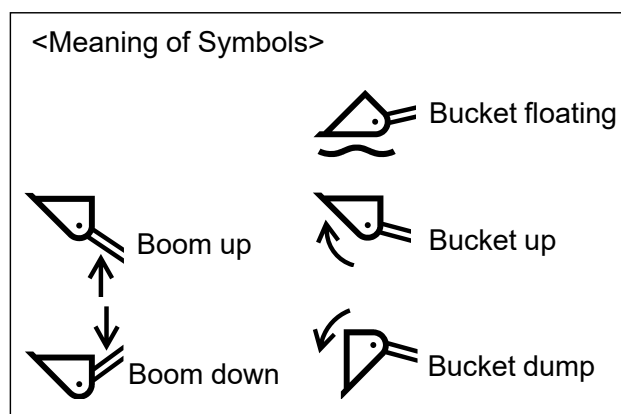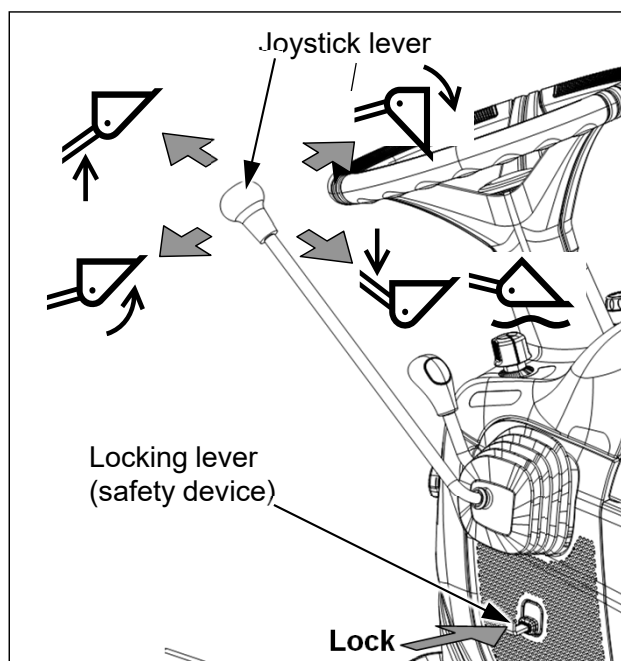

 Warning	<p>TO AVOID PERSONAL INJURY !</p> <ul style="list-style-type: none"> ▶ After using the front-end loader, secure the locking lever to the lock position. ▶ When leaving the tractor, lower down the front-end loader on the ground. ▶ Do not lift the front-end loader to a height from which objects may fall or roll onto the driver. ▶ Use always the correct attachment (grab forks, buckets.. etc.) for the specific task to perform and ensure that the load is securely kept in place.
--	---




Caution

PRE-OPERATION CHECK, REAR BALLAST !



- For tractor stability and operator's safety, when attaching a front-end loader or an attachment, rear ballast should be added to the rear of the tractor in the form of implements as counter weight like Back Hoe, Rotary Tiller, etc. The amount of rear ballast will be depend on the application.
- Also, you should detach the front ballast weight plates and bracket(if fitted) when attaching the front-end equipment.

② Connection of hydraulic hoses

- Refer to the following instructions to install the hydraulic hoses.
- Boom lowering – coupler ①
Boom lifting ----- coupler ②
Bucket lifting ----- coupler ③
Bucket dump ----- coupler ④
- The thread specification of valve outlet ports, pipe end adapter and quick coupler;
 - valve outlet ports : PF 3/8
 - pipe end adapters : PT 3/8
 - quick couplers : ISO 5675 3/8"
- Use suitable quick couplers for hose connection. If possible, contact your authorized local dealer.
- After connecting the hoses, start the engine and check the leakage of the hydraulic lines.
- Operate 2~3 times fully all the hydraulic actuators on a newly attached front implement to exhaust air from the system.

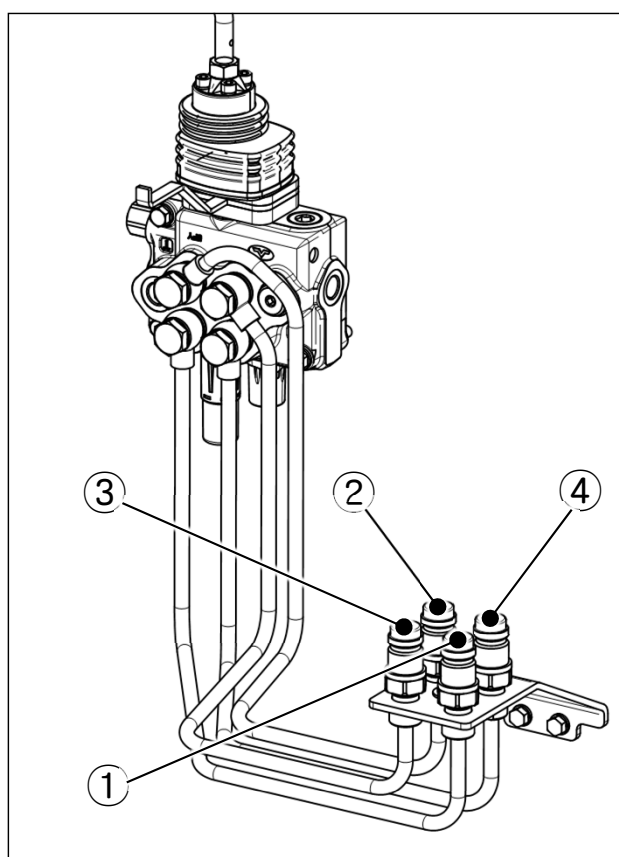


NOTICE: After lowering the front implement, check if the transmission oil level is marked between “Min” and “Max” scale on the oil gauge. If necessary, add new oil.

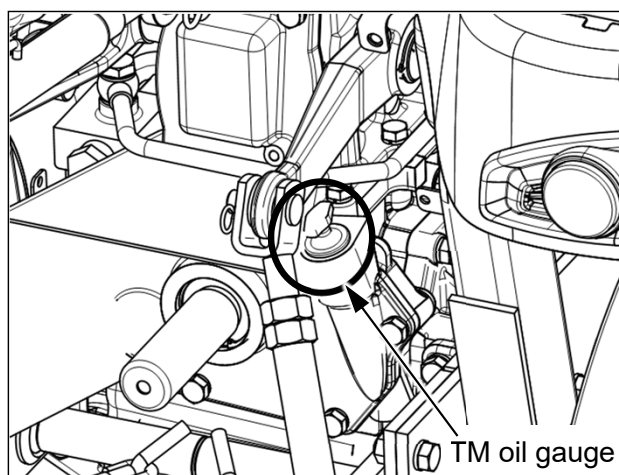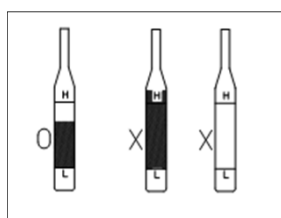

③ Attaching points for Front-end loader

- When attaching the front-end loader for all models, refer to the drawings as below.

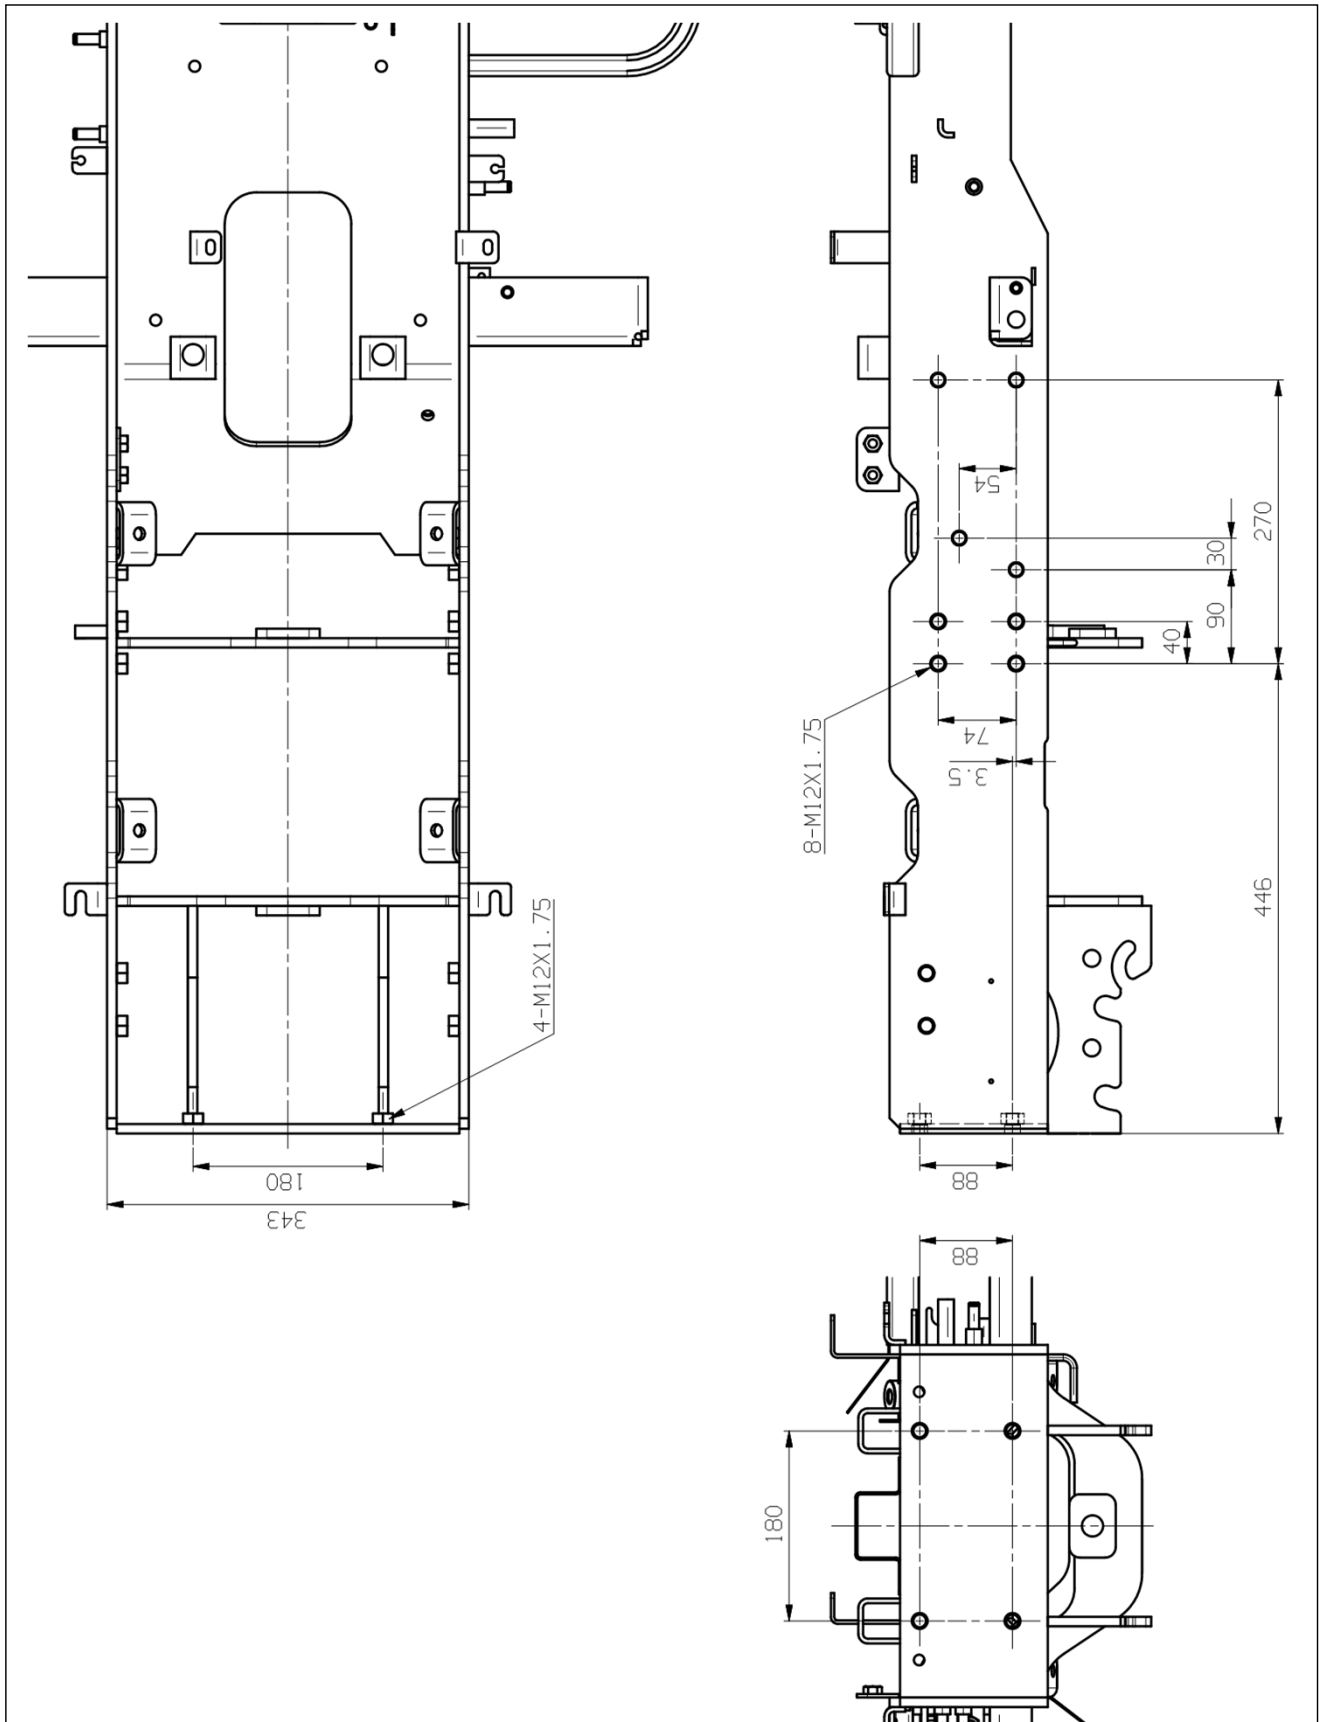

(8) Adjusting Steering Angle

- The adjustment of steering angle for this model is not available. Your tractor has fixed maximum steering angle.
- Maximum steering angle: *See chapter 6, "Dimension and Specification" in this manual.*

(9) Recommended Maximum Specification of Implements

- When attaching an implement to the tractor, refer to the following specifications recommended for the maximum capacity of each implement. DO NOT attach any bigger implement than these specifications. For other implements not mentioned, contact your authorized local dealer.

No.	Implements	Specification	MT122 / MT125
1	Trailer	Max vertical load	See chapter 4-5-(3) in this manual.
2	Mid mower	Max cutting width	1524 mm (60 in.)
3	Rear mounted mower	Max cutting width	1524 mm (60 in.)
4	Flail Mower	Max cutting width	1524 mm (60 in.)
5	Sickle Bar	Max cutting width	1524 mm (60 in.)
6	Rear mounted Sprayer	Total weight	150 kg (331 lb.)
7	Pull type Sprayer	Total weight	See chapter 4-5-(3) in this manual.
8	Rotary Tiller	Max tilling width	1280 mm (50.0 in.)
9	Furrow Plow	Max tilling width	-
10	Bottom Plow	Maximum size	1100 mm (43.0 in.)
11	Disk harrow (pull type)	Max working width	-
12	Chisel Plow	Max working width	-
13	Front grader	Max working width	1400 mm (55 in.)
14	Rear blade	Max working width	1372 mm (54 in.)
15	Front loader	Max lift capacity (Bucket pivot point)	402 kg (886 lb)
16	Landscape Rake	Max working width	1524 mm (60 in.)
17	Box blade	Max working width	1280 mm (50 in.)
18	Backhoe	Max weight (W/O Bucket)	300 kg (661 lb)
19	Snow Blade	Max. working width	1370 mm (54 in.)
20	Snow Blower	Max. working width	1370 mm (54 in.)

(10) Ballasting weights (optional)

Tractor ballasting

For sufficient traction and maximum performance in heavy draft operations, and to counterbalance rear-mounted equipment, weight should be added to the tractor in the form of liquid ballast, cast iron weights, or a combination of both. Only enough weight should be added to provide good traction and stability. Adding more weight than is needed results in unnecessary soil compaction, increased rolling resistance, and higher fuel consumption.

NOTE: *When adding weight to the tractor, verify the tire pressure is correct. See chapter 4-5-(5), "Tires and Load capacity" in this manual for tire pressures and permissible loads.*

Front end ballast may be required for stability and steering control when weight is transferred from the front wheels to the rear wheels as an implement is raised by the tractor's three-point hitch.

Use the following as a general guide:


- Ballast the tractor (less implement) so that approximately one-third of the tractor weight is on the front wheels. For optimum traction, tractors equipped with 4WD should be ballasted so that **40 – 45%** of machine weight is on the front wheels.
- When a rear mounted implement is raised to the transport position, the front wheel reaction should be at least **20%** of tractor weight.
- Add additional front end ballast as required for stability during operation and transport. Tractor front end ballast may not always maintain satisfactory stability if the tractor is operated at high speed on rough terrain. Reduce tractor speed and exercise caution under these conditions.
- When using front-mounted equipment, add weight to the rear axle to maintain good traction and stability. Front-mounted equipment varies in weight. Refer to equipment manual for ballasting.

Weighting limitations


The weighting limitations that follow are limitations only. They do not imply that the tractor should be weighted to attain the weights given. Use only enough weight to obtain good performance.



① Front ballasting weights (optional)

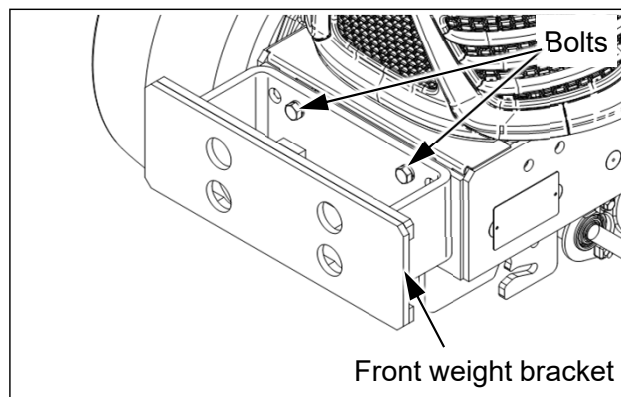- It is used to balance the front/rear weight of the tractor.
- Install the front weight bracket and tighten the locking bolts.

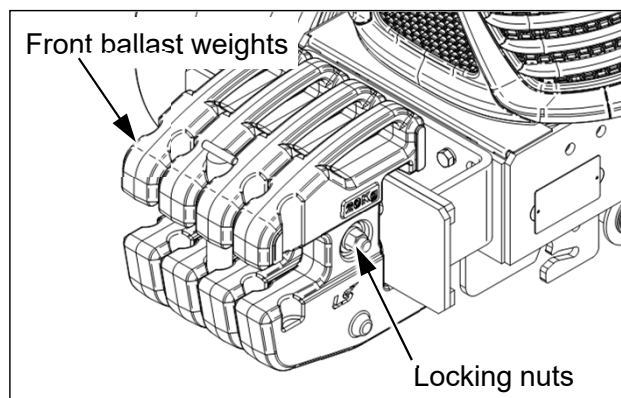

- Insert the front ballast weights onto the bracket one by one and tighten the locking bolts and nuts.
Front ballast bracket: **10kg**.
Front ballast weights: **20kgx4ea=80kg**.
- When assembling the ballast weights, comply with the reverse procedure of disassembly.
- For additional ballast weights and adjustments, contact your authorized local dealer.



 Warning	<p>Heavy parts!</p> <p>► The ballast weights are very heavy. When removing/attaching the ballast weights, please be careful and use a suitable hoist and specific equipment to move the heavy parts. Failure to comply could result in death or serious injury.</p>
 Caution	<p>► You should detach the front ballast weight plates and bracket(if fitted) when attaching the front-end equipment.</p>

② Rear ballasting weights

- Rear wheel weights

NOTE: *Rear wheel weights are not available.*

- Rear ballast weights on the 3-point linkage

- To mount the ballast weights on the rear of the tractor, an additional weight bracket must be installed on the rear three-point hitch.
- Contact your authorized local dealer for the bracket.
- If you hard to get the bracket, you can use an equivalent weight rear implement as the ballasting weight.




Warning

Heavy parts!

- The ballast weights are very heavy. When removing/attaching the ballast weights, please be careful and use a suitable hoist and specific equipment to move the heavy parts. Failure to comply could result in death or serious injury.

(11) Working in hazardous area

- **Level of protection against hazardous substances:**
- **For roll-bar model**, it does NOT provide any protection against hazardous substances. Do not use this tractor with crop sprayers in hazardous area.

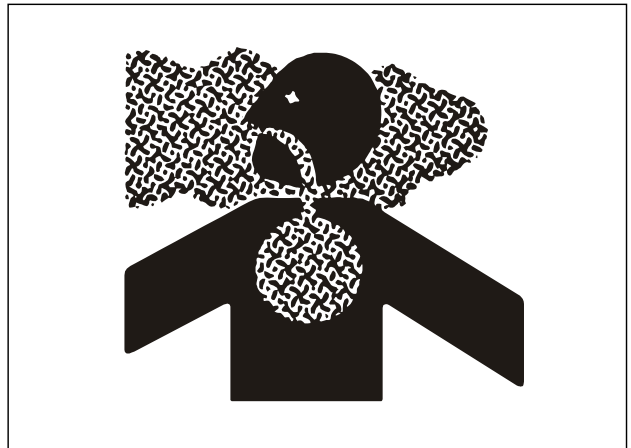

4-6. Driving speed

- Driving speed of the tractor or revolution speed of the PTO shaft must be selected appropriately depending on the type of work, tires or ground conditions. For safety, operate the tractor at a suitable speed. (Unit : Km/h -> Mile/h)

HST Type

Range gear	LOW	HIGH
Forward	0 ~ 5.9 Km/h (0 ~ 3.67mph)	0 ~ 14.0 Km/h (0 ~ 8.70 mph)
Reverse	0 ~ 3.7 Km/h (0 ~ 2.30 mph)	0 ~ 8.4 Km/h (0 ~ 5.22 mph)

Note) Engine speed : 3000 rev/min, Dynamic load radius : 311mm (12.24 in).

5. Lubrication and Maintenance

5-1. General information




- Adequate lubrication and maintenance on a regular schedule is vital to maintaining your equipment. To ensure long service and efficient operation, follow the lubrication and maintenance schedules outlined in this manual. The use of proper fuels, oils, grease and filters, as well as keeping the systems clean, will also extend tractor and component life.

NOTICE: While any company can perform necessary maintenance or repairs on your equipment, we strongly recommend that you use only authorized local dealers and products that meet the given specifications. Improperly or incorrectly performed maintenance and repair voids the equipment warranty and may affect service intervals.

NOTICE: Always use genuine replacement parts, oils and filters to ensure proper operation, filtration of engine and hydraulic systems. See your authorized local dealer for additional oil quantities. Regular lubrication is the best insurance against delays and repairs. Proper lubrication will extend tractor life. Refer to the following charts for lubricants and service intervals.

NOTICE: Failure to complete the required maintenance at the recommended intervals can cause unnecessary downtime.




- The intervals listed in the Lubrication Chart are guidelines to be used when operating in normal conditions. Adjust the intervals for operating in adverse environmental and working conditions. The intervals should be shortened for sandy, dusty and extremely hot operating conditions.

 Warning	<p>► Avoid injury!</p> <ol style="list-style-type: none">1. Disengage all drives.2. Engage parking brake.3. Lower all attachments to the ground, or raise and engage all safety locks.4. Shut off engine.5. Remove key from key switch.6. Wait for all tractor movement to stop. <p>Failure to comply could result in death or serious injury.</p>
 Warning	<p>► Entanglement hazard!</p> <p>Disengage the Power Take-Off (PTO), turn off the engine, and remove the key. Wait for all movement to stop before leaving the operator's position. Never adjust, lubricate, clean, or unplug tractor with the engine running.</p> <p>Failure to comply could result in death or serious injury.</p>
 Warning	<p>► Illustrations in this manual may show protective shielding open or removed to better illustrate a particular feature or adjustment.</p> <p>Replace all shields before operating the tractor.</p> <p>Failure to comply could result in death or serious injury.</p>

- Always clean the area around dipsticks, fill caps, and check plugs when checking fluid levels. Failure to clean these areas may allow contamination to enter the system. Drain, flush and refill the system any time you suspect it is contaminated.

(1) Tightening Torque for normal assembly

- Check if the bolts or nuts of each part are loosened. If necessary, tighten it again as referring to the following table. For additional hardware, contact your authorized local dealer.


Strength class marks		
4T	8T	10.9T
		

Spec.	Tool (mm)	Strength	Hardware tightening torque, Unit : N.m(lbf-ft)		
			Re-use	Permanent	Maximum
M8 X 1.25	12	8.8	20(15)	24(18)	26(19)
		10.9	28(21)	34(25)	39(28)
		12.9	33(25)	40(29)	45(33)
M10 X 1.25	17	8.8	43(31)	51(38)	56(42)
		10.9	61(45)	73(54)	83(61)
		12.9	71(53)	86(63)	97(71)
M12 X 1.25	19	8.8	75(56)	90(67)	100(74)
		10.9	108(80)	129(95)	147(108)
		12.9	126(93)	151(112)	171(126)
M12 X 1.75	19	8.8	68(50)	82(60)	90(67)
		10.9	98(72)	117(86)	133(98)
		12.9	114(84)	137(101)	155(114)
M14 X 1.5	24	8.8	119(87)	142(105)	157(116)
		10.9	170(125)	204(150)	231(170)
		12.9	198(146)	238(176)	270(199)
M16 X 1.5	24	8.8	180(133)	216(159)	238(176)
		10.9	257(190)	309(228)	350(258)
		12.9	301(222)	361(266)	409(301)
M18X 1.5	27	8.8	271(200)	325(240)	358(264)
		10.9	375(276)	450(332)	510(376)
		12.9	438(323)	526(388)	595(439)
M20 X 1.5	30	8.8	379(279)	454(335)	500(369)
		10.9	523(386)	628(463)	712(525)
		12.9	612(451)	734(542)	832(613)
M22 X 1.5	32	8.8	506(373)	608(448)	668(493)
		10.9	700(516)	840(619)	952(702)
		12.9	818(603)	982(724)	1112(820)
M24 X 2	36	8.8	643(474)	771(569)	848(625)
		10.9	888(655)	1066(786)	1208(891)
		12.9	1038(766)	1246(919)	1411(1041)
M30 X 2	46	8.8	1311(967)	1573(1160)	1729(1276)
		10.9	1812(1336)	2174(1604)	2465(1818)
		12.9	2118(1562)	2542(1875)	2878(2123)

Identification markings

Metric hex bolt head

1. Manufacturer's identification
2. Property class

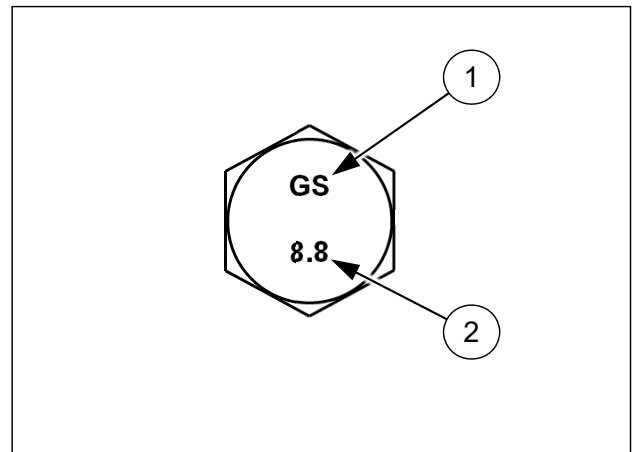


(2) Standard torque data for hydraulics

Installation of adjustable fittings in straight thread O-ring bosses

1. Lubricate the O-ring by coating it with a light oil or petroleum.
2. Install the O-ring in the groove adjacent to the metal backup washer which is assembled at the extreme end of the groove.
3. Install the fitting into the straight thread boss until the metal backup washer contacts the face of the boss.

NOTICE: Do not over tighten and distort the metal backup washer.


4. Position the fitting by turning out (counterclockwise) up to a maximum of one turn.
5. Holding the pad of the fitting with a wrench, tighten the locknut and washer against the face of the boss.

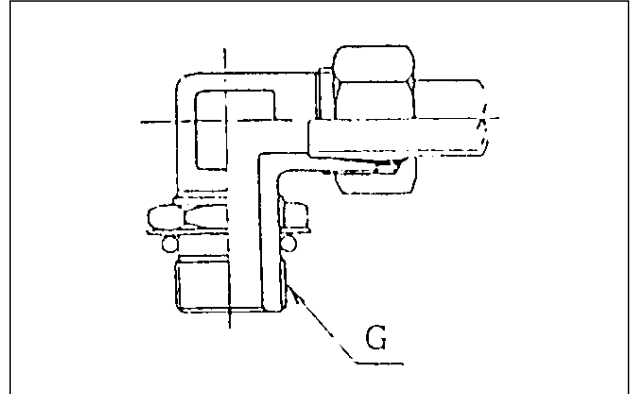



Standard torque data for hydraulic tubes and fittings


NOTICE: These torques are recommended for hydraulic tubes of your tractor. When assemble the hydraulic lines, refer to the following torques on each application. Before installing and torquing pipe fittings, Clean the threads and faces.


Thread	Torque		Figure	Remarks
	N · m	{kgf · m}		
G 1/4	49~69	5~6		1. Materials of threaded hole: Cast or steel.
G 3/8	59~69	6~7		
G 1/2	78~88	8~9		

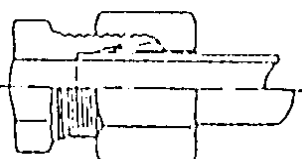
Pipe spec.		Pre-torque		Tightening torque		Figure	Remarks
Outer dia.	Thickness	N · m	{kgf · m}	N · m	{kgf · m}		
8	1~1.5	29~34	3~3.5	29~34	3~3.5		Pipe material: OST
10	1~1.5	29~39	3~4	34~49	3~3.5		
12	1~2.5	44~59	4.5~6	49~69	5~7		
15	1~2.5	69~98	7~10	88~118	9~12		
18	1.5~2	118~147	12~15	146~167	15~17		
20	2~3	147~177	15~18	167~206	17~21		
22	2	177~206	18~21	196~235	20~24		
27.2	2.8	323~343	33~35	343~373	35~38		SGP

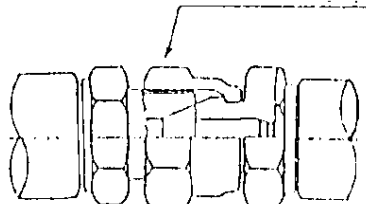Thread	Torque		Figure	Remarks
	N · m	{kgf · m}		
G 1/8	15	1.5		
G 1/4	25	2.6		
G 3/8	49	5		
G 1/2	59	6		
G 3/4	118	12		

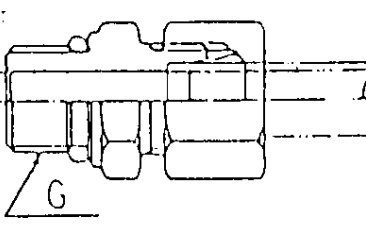Thread	Torque		Figure	Remarks
	N · m	{kgf · m}		
G 1/8	20~25	2~2.5		1. Materials of threaded hole: Cast or steel.
G 1/4	39~49	4~5		
G 3/8	49~59	5~6		
G 1/2	59~69	6~7		
G 3/4	118~127	12~13		

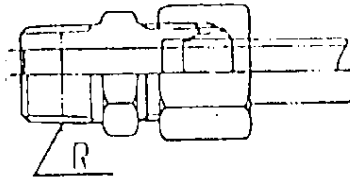Thread	Torque		Figure	Remarks
	N · m	{kgf · m}		
G 1/8	15	1.5		1. Apply seal tape before assembling 2. Threaded hole: Taper or parallel steel or cast
G 1/4	25	2.6		
G 3/8	49	5		
G 1/2	59	6		

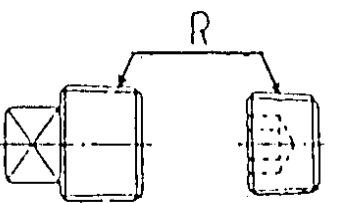Thread	Torque		Figure	Remarks
	N · m	{kgf · m}		
G 1/8	15	1.5		1. Apply seal tape before assembling 2. Threaded hole: Taper or parallel steel or cast
G 1/4	25	2.6		
G 3/8	49	5		
G 1/2	59	6		
G 3/4	118	12		

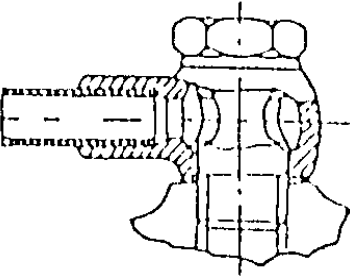Thread	Holes	Torque		Figure	Remarks
		N · m	{kgf · m}		
G 1/4	2	39~44	4.0~4.5		1. Materials of threaded hole: Cast or steel. 2. Assemble with packing washers. 3. Holes: Number of holes on the same section plane.
G 3/8	2	47~54	4.8~5.5		
	4	39~44	4.0~4.5		
G 1/2	4	47~54	4.8~5.5		
G 3/4	4	59~69	6.0~7.0		
M 12	2	20~27	2.0~2.8		
M 14	2	34~39	3.5~4.0		
	4	29~34	3.0~3.5		
M 16	2	49~59	5.0~6.0		
	4	39~44	4.0~4.5		

(3) General specification - Diesel fuel

- Only use diesel fuel that conforms to “**Lubricants and Capacity**” in this manual or equivalent in your engine. Do not use any other low grade diesel fuel.

NOTICE: *Use of other low grade diesel fuels will result in loss of engine power, high fuel consumption, and damage to the exhaust after-treatment system (if equipped).*

NOTE: *When operating the tractor in very cold climates, the use of winter blended fuel is permitted for a short period of time. See your fuel supplier for winter fuel requirements in your area.*

Fuel conditioner

- Diesel fuel conditioner is available from your authorized local dealer. Instructions for the use of the fuel conditioner are on the container.
- The use of diesel fuel conditioner will:
 - Clean fuel injectors, valves, and manifolds for increased service life.
 - Disperse insoluble gummy deposits that form in the fuel system.
 - Separate moisture from the fuel.
 - Stabilize fuel in storage.

NOTICE: *Use only manufacturer approved biocide additives to prevent damage to the exhaust after-treatment system (if equipped).*

(4) Biodiesel fuel

1. General Description of Biodiesel

(a) Biodiesel is a renewable, oxygenated fuel made from agricultural and renewable resources such as soybeans or rapeseeds. Biodiesel is a fuel comprised of methyl or ethyl ester-based oxygenates of long chain fatty acids derived from the transesterification of vegetable oils, animal fats, and cooking oils. It contains no petroleum-based diesel fuel but can be blended at any level with petroleum-based diesel fuel. In case it is not blended with petroleum-based diesel fuel such biodiesel is referred to as “B100”, which means that it consists of 100% (pure) biodiesel. However, most common biodiesel is blended with conventional (petroleum-based) diesel fuel. The percentage of the blend can be identified by its name. For example, B7 consisting of 7% biodiesel and 93% conventional petroleum-based diesel fuel and B20 consisting 20% biodiesel and 80% conventional diesel fuel. Raw pressed vegetable oils are not consider to be biodiesel.

(b) Advantages of Biodiesel:

- Biodiesel produces less visible smoke and a lower amount of particulate matter.
- Biodiesel is biodegradable and nontoxic.
- Biodiesel is safer than conventional diesel fuel because of its higher flash point.

Following the increased interest in the reduction of emissions and the reduction of the use of petroleum distillate based fuels; many governments and regulating bodies encourage the use of biodiesel.

(c) Disadvantages of Biodiesel:

Concentrations that are higher than 7% of biodiesel (higher than B7) can have an adverse affect on the engine's performance, its integrity and/or durability. The risk of problems occurring in the engine increases as the level of biodiesel blend increases. The following negative affects are exemplary and typical for the usage of high concentrated biodiesel blends:

- Biodiesel can accelerate the oxidation of Aluminum, Brass, Bronze, Copper and Zinc.
- Biodiesel damages and finally seeps through certain seals, gaskets, hoses, glues and plastics.
- Certain natural rubbers, nitride and butyl rubbers will become harder and more brittle as degradation proceeds when used with biodiesel.
- The deteriorated biodiesel creates deposits in the engines.
- Due to its natural characteristic, biodiesel will decrease the engine output by approximately 2 percent (in case of B20) comparing to conventional (petroleum-based) diesel fuel.
- The fuel consumption ratio will increase by approximately 3 percent (in case of B20) comparing to conventional diesel fuel.

2. Approved Engines

(a) The engine used in this model can be operated with biodiesel of concentrations up to B20. In case of using biodiesel fuel up to B7 concentrations, no special preparations have to be made, and the original operating conditions and service intervals are applied as stated in this manual. In case of running this engine with biodiesel of concentrations above B7 up to B20, the required operating conditions have to be observed. (See below No. 4)

3. Approved Fuel

- (a) In case of using biodiesel (only concentrations up to B20) fuel should comply with the below recommended standards. However, raw pressed vegetable oils are not considered to be biodiesel and are not acceptable for use as fuel in any concentration in this engine.
- En14214 (European standard) and/or ASTM D6751 (American standard). In North America, biodiesel and biodiesel blends must be purchased from the BQ-9000 accredited producers and BQ-9000 certified distributors.
- (b) If the concentration is B7 or lower, it does not require any special preparations or operating conditions. However, please strictly follow the standard operating conditions included in this manual.

4. Conditions for the Operation with Biodiesel (above B7 through B20)

- (a) The original service interval of the below stated services as indicated in this manual should be halved:
- *Replacement interval of the engine oil filter, engine oil and the fuel filter.*
 - *Cleaning interval of the water separator.*
 - *Draining interval of the fuel tank.*
- (b) Have the fuel injector inspected and cleaned every 1000 hours. *It is strongly recommended to replace the fuel hoses after 2000 operating hours or 2 years* whichever comes first same as conventional diesel fuel used.
- (c) Replacement of the following parts before using the recommended biodiesel: (only for the operation with biodiesel above B10 through B20)
- *O-ring for the water separator (if fitted)*
- (d) Please use only biodiesel fuel that is appropriate to the intended operation environment of the engines. This especially applies if the operating ambient temperature falls below 0 degree centigrade.
- (e) In particular, operation with biodiesel requires daily maintenance as follows:
- Please daily check the engine oil level. If the oil level rises above the oil level of the previous day, the engine oil needs to be immediately replaced.
 - Please daily check the water level of the water separator, If the water level rises above the “max” indicator, an immediate drain of the water separator is required.
- (f) *Biodiesel blends up to B20 can only be used for a limited time of up to 3 months of the date of biodiesel manufacture.* Therefore biodiesel needs to be used at latest within 2 months from the time of filling the tank or within 3 months from the time of production by the fuel supplier, whichever comes first.
- (g) Before a long-term storage without operating the engine, the biodiesel needs to be drained out completely and the engine has to be run for 30 minutes with conventional diesel fuel.

(5) Refueling the tractor



Warning


Fire hazard!



- ▶ When handling diesel fuel, observe the following precautions:
 1. Do not smoke. Keep any type of flame away.
 2. Never fill the tank when the engine is running.
 3. Wipe up spilled fuel immediately. Always tighten the fuel tank cap securely. Failure to comply could result in death or serious injury.

- The fuel tank filler cap① is installed as shown in the right-hand figure. Observe the following:
 1. Before removing the cap, wipe all dust and dirt from around the cap to prevent debris from falling into the tank while filling.
 2. Use an approved fuel container and check the inside of the container periodically for cleanliness.
For fuel tank capacity, see chapter 5-3, "Lubricants and Capacity" or the last page in this manual.
 3. If there is no filter on the storage tank or fuel container, filter the fuel through a 100-mesh or finer screen when filling the tractor fuel tank.
 4. Keep the tractor tank as full as possible (without filling to capacity) to minimize condensation. Fill to the bottom of the filler neck to allow room for expansion.

NOTE: It is a good practice to fill the fuel tank at the end of each day, as this will reduce overnight condensation.

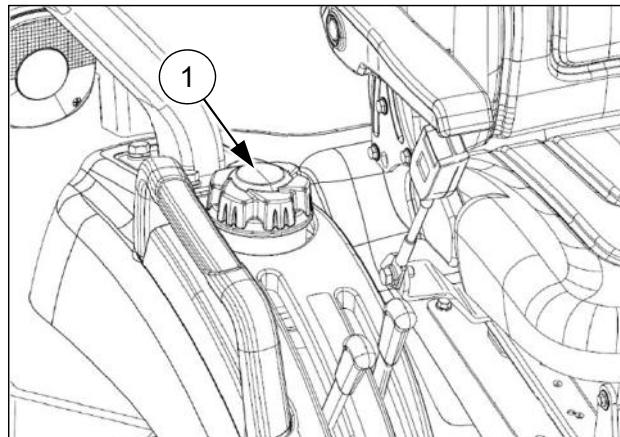

NOTE: The fuel cap is a vented-type. Use only an approved replacement cap to prevent fuel system-related problems.

- Do not mix gasoline, alcohol or blended fuels to diesel fuel. These mixtures are explosive in fuel tank.
- Never remove the fuel cap or refuel with the engine running or hot.
- Maintain control of the fuel filler nozzle when filling the fuel tank.
- Never use fuel for cleaning purposes.
- Arrange fuel purchases so that summer grade fuels are not held over and used in the winter.
- Before handling Bio-diesel, refer to the chapter 5-1-(4) in this manual.

(6) Change engine coolant to Organic Acid Technology (OAT) coolant

- Depending on the date of manufacture or engine type, your cooling system may be equipped with conventional ethylene glycol coolant or an Organic Acid Technology (OAT) coolant solution. You can easily identify **OAT coolant solution** by its yellow color. You should never mix the coolant types.
- But, the use of OAT coolant solution for your model has not yet been approved by the engine manufacturer. ***We strongly recommend not to use OAT coolant solution.***

NOTICE: NEVER mix OAT coolant with conventional ethylene glycol coolant.

Definitions

Conventional coolant:

A coolant that relies on inorganic inhibitors such as silicates, nitrites, and phosphates for corrosion and cavitation protection.


Organic Acid Technology (OAT) coolant:

A coolant that relies on inhibitors such as organic acid salts for corrosion and cavitation protection.

(7) Access for maintenance

① Opening Hood

- For safety, the hood must be closed and correctly latched before operating the tractor.
- The hood is hinged at the front. A gas cylinder is attached inside to support the hood for easy access to the engine.
- To open the hood, push the hood opening knob and lift up the hood.
- To close the hood, lay down the hood and push it down slightly to lock position.


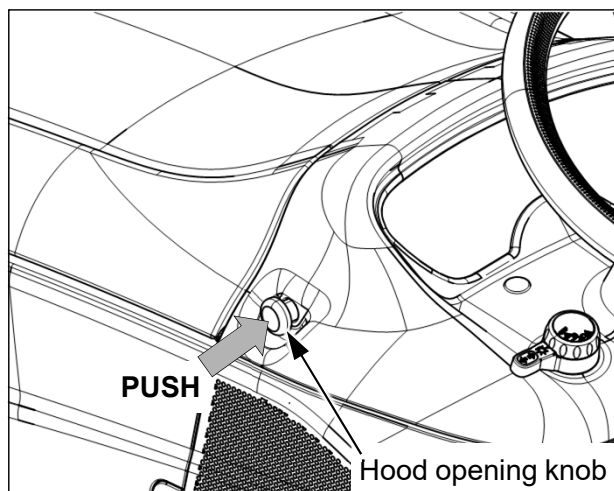


Caution

- ▶ After the engine has stopped completely, you have to open the hood for check.
- ▶ If you open the hood while the engine is running, it can cause serious damage by the intended or unintended access to rotating shaft, pulley, V-belt, cooling fan of the engine or engine application parts. PLEASE BE CAREFUL.

② Jacking points

- The jacking points for maintenance is depending on serviced parts case by case. Do not hesitate to contact your authorized local dealer for asking.
- Do not use the front axle assembly or steering linkage and cylinder for jacking point. These components have some rotating pivots and/or does not have enough structural strength.
- For general maintenance, use flat surface under the engine frame end for jacking point, and additionally connect the front part of the engine frame to the suitable hoist for safety.
- For rear jacking points, two flat surfaces under the rear axle housing are recommended, and additionally use the top-link bracket and its pin for lifting point after removing the top-link.

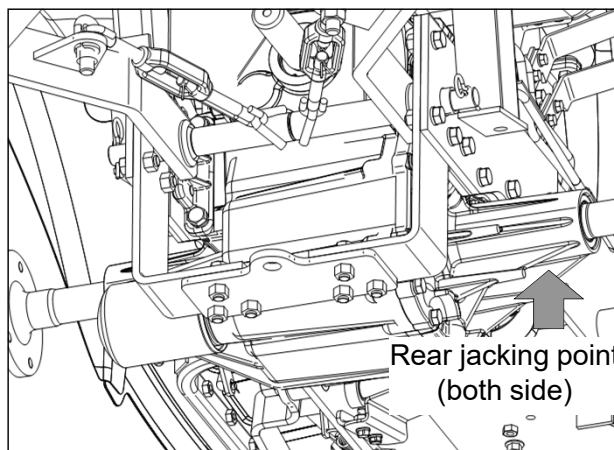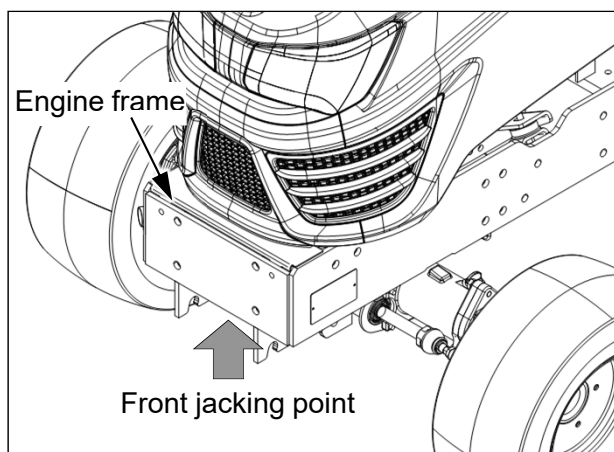


Caution

- ▶ When lifting the rear of the tractor, apply chocks to the slots between front axle and engine frame symmetrically to prevent the tractor from rolling.

5-2. Maintenance Chart

- Periodic maintenance not only extends the service life of the tractor but also serves to ensure safe operation. **The maintenance chart shows the standard service intervals. If you notice any abnormal symptoms, make sure to carry out the inspection and maintenance work, regardless of recommended service intervals** in this maintenance chart.
- Appropriate service intervals vary depending on the usage and operating conditions. Contact your authorized dealer for the most appropriate service intervals of your local work conditions.

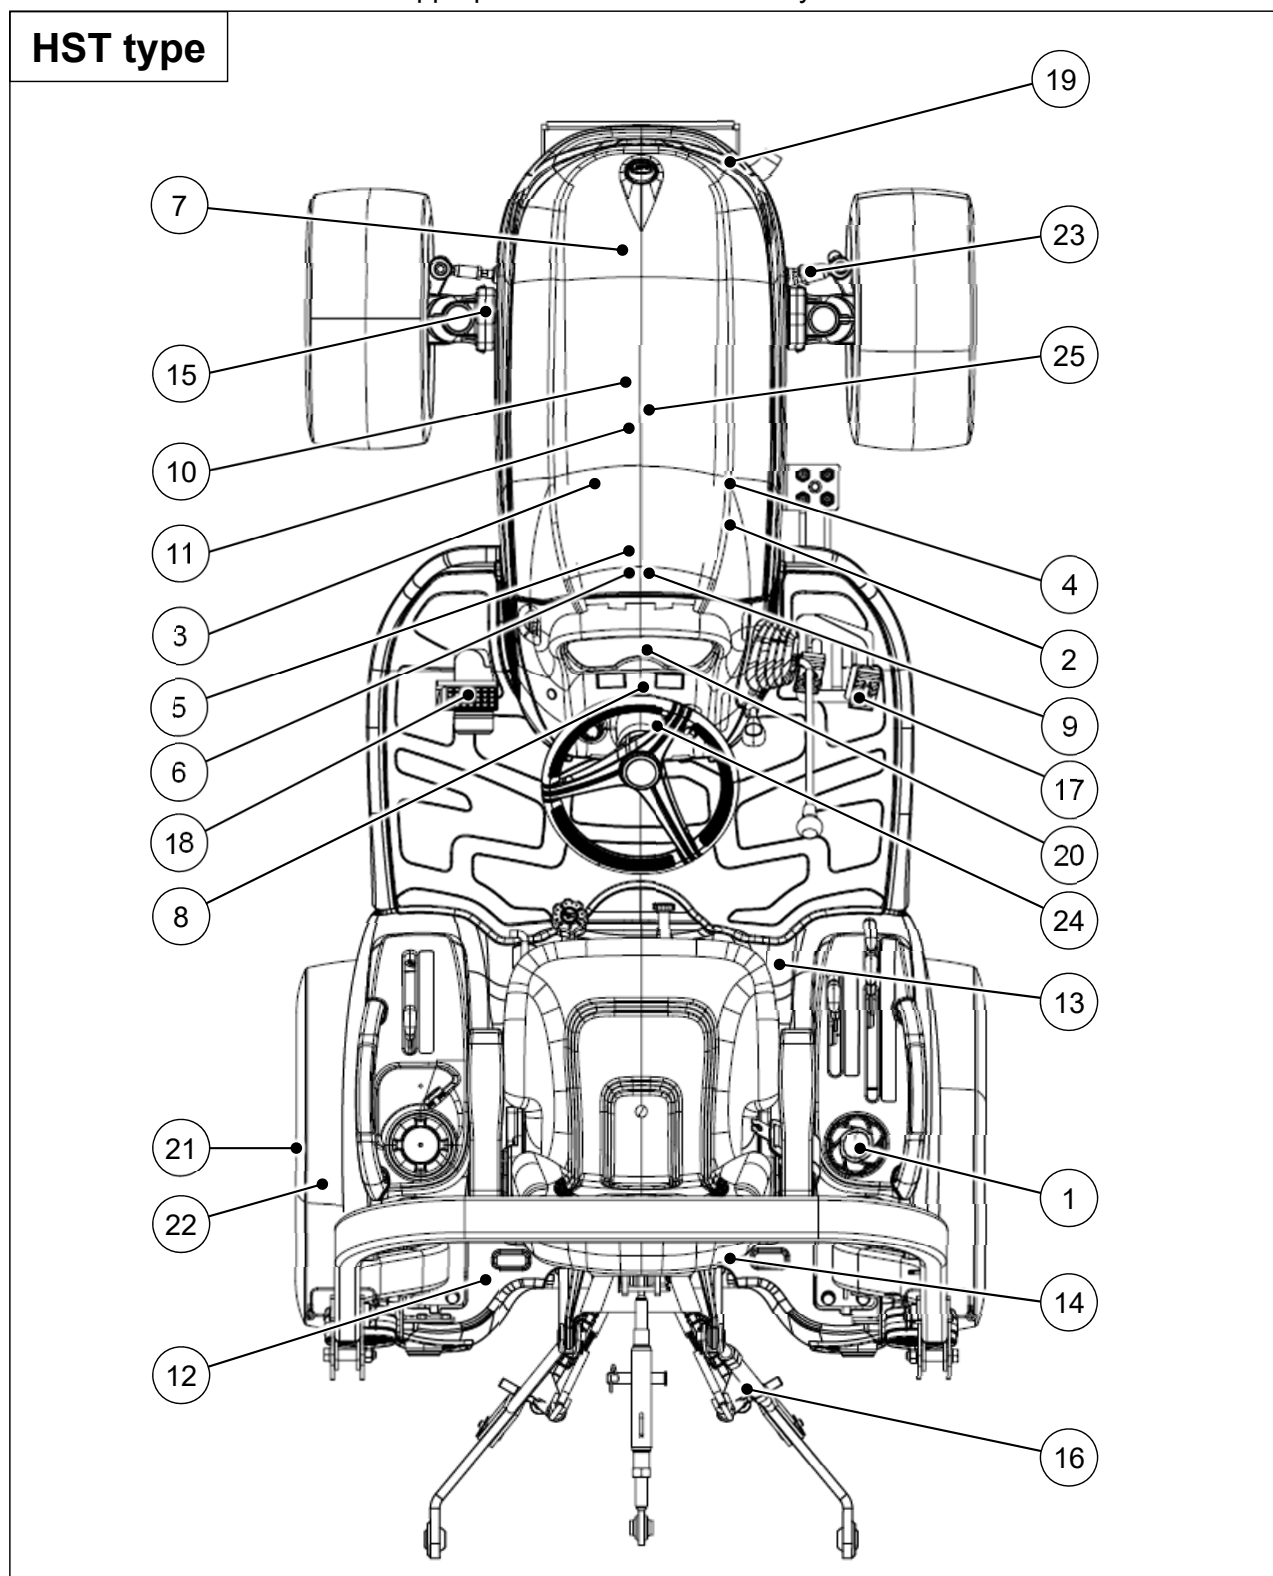

HST type

No.	Checking Parts	Page No.	Check period (Every ____ hr)						
			Daily	50	250	500	1000	1500	2-yr
1	Fuel tank	5-18	▲						
2	Fuel filter	5-32	▲			●			
3	Engine oil	5-16, 5-17, 5-27	▲	★	●				
4	Engine oil filter	5-16, 5-27		★	●				
5	Engine coolant	5-20, 5-35	▲						●
6	Radiator screen	5-21, 5-25	▲	■					
7	Air cleaner	5-20, 5-26, 5-30	▲	■	●				
8	Battery	5-26		▲					
9	Fan belt tension	5-29			▲				
10	Valve clearance	5-33					▲		
11	Fuel injection nozzle	5-34						▲	
12	Hydraulic oil filter	5-16, 5-28		★	●				
13	HST filter	5-16, 5-28		★	●				
14	Transmission oil	5-25, 5-31		▲		●			
15	Front axle oil	5-26, 5-31		▲		●			
16	3-Point linkage	5-25		▲					
17	HST pedal neutral	5-24	▲						
18	Brake pedal play	5-23	▲						
19	Turn signal lights, Lights, Horn	5-19	▲						
20	Instrument panel & Indicators	5-18	▲						
21	Bolts and Nuts	5-22	▲						
22	Tire air pressure	5-21	▲						
23	Toe-in	5-30			▲				
24	Hydraulic hoses	5-26		▲					
25	Crankcase breather	5-34						▲	

★ First Replacement ● Replacement ▲ Check, Adjustment and Supply ■ Clean up

5-3. Lubricants and Capacity

Lubricants	Capacity	International standard	Recommended products
Engine coolant	3.3L (0.9U.S.gals)	ASTM D6210, D4985	Soft water (50%) + Anti-freeze (50%)
Fuel	25L (6.6U.S.gals)	- ASTM D975 No. 2 - EN590: 96 - BS2869-A1 or A2	Ultra low sulfur diesel fuel, below 15 ppm
Engine oil	2.9L (0.8U.S.gals)	API CF-4 or CI-4	KIXX DL (Maker : GS Caltex)
Transmission oil (for hydraulic lift and steering system)	11.5L (3.0U.S.gals) 13.0L (3.4U.S.gals)(*) 17.7L (4.7U.S.gals)(**)	API GL4 ISO VG 32/46	LSTH400G (Maker : GS Caltex)
Front axle oil	2.0L (0.5U.S.gals)	API GL4 SAE 80W	EPK 80W90 (Maker : S-OIL TOTAL co. Ltd.)
Grease (Front axle holder, 3-point linkage, etc)	Proper amount	NLGI 2	MAHWAK Multi purpose or MAHWAK All purpose (Caltex)

(*) Oil quantity when installing the front-end loader initially or newly.

(**) Oil quantity when installing the front-end loader and backhoe initially or newly.

NOTE: When installing the front-end loader and backhoe initially or newly, add new transmission oil while checking the T/M oil gauge after preliminary operation for filling the hydraulic lines with oil.

RECOMMENDED ENGINE OIL VISCOSITIES

The correct engine oil viscosity grade is dependent upon ambient temperature. Refer to the below chart when selecting engine oil for your tractor.

In areas where prolonged periods of extreme temperatures are encountered, local lubricant practices are acceptable ; such as the use of SAE 5W 30 in extreme low temperatures or SAE 50 in extreme high temperatures.


Ambient Temperature °C(°F)	-30 (-22)	-25 (-13)	-20 (-4)	-15 (5)	-10 (14)	-5 (23)	0 (32)	10 (50)	20 (68)	30 (86)	40 (104)
Oil Viscosity	<div> <div>SAE 5W-20</div> <div>SAE 10W-30</div> <div>SAE 15W-40</div> </div>										

5-4. First 50 hour check

- After using first 50 hours, contact your authorized local dealer for maintenance if possible.
 - Replace engine oil and engine oil filter. (⇒ Refer to Every 250 hour check. See *page 5-27*)
 - Replace hydraulic oil filter. (⇒ Refer to Every 250 hour check. See *page 5-28*)
 - Check transmission / rear axle / hydraulics oil level
 - Check front axle oil level
 - Check and adjust parking brake
 - Check torque of exhaust manifold bolts
 - Check and adjust V-belts and tension
 - Tighten all cooling system hose connections
 - Check torque of safety frame mounting bolts
 - Check torque of front end weight clamp bolts (if fitted)
 - Check torque of wheel bolts and nuts
 - Check tire pressures and condition
 - Clean radiator cores
 - Check radiator coolant level and specific gravity
 - Check brake adjustment and pedal stroke
 - Lubricate all grease fittings
 - Neutral start switches operative

5-5. Checking before Starting (Daily check)

- Before starting engine, check the followings carefully to avoid any failure or damage.

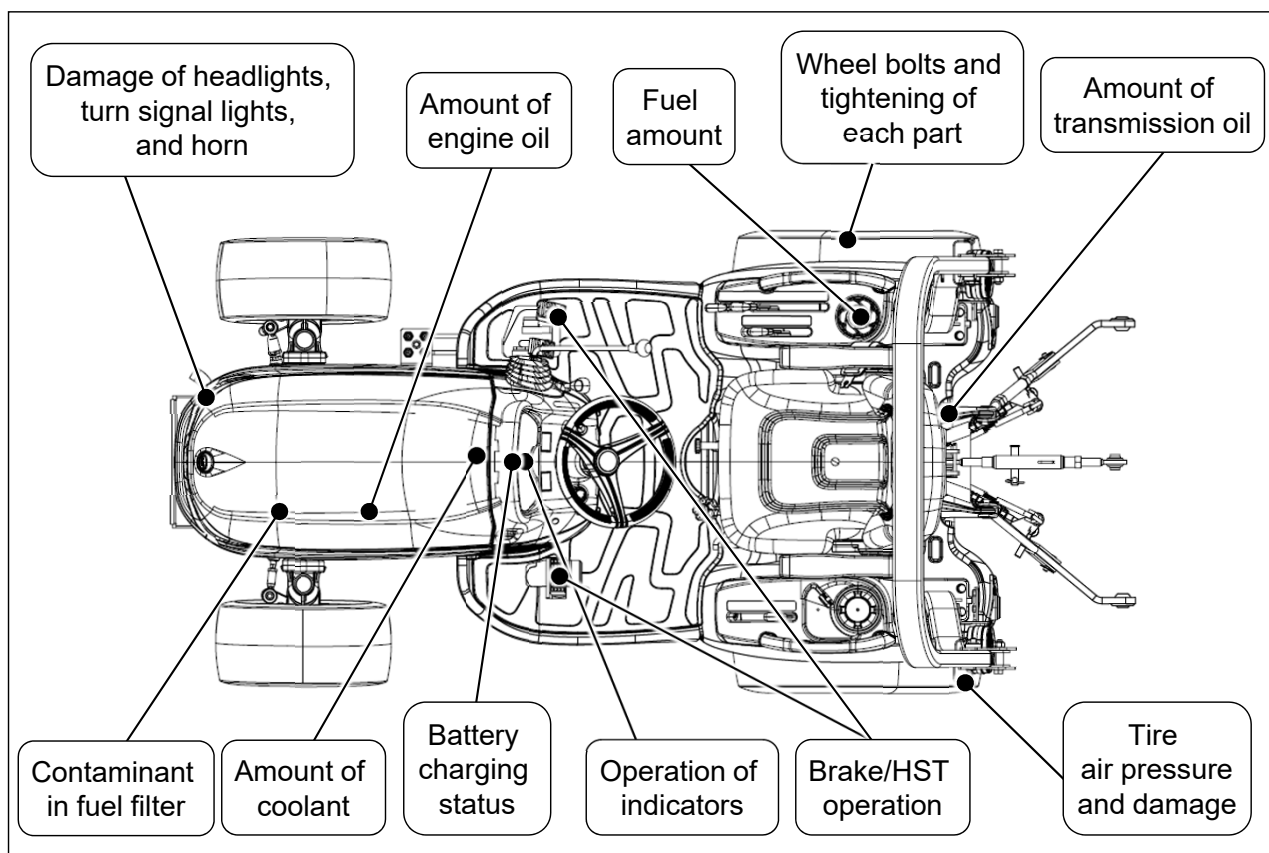


(1) Engine oil

- **Oil specification and capacity :**


See chapter 5-3, "Lubricants and Capacity" or the last page in this manual.

- **Checking engine oil level**

- Check the engine oil level before starting engine or about 5 minutes later after stopping engine.
- Check if the oil level is between MAX and MIN marks of the oil gauge. If necessary, add new oil.
- If the oil level goes over the MAX level mark, contact your authorized local dealer for check.
- It must only be checked while the engine is stopped.
- If your engine is used in dusty/dirty conditions, the service interval must be shorter than normal condition.
- Replace the engine oil and engine oil filter after the first 50 hours of use.

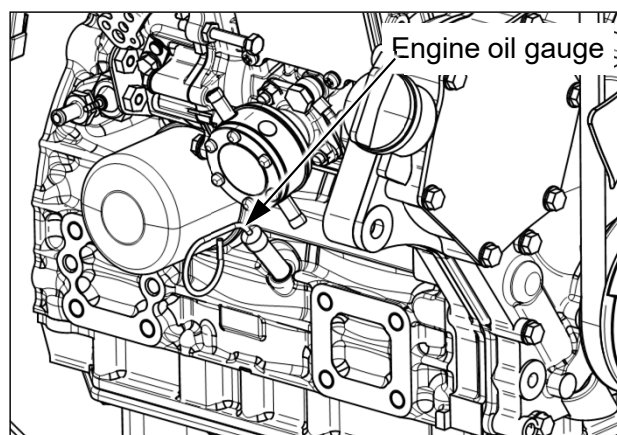


Engine oil gauge

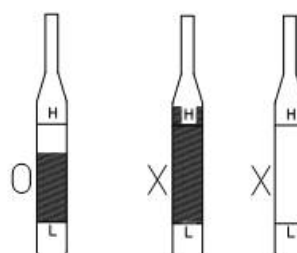

(2) Fuel tank

① Fuel specification and capacity :

- See chapter 5-3, "Lubricants and Capacity" or the last page in this manual.
- If contaminants such as dust or water are mixed with the fuel, it can cause serious damage to the engine. To fill the tank, the fuel storage facility must be equipped as shown in the right figure. If possible, fill the tank with fuel at the gas station.

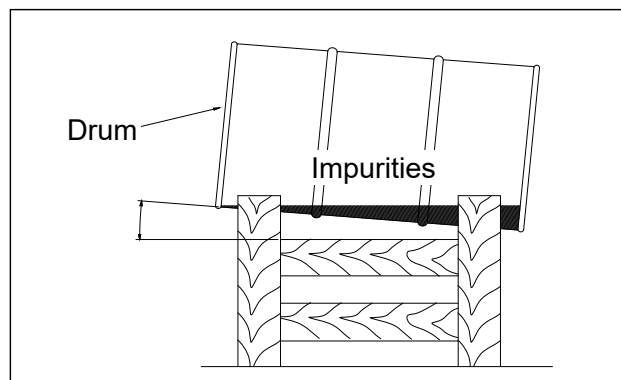

② Using diesel for winter

- General diesel fuel tends to generate paraffin dregs in cold weather which may cause a bad engine start. Thus, it is recommended to use diesel for winter in cold weather.


③ Checking fuel level and filling the tank

- Check the fuel gauge on the instrument panel on a daily basis and if it's not sufficient, fill the fuel tank with diesel fuel. For further information about diesel fuel, see chapter 5-1-(3), 5-1-(4), 5-1-(5) in this manual.

Notice	▶ After finishing work, fill the fuel tank fully. As the temperature drops down during the night, the humidity in the fuel tank is condensed and it may be mixed with the fuel.
--------	---


(3) Instrument panel & Indicators

- Check if the instruments and indicators are normally turned on/off before starting engine or while operating frequently and periodically.
- If the **engine oil pressure warning indicator** and **battery charging warning indicator** are turned on while the engine is running, stop the engine immediately and check the engine lubrication system and battery charging system. If possible, contact your authorized local dealer for check.
- For further information about indicators, refer to the chapter 3-1-(1), "Instrument panel" in this manual.

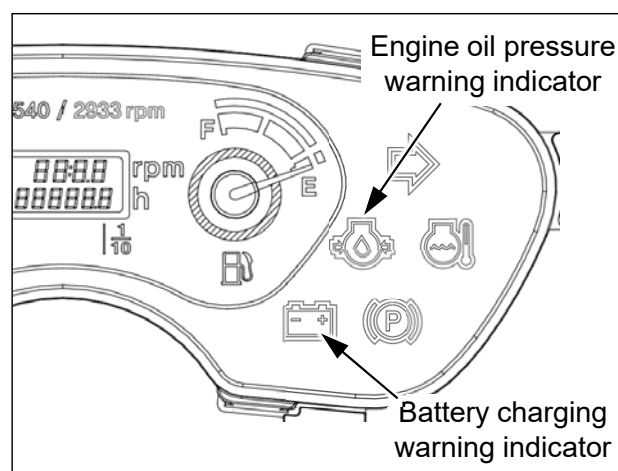

(4) Turn signal lights, Lights and Horn

- Check the operational status of the headlights, turn signal lights and other illuminating lights.

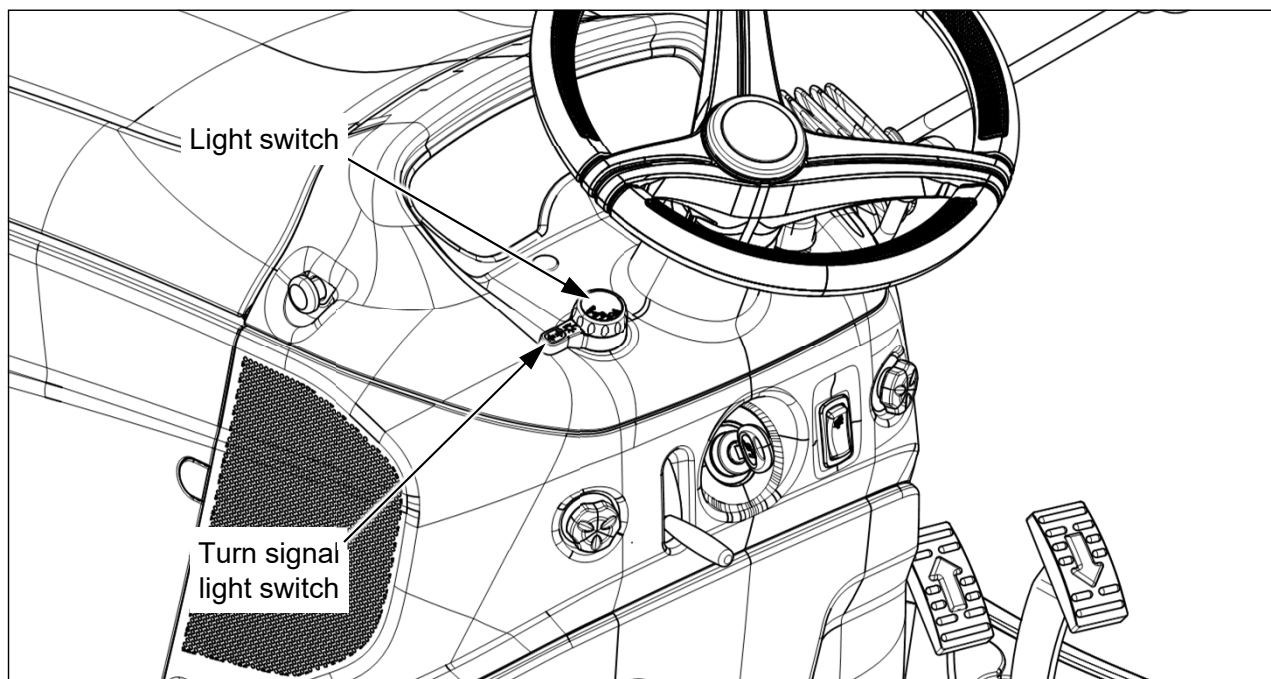

- If any of these lights are not turned on when operating the switch, check the problem as followings.
 1. Check the related fuse in the fuse box. See *chapter 5-12-(2), "Fuse & Main fuse" in this manual.*
 2. Check the light bulb. If damaged, replace it with a rated new one. See *below table and refer to the chapter 5-12-(5), 5-12-(6) in this manual.*

Illuminating Lights	Light bulb specification
Headlights (Low beam / High beam)	12V 35W-H8 / N/A
Turn signal lights (front / rear)	12V 21W
Side lights (front / rear)	LED
Stop lights / Taillights (rear)	LED / LED
Work light(s) (optional)	12V 27W (Roll-bar)
Instrument panel lights and warning indicators	LED

Notice	► Use the bulb of rated capacity. If using an improper bulb arbitrarily, it may cause a failure of the electric system.
--------	---

(5) Engine coolant

- Before opening the radiator cap, cool down the engine coolant sufficiently.
- Refer to the chapter 5-11-(1), "Replacement of Engine coolant" in this manual. (See page 5-35)



(6) Air cleaner (Dry type)

① Cleaning filter element

- Remove the cover and pull the primary element straight out, ensuring the safety filter element remains in place.
- When cleaning the element in the working field, tap the element by hand to remove the dust.

Notice	<ul style="list-style-type: none">▶ Do not tap the element on a hard place when cleaning.▶ If the element is cracked, replace it with a new one.
--------	---

- If the dust is not removed by tapping, use compressed air (less than 500kPa (5bar; 72psi)) from inside to outside as shown in the right figure to remove the dust and debris. And, clean the inside of the filter element with a clean damp cloth.

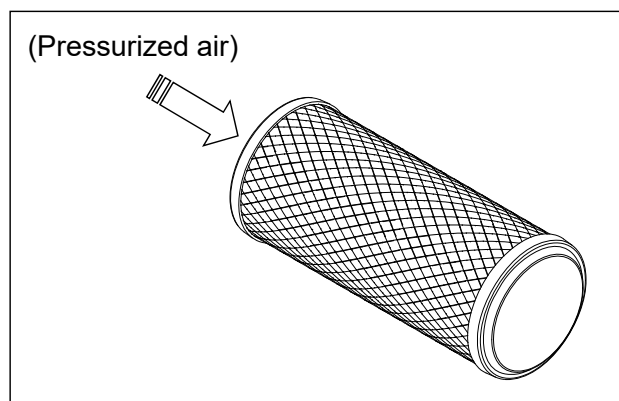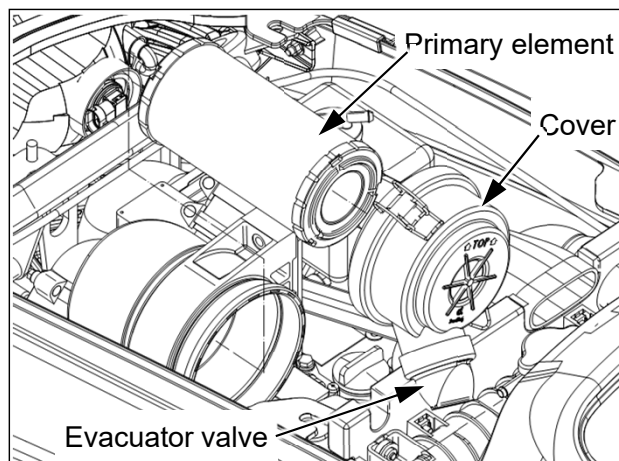


Notice	<ul style="list-style-type: none">▶ Do not assemble a wet filter element.▶ Do not dry the wet filter element with compressed air. It may cause damage to the filter element.▶ Do not start the engine or close the hood if the filter element is not assembled.
--------	---

② Assembling filter element

- Clean the inside of the air cleaner housing with a clean damp cloth.
- Check if there is damage of the filter element by using a light. If finding tiny cracks or small holes in the filter element or damage of the gasket, replace it with a new one.
- Insert the filter element deeply into the filter housing.
- Remove the dust from the evacuator valve and clean the inside of the cover.
- Assemble the cover with the evacuator valve facing downwards.

(7) Cleaning Radiator and Radiator screen

- Inspect the radiator and radiator screen for these items on a daily basis: Damaged fins, corrosion, dirt, grease, insects, leaves, oil, and other debris. Clean the radiator and radiator screen, if necessary.
- To access the radiator and radiator screen, open the hood and pull out the radiator screen.
- When cleaning the radiator with compressed air, make sure the air flows from the engine towards the fan.
- Check and clean other heat exchangers(if equipped) around the engine radiator.

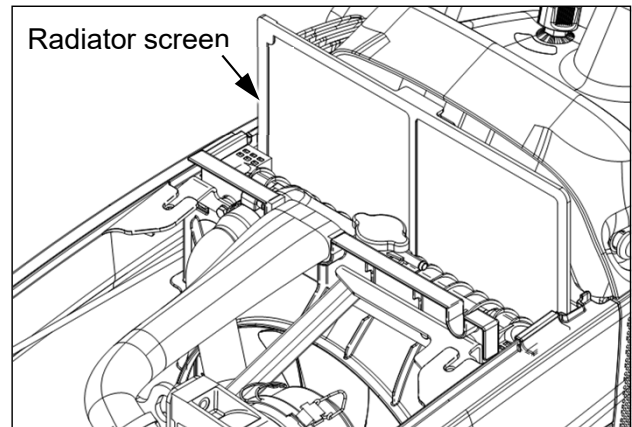


Caution

- ▶ The dust and dirt, other debris, and damaged fins can cause that cooling efficiency of the radiator is reduced and the engine can be overheated.
- ▶ Clean the radiator only after stopping engine.
- ▶ If cleaning with water, take care not to spray water to the hot engine block, electric and electronic parts. If possible, DO NOT USE WATER.

(8) Tire air pressure and damage

① Check

- Check the tire air pressure and damage of the tires on a daily basis. Always manage the correct pressure of the front/rear tires, and if the tires are damaged, replace them with new one.
- Ensure the tire air pressures are not lower than the designated values, to prevent;
 - blown tires;
 - bead wear;
 - internal damage;
 - irregular wear and short service life.
- Do not over-inflate the tires, as this may cause to damage in the event of impact and, in extreme conditions, the rim and disk may be deformed or the tires may burst.

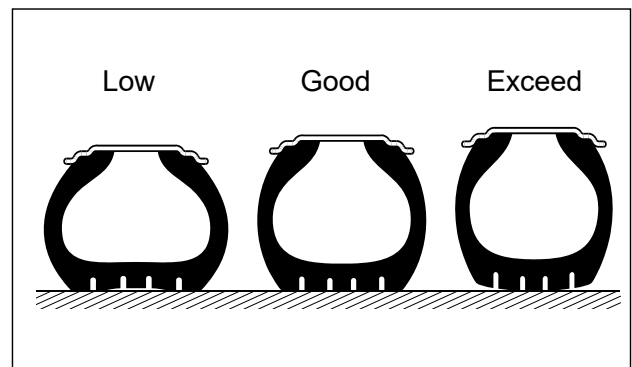

Caution

- ▶ Do not assemble/disassemble the tires arbitrarily. Only qualified service personnel should perform this maintenance in a tire repair center equipped with special tools.
- ▶ When checking tire air pressure, keep the body away from the valve mechanism or cap. Tire air pressure vary depending on the load weighing on the axles.

② Standard air pressure - See chapter 4-5-(5), "Tires and Load capacity" in this manual.

(9) Tightening state of bolts and nuts of each part

- Check if the bolts and/or nuts of each part are loosened. If necessary, tighten it again. Especially, check the bolts or nuts of the tires before starting engine, if necessary, tighten them.



Warning


► **Roll-over hazard!**

Never operate the machine with a loose wheel rim or disc. Always tighten nuts and/or bolts to the specified torque value and at the recommended intervals.

Failure to comply could result in death or serious injury.

Tighten the wheel bolts and/or nuts to the specified torque any time you remove the wheel assembly from the machine or loosen the wheel bolts or nuts.


**Front Wheel Torque: 7/16-20 UNF
650~700 kgf.cm
(64~69 N.m, 47~51 lb.ft)**

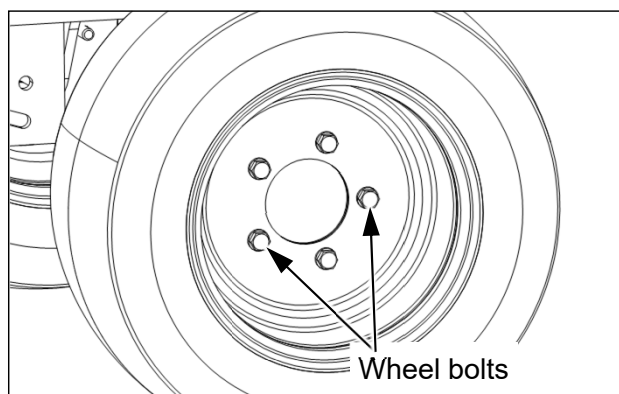

**Rear Wheel Torque: 7/16-20 UNF
700~800 kgf.cm
(69~78 N.m, 51~58 lb.ft)**

NOTICE: Check and tighten wheel bolts and/or nuts to proper torque specifications after the following hours of use:

- First 5 hours
- First 50 hours
- Every 300 hours

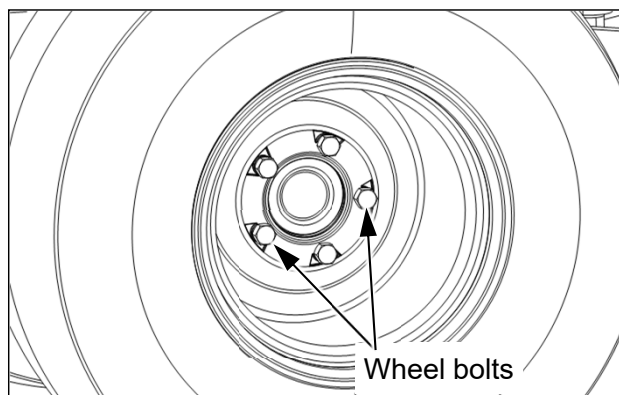




(10) Adjustment of Brake pedal play

- Check the distance of brake pedal play before using the tractor.
- If the brake pedal play is larger than normal distance, the performance of the brake and parking brake system can be decreased. If it is smaller than normal distance, the transmission oil temperature is increased abnormally because the tractor is driven with the brake disks engaged, and it may cause damage to the packings in the transmission.

- **Normal distance (A): 35~50mm (1.4~2.0 in)**

If the brake pedal play is more or less than normal distance, adjust it as below.

1. Remove the spring② in the right figure.
2. Press down the brake pedal① firmly 4~5 times.
3. The brake pedal play is distance from the highest position of the pedal① to the stopping position when the pedal is released. You can get the normal distance by adjusting the brake rod length.
4. If loosening the locking nuts③ and turning the adjuster④, the brake rod length can be adjusted. Set the brake pedal play with adjusting the brake-rod length. If the pedal play becomes normal distance, tighten the locking nuts③.
5. Assemble the spring② to the original position. When assembling the spring②, set the spring length(B) to minimum 127mm. If necessary, loosen the locking nut⑤ and turn the screw⑥ in order to set the spring length.
6. Start the engine and check the operational status of the brake pedal.

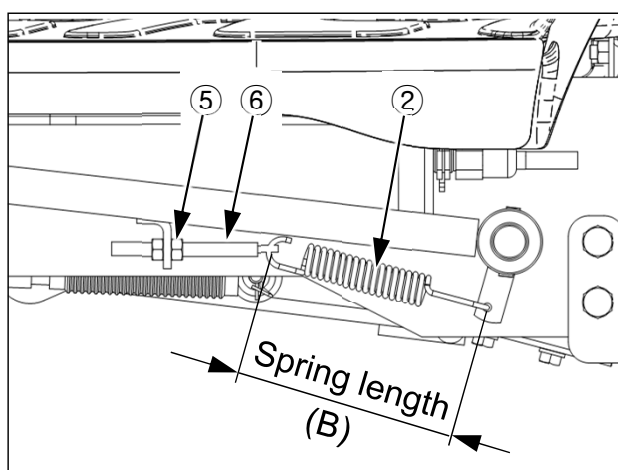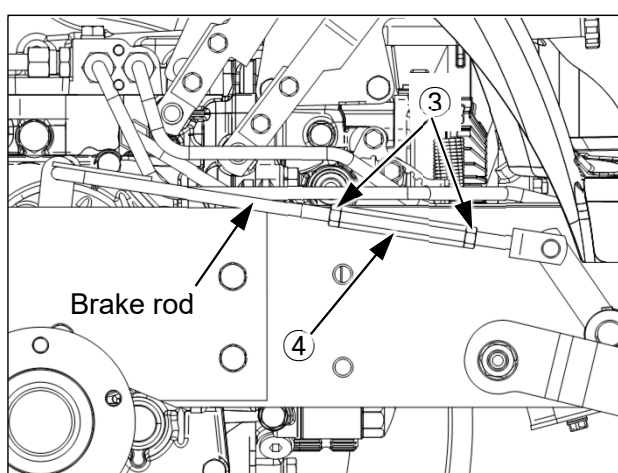
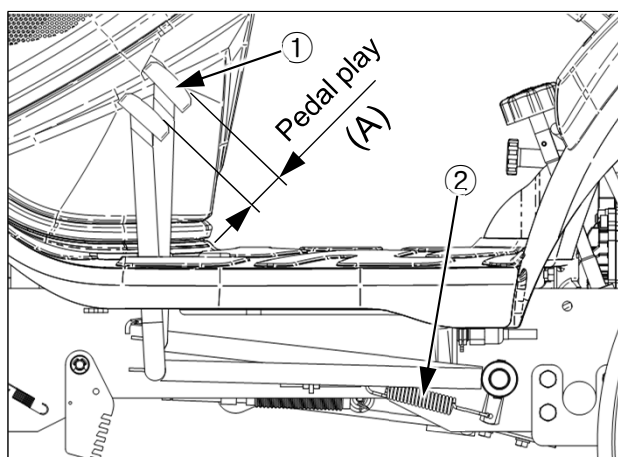



(11) Adjusting HST control linkage (HST type)

- Check if the HST tractor stops when taking off your foot from the HST pedal while driving the tractor in the “Low speed” position of the range gear shift lever. If the tractor does not stop and moves slowly, stop the tractor with using the brake pedals. To adjust the neutral position of the HST pedals, contract your authorized local dealer and comply with the following instructions.

● Adjustment of “NEUTRAL” position of the HST control.

1. Stop tractor on a flat ground and stop the engine.
2. Lift the rear wheel of the tractor off the ground sufficiently by using a hoist. If there is no hoist, use a suitable device can lift the tractor safely. *For the tractor weight, refer to the chapter “6. Dimension and Specification” in this manual.*
3. Place the 4WD lever to the “2WD” position and apply wheel chocks to the front wheels. It is necessary for the tractor not to move forward when the engine starts.
4. Set the HST pedals①② horizontally by adjusting the rod⑥ after loosening the lock nut⑤.
5. Loosen the locking bolt⑧ and turn left/right neutral lever⑦ connected with the locking bolt to find out neutral position. If the neutral position is ok, tighten the locking bolt⑧.
6. After checking that neutral switch⑩ is pressed enough, start engine. If not, loosen the screw, and reset the position of the neutral switch ⑩.
7. To adjust the returning speed of the HST pedals, loosen locking bolt④, and adjust the stiffness of the spring③
8. After restarting engine, check the neutral position again.
9. The stroke of the HST forward pedal① is about 15° when pressing the HST forward pedal. The retracted stroke of the HST forward pedal is about 10° when pressing HST reverse pedal. If is not normal, adjust the stopper bolts⑨.

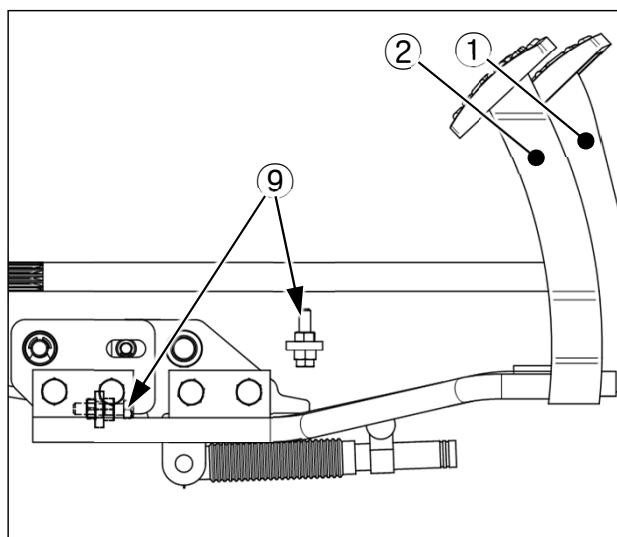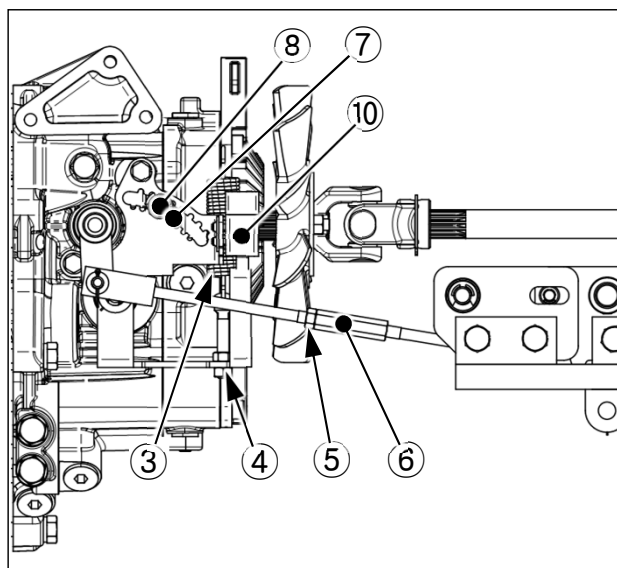


 Caution	<p>▶ When adjusting, DO NOT get close to the rotating parts. It may cause a serious injury.</p> <p>▶ When lifting the rear of the tractor, the tractor may incline to the left or right by oscillating angle of the front axle. Insert the chock between front axle and engine frame symmetrically and tightly.</p>
--	---

5-6. Every 50 hour check

(1) Lubricating grease

- Threads, pin-connection parts and other sliding or moving parts.
1. Wipe dirt from fittings before greasing.
 2. Use a grease gun containing clean high grade of grease.
For grease specification, see chapter 5-3, "Lubricants and Capacity" or the last page in this manual.
 3. Pump fresh grease into fitting to adequately lubricate the component and force out any contamination from the grease passage.
 4. Wipe off excess grease.

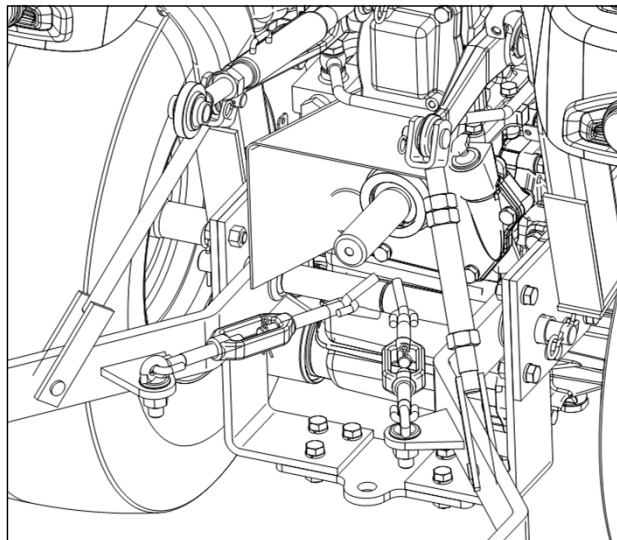


(2) Cleaning Radiator and Radiator screen

- See chapter 5-5-(7) in this manual. (See page 5-21)

(3) Checking Transmission oil

- Stop the tractor on a level surface and apply the parking brake and lower the implements to the ground.
- Clean around the oil filling inlet and pull the oil gauge straight out.
- Check If the oil level is between MAX and MIN marks of the oil gauge. If necessary, add new oil.
- *For oil specification, see chapter 5-3, "Lubricants and Capacity" or the last page in this manual.*

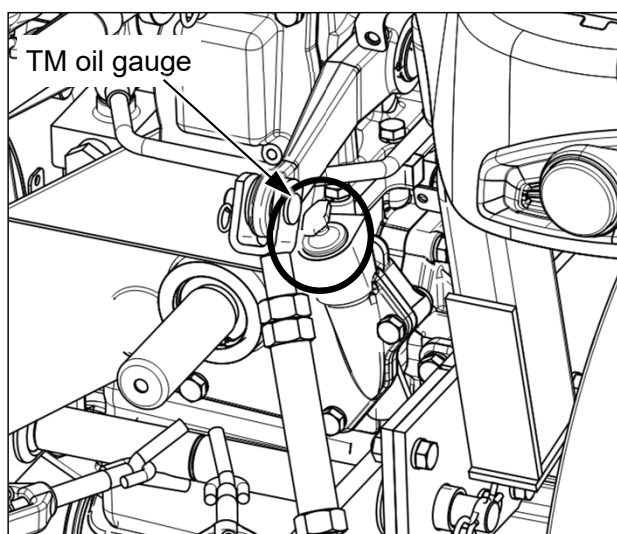


Caution

► Contaminated oil may reduce the durability of power drive lines and it can cause a failure of the transmission and hydraulic system. Clean around the oil filling inlet before opening the oil gauge.

(4) Checking Front axle oil

- Stop the tractor on a level surface and apply the parking brake and lower the implements to the ground.
- Clean around the oil gauge and oil filling inlet.
- Turn the oil gauge counter-clockwise and pull it up.
- Check if the oil level is between the maximum and minimum marks of the oil gauge.
- If necessary, add new oil into the oil filling inlet.
(after 5~10 minutes later, check the oil level again)
- *For oil specification, see chapter 5-3, "Lubricants and Capacity" or the last page in this manual.*

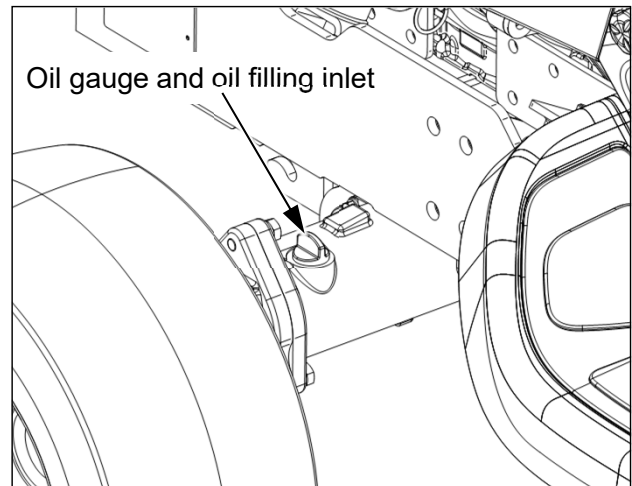

Caution

- ▶ Contaminated oil may reduce the durability of power drive lines and it can cause a failure of the front axle. Clean around the oil filling inlet and oil gauge before opening the oil gauge.

(5) Battery check

- *Refer to the chapter 5-12-(3), "Battery handling and Notices" in this manual. (See page 5-43)*


(6) Air cleaner (Dry type)

- *Refer to the chapter 5-5-(6) in this manual. (See page 5-20)*

(7) Hydraulic hoses and Leakage

- Stop the engine and place all the transmission gears in their neutral positions and lower down the implement to the ground.
- Periodically check hydraulic system for leaks or damaged parts - kinked, crushed, flattened, hard blistered, heat cracked, charred, twisted, soft or loose covered hoses and fittings.
- Before removing hydraulic components, make sure to check that hydraulic pressure is relieved completely. The leaks of pressurized oil can cause a fatal physical injury.

For further information, refer to the chapter, "3-3. Hydraulic system" in this manual.

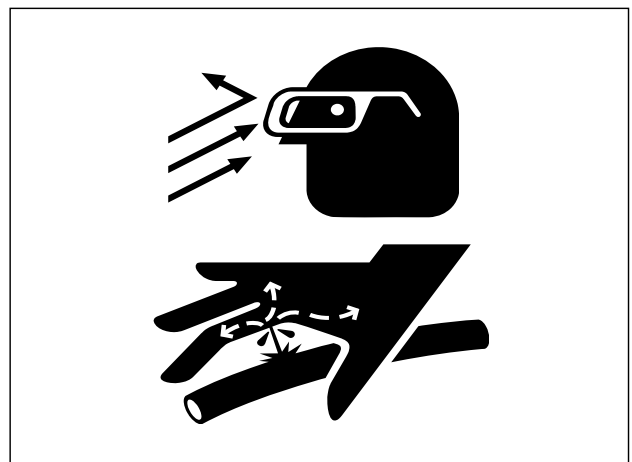

5-7. Every 250 hour check

(1) Replacing Engine oil and Filter

① Drain Engine oil

- Run the engine for a few minutes to warm oil.
- Park the tractor on a level surface.
- Set a clean container under the drain plug and remove the drain plug of oil pan and drain the oil completely.




Note: When the engine oil is warm, the impurities can be drained completely.

② Replace Engine oil filter

- Clean carefully around the filter.
- Coat clean engine oil on the packing of new filter and check the packing is placed well in the groove.
- Turn the oil filter counter-clockwise to remove it with a filter wrench.
- Turn the new filter clockwise to assemble it until the packing makes contact with the mounting flange. Tighten $\frac{3}{4}$ to 1 turn more after the contact.
- If some metal chips are attached to the element of used filter, contact your authorized local dealer.

③ Fill Engine oil


- Tighten the drain plugs. (Tightening torque : 40 ± 5 N.m) (29.5 ± 5 lbs-ft)
- Add new engine oil and check the oil level is between MIN and MAX marks on the oil gauge.
- For oil specification, see chapter 5-3, "Lubricants and Capacity" or the last page in this manual.
- After starting engine, check any oil leakage while running the engine for several minutes at low idle rpm.
- Stop the engine. After about 5~10 minutes later, check the engine oil level again. Install the oil gauge.

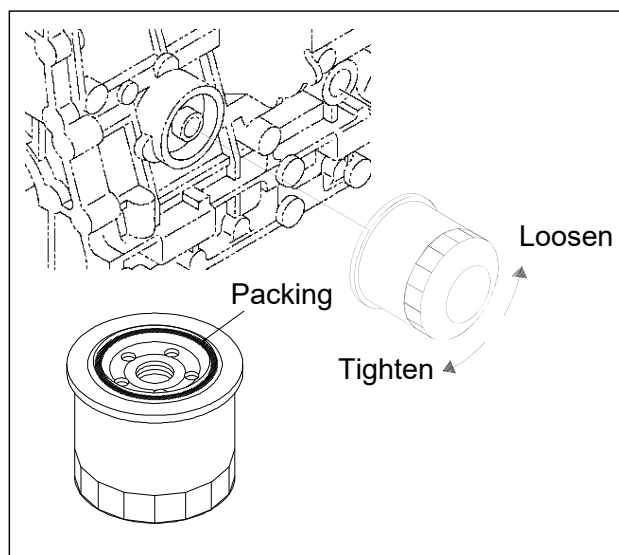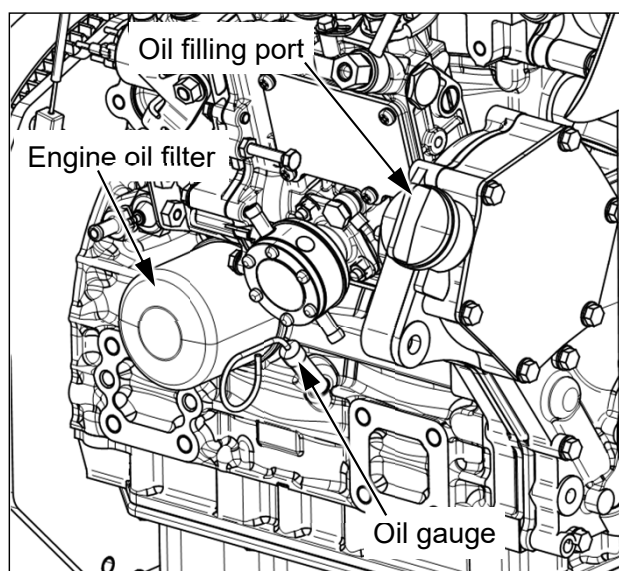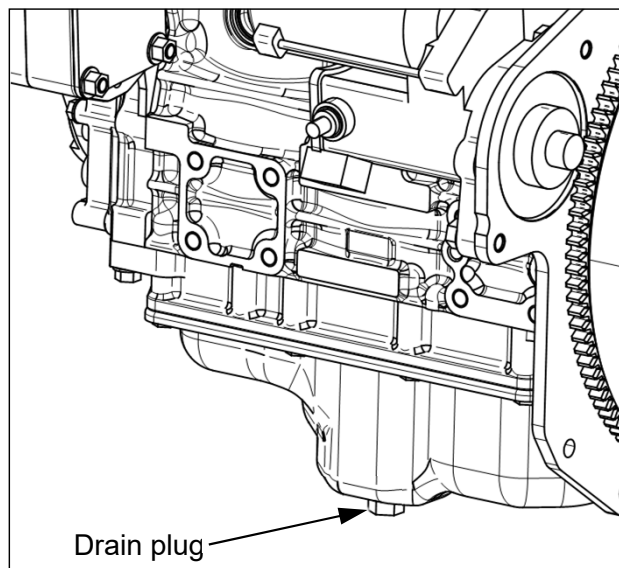

(2) Replacing Hydraulic Oil Filter


① Hydraulic oil filter (Main)

- Park the tractor on a level surface, engage the parking brake, lower the implements, and stop the engine and cool down the tractor sufficiently.
- Loosen the drainage plug, and drain the transmission oil. (See page 5-31)
- Carefully clean around the filter and set a clean container under the filter.
- Coat clean hydraulic oil on the packing of new filter and check the packing is placed well in the groove.
- Turn the oil filter counter-clockwise to remove with filter wrench.
- Turn the new filter clockwise to assemble until the packing makes contact with the mounting surface. Tighten $\frac{3}{4}$ to 1 turn more after packing contact.
- Add transmission oil, and run the engine at idle rpm and check any leakage.
- Check the oil level. If necessary, add new oil.

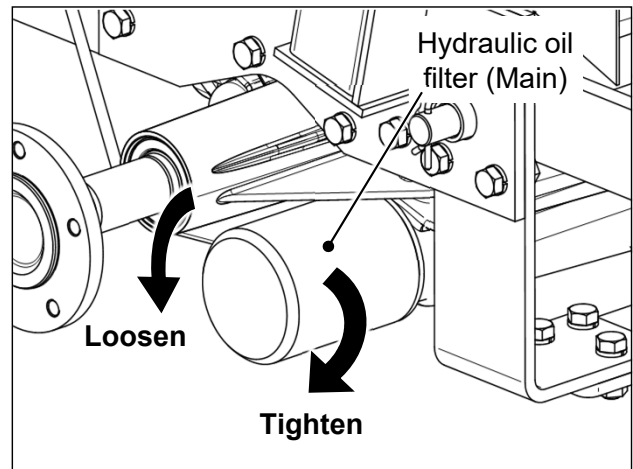

② HST filter (HST Type only)

- This filter is attached on the rear side under the right-hand step floor, inside of the main frame of the HST models.
- Replace the HST filter with a new one in the same way as the replacement procedure of the main hydraulic oil filter.

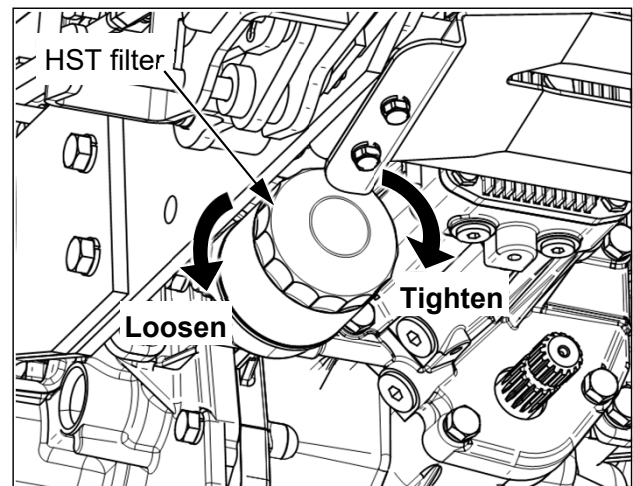


Warning



- ▶ Make sure to stop the engine before loosening the oil filter.
- ▶ If the filter or oil is very hot, it may cause serious burns. After cooling down the tractor sufficiently, replace the filter.
- ▶ Do not throw the exhausted waste oil to any place. This may pollute the soil and water seriously and also is prohibited legally. If violating, you would be responsible for that by civil or criminal case.


(3) Tension adjustment of Fan belt

- If the tension of fan belt exceeds the normal value, loosen the bolts and adjust the tension.
 - Belt tension : crank shaft pulley ~ alternator pulley
 - **Normal : approx. 10~14mm (0.4~0.6 in.)**
(When pressed by 98N (22 lb))
- When adjusting the tension,
 1. Loosen two bolts of alternator and bolt of adjusting plate slightly.
 2. Insert a bar between crank case and alternator, and pull the bar to apply tension to the belt.
 3. With proper tension, tighten the upper bolt of the alternator.
 4. If the tension of belt becomes normal value, tighten the other bolts.
- Check the fan belt for wear or cracks. If there is a problem, replace it with a new one.

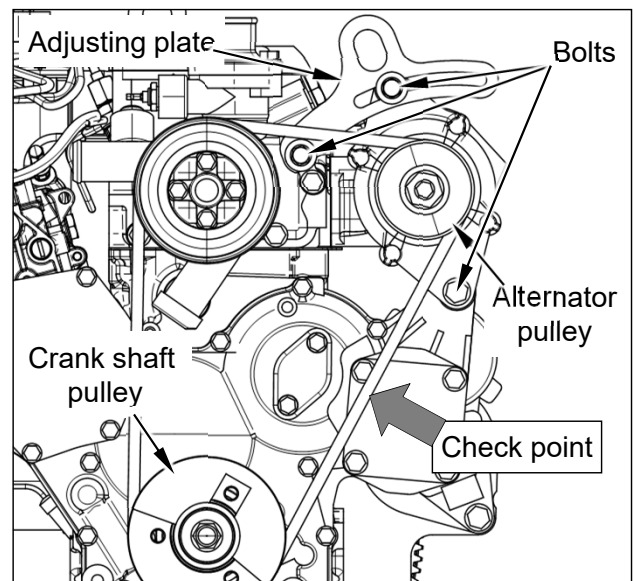

(4) Drain fuel tank

- After using almost the fuel, stop the engine and apply parking brake.
- Set a container under the fuel pre-filter and open the fuel tank cap.
- Loosen the rear hose clamp and disconnect the fuel hose.
- Drain contaminated and moisturized residual fuel completely.
- Insert fuel hose to fuel pre-filter and tighten the hose clamp.
- Fill the fuel tank with diesel fuel.

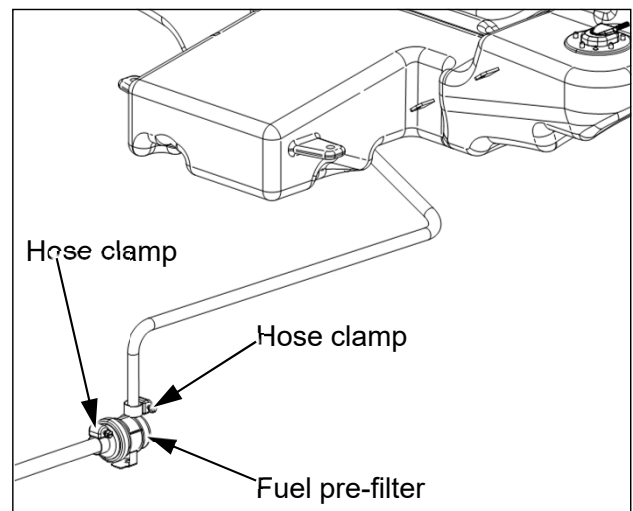


Caution

- Do not throw the exhausted waste diesel fuel to any place. This may pollute the soil and water seriously and also is prohibited legally. If violating, you would be responsible for that by civil or criminal case. The waste oil must be disposed according to the environmental laws.


(5) Toe-in

- Check the toe-in of the front wheels and if necessary, adjust it as follows.
Normal value(B-A) : 0~8 mm (0~0.3 in.)
- Loosen the lock-nuts of the tie-rods on both sides.
- Fix the steering cylinder rod and turn the adjuster clockwise, the toe-in ("B-A") will be increased.
- Turn the adjuster of the other side to the same displacement.
- After checking the toe-in, tighten the lock-nuts.
- If possible, contact your authorized local dealer.

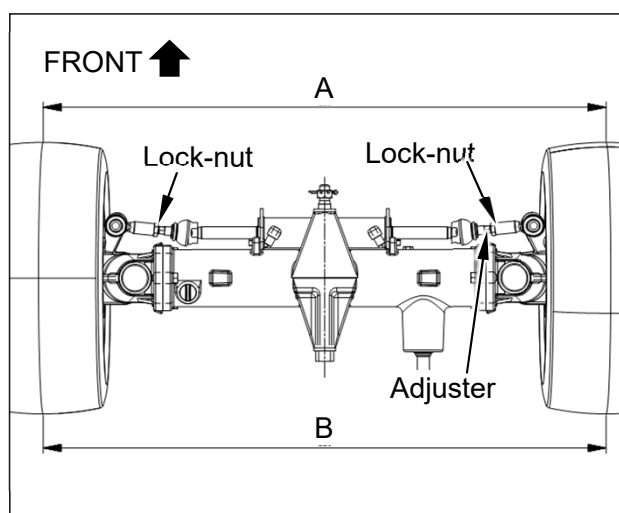

(6) Replacing Air cleaner element (Dry type)

- Remove the cover and pull the primary filter element straight out.
- Clean the inside of the air cleaner housing with a clean damp cloth.
- Check if there is damage of the filter element by using a light. If finding tiny cracks or small holes in the filter element or damage of the gasket, replace it with a new one.
- Insert the new filter element deeply into the filter housing.
- Remove the dust from the evacuator valve and clean the inside of the cover.
- Assemble the cover with the evacuator valve facing downwards.

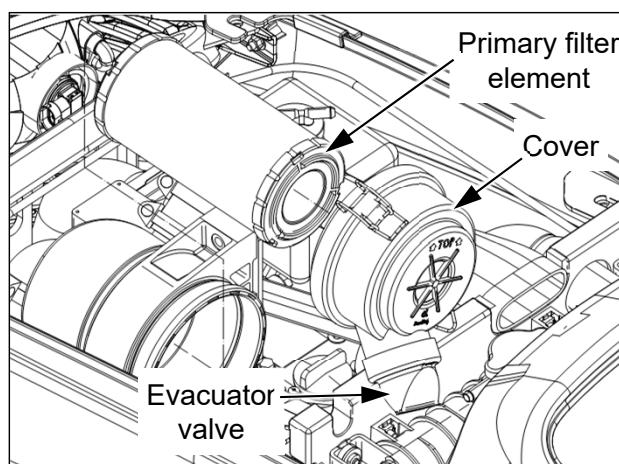


Notice

- Do not start the engine or close the hood if the filter element is not assembled.

5-8. Every 500 hour check



(1) Changing Front axle oil

- Stop the tractor on a level surface and apply the parking brake. Clean around the oil filling inlet and drain plugs. Set a clean container under the drain plugs.
- Remove both LH and RH drain plugs and oil gauge to drain the oil completely.
- Assemble the drain plugs again with new seals.
- Add new oil into the oil filling inlet while checking if the oil level is between “Min” and “Max” marks of the oil gauge.
- After 5~10 minutes later, recheck the oil level and install the oil gauge.
- *For oil specification, see chapter 5-3, “Lubricants and Capacity” or the last page in this manual.*

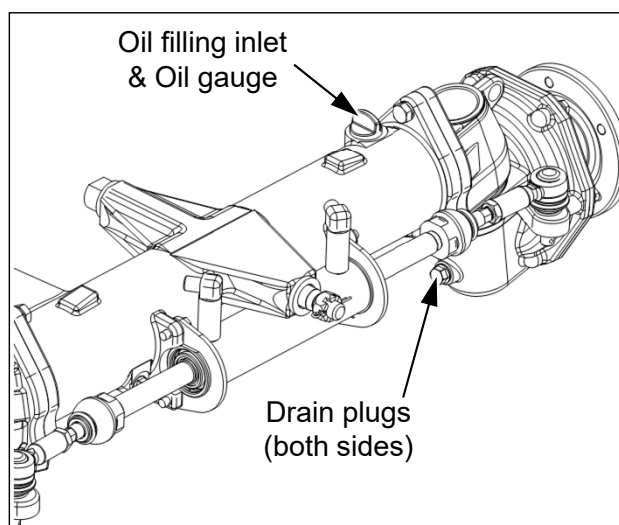

(2) Changing Transmission oil

- Stop the tractor on a level surface and apply the parking brake. Run the engine for several minutes to warm oil and lower the implements and stop the engine.
- Clean around the oil filling inlet and drain plug.
- Set a clean container under the drain plug and remove the drain plug. Drain the oil completely.
- Remove metal chips and sludge from the drain plug and install the drain plug again with new seal.
- Add new oil until the oil level is between “Min” and “Max” marks of the oil gauge.
- *For oil specification, see chapter 5-3, “Lubricants and Capacity” or the last page in this manual.*

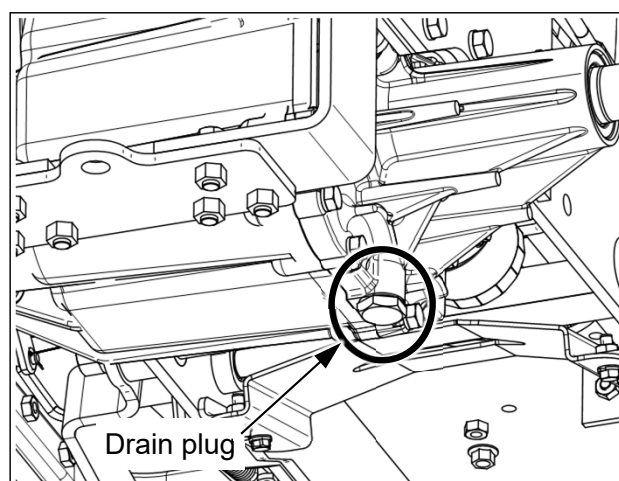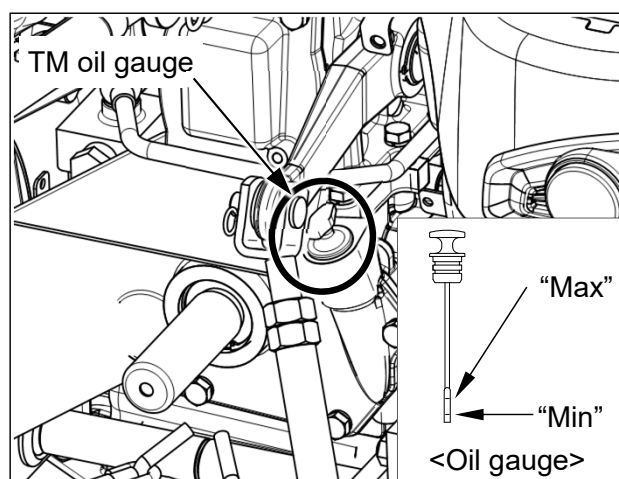


Caution

► Contaminated oil may reduce the durability of transmission drive lines and it can cause a failure of the hydraulic system. Clean around the oil filling inlet and then pull the oil gauge.

(3) Replacing Fuel filter cartridge

① Main fuel filter

1. Stop engine and allow it to cool, and apply parking brake.
2. Close the fuel valve and set a container under the fuel filter.
3. Turn the retaining ring to the left.
4. Carefully remove the cup and pour the fuel into an approved container and dispose of waste properly. Hold the bottom of the cup with a shop towel to prevent the fuel from dripping. Wipe up any spills immediately.
5. Replace the filter element with a new one.
6. Check the condition of the O-ring and install the cup to the mounting flange.
7. Tighten the retaining ring and open the fuel valve.
8. Exhaust air in fuel filter. *See chapter 5-12-(1), "Air bleeding from Fuel system" in this manual.*
9. Check the fuel leakage.

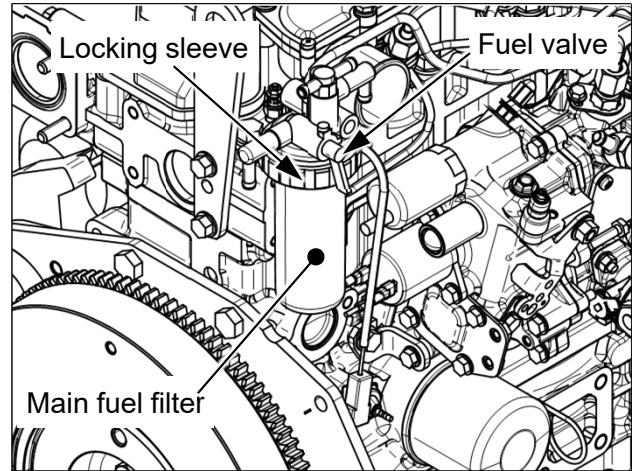

Warning

- ▶ Fuel leaked or spilled onto hot surfaces or electrical components can cause a fire. To help prevent possible injury, turn the key switch off when changing fuel filters or water separator elements. Clean up fuel spills immediately.




Caution

- ▶ Do not allow dirt to enter the fuel system. Thoroughly clean the area around a fuel system component that will be disconnected. Fit a suitable cover disconnected fuel system component. Do not fill the new filter with fuel. Invisible fine contaminants can enter the injection pump and it may cause damage to the fuel injection system.

② Fuel pre-filter

1. Stop engine and allow it to cool, and apply parking brake.
2. Set a container under the fuel pre-filter.
3. Loosen the hose clamps and disconnect the fuel hoses, and plug the fuel hoses.
4. Remove the fuel pre-filter and replace it with a new one.
5. Assemble the fuel hoses and tighten the hose clamps.
6. Check for fuel leakage.

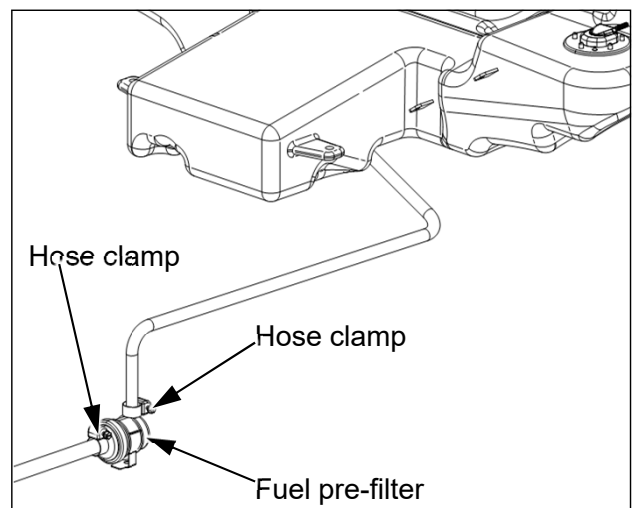

5-9. Every 1000 hour check


(1) Adjusting Engine Valve clearance



- Contact your authorized dealer to check the valve clearance.

Valve clearance : 0.15~0.25mm

(0.006 ~0.010 in)

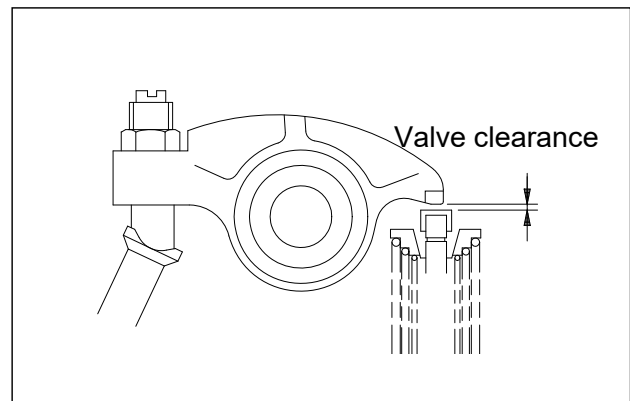If the gap is large, the valves can make a loud tapping noise and if the gap is too small, the engine output power may be reduced due to leakage of compressed air.





 Warning	<ul style="list-style-type: none">▶ Ensure that the engine cannot be started while this maintenance is being performed. To help prevent possible injury, do not use the starting motor to turn the flywheel.▶ Hot engine components can cause burns. Allow additional time for the engine to cool before measuring/adjusting valve lash clearance.
 Caution	<ul style="list-style-type: none">▶ Only qualified service personnel should perform this maintenance. Contact your authorized local dealer for this maintenance. Operation of engines with incorrect valve lash can reduce engine efficiency, and also reduce engine component life.

5-10. Every 1500 hour check

(1) Inspect, clean and test fuel injection nozzle, if necessary

- Contact your authorized local dealer to check the fuel system.

 Warning	High-pressure Hazard !
	<ul style="list-style-type: none">▶ Make sure to stop the engine before checking the fuel system.▶ Avoid skin contact with the high-pressure diesel fuel spray caused by a fuel system leak such as a broken fuel injection line.▶ High-pressure fuel can penetrate your skin and result in serious injury. If you are exposed to high-pressure fuel spray, get medical treatment immediately.

(2) Inspect crankcase breather system


- Contact your authorized local dealer to check it.

5-11. Every 2000 hour or 2-year check

(1) Replacement of Engine Coolant

① Check

- Stop the engine and allow the engine to cool down. Loosen the radiator cap slowly in order to relieve any pressure. Remove the radiator cap.
- Check if the coolant of the radiator and reservoir tank is insufficient or not on a daily basis. Check if the coolant level of the reservoir tank is between “Min” and “Max” marks.
- If necessary, add new engine coolant. *For coolant specification, see chapter 5-3, “Lubricants and Capacity” or the last page in this manual.*
- Do not open the radiator cap except to check the coolant or change it.

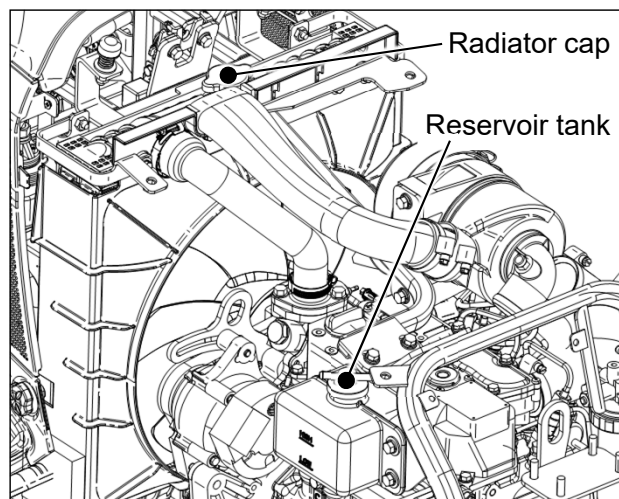

Warning



- ▶ **Pressurized System:** When opening the radiator cap, be careful of the escaping hot water or steam. Hot coolant can cause serious burns. To open the radiator cap, stop the engine and wait until the cooling system components are cool down. Loosen the radiator cap slowly in order to relieve the pressure.
- ▶ Wear the protection globes or cover the radiator cap with a rag before opening the radiator cap.






Caution

- ▶ *NEVER mix OAT coolant with conventional coolant. For further information about OAT, see chapter 5-1-(6) in this manual.*

② Drain

- Stop the engine and allow the engine to cool down. Loosen the radiator cap slowly in order to relieve any pressure. Remove the radiator cap.
- Set a suitable clean container under the radiator drain cock and drain plug on the engine.
- Open the drain cock and remove the drain plug on the engine and radiator.
- Allow the coolant to drain completely.

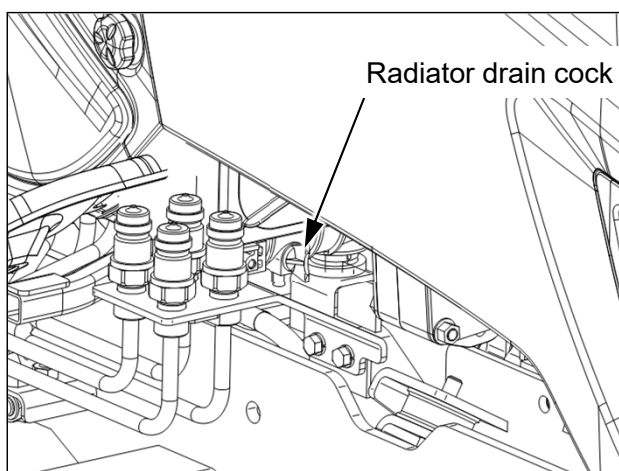

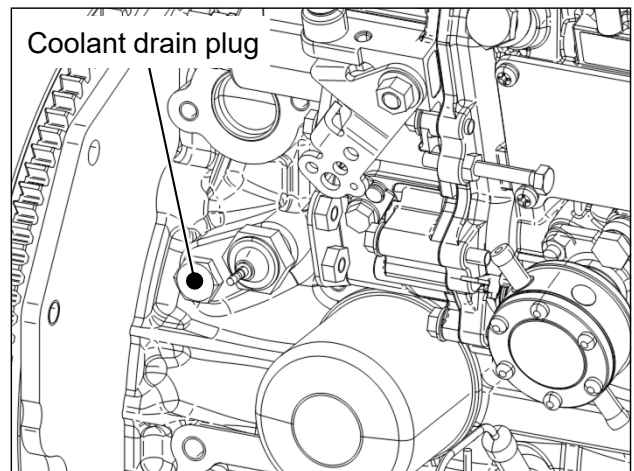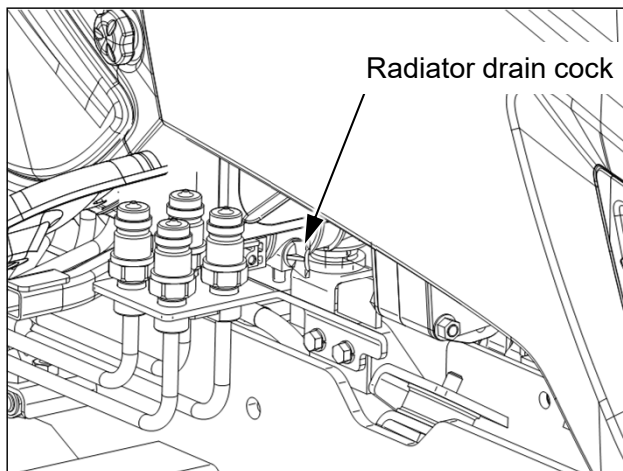

Caution

- ▶ Care must be taken to ensure that fluids are contained during performance of inspection and maintenance of the product. Be prepared to collect the fluid with suitable containers before opening any compartment or disassembling any component containing fluids.
- ▶ Dispose of all fluids according to Local regulations and mandates.
- ▶ Keep all parts clean from contaminants. Contaminants may cause rapid wear and shortened component life.

③ Flush

- Flush the cooling system 2~3 times with clean water in order to remove any debris.
- Close the drain cock and install the drain plug on the engine and radiator.
- Fill the cooling system with clean water. Install the radiator cap.
- Start and run the engine at low idle until the temperature reaches 49 to 66 °C (120 to 150 °F).
- Stop the engine and allow the engine to cool. Loosen the radiator cap slowly in order to relieve any pressure. Remove the radiator cap. Open the drain cock or remove the drain plug on the engine and radiator. Allow the water to drain.



Caution

- ▶ Do not fill the cooling system faster than 5 L (1.3 US gal.) per minute to avoid air locks. Cooling system air locks may result in engine damage.

④ Fill

- Close the drain cock and install the drain plug on the engine and radiator.
- Fill the cooling system with the designated coolant. Do not install the radiator cap. *For coolant specification and capacity, see chapter 5-3, "Lubricants and Capacity" or the last page in this manual.*
- Start and run the engine at low idle. Increase the engine rpm to high idle. Run the engine at high idle for one minute in order to purge the air from the cavities of the engine block. Stop the engine.
- Check the coolant level. Maintain the coolant level within 13mm (0.5 in.) below the bottom of the pipe for filling. Maintain the coolant level in the reservoir tank at the correct level.
- Clean the radiator cap. Inspect the gasket that is on the radiator cap. If the gasket is damaged, install a new radiator cap.
- Start the engine. Inspect the cooling system for leaks and for correct operating temperature.
- Use the coolant with anti-freeze solution in cold weather.
- Anti-freeze solution is filled up from the factory. After first winter, change the coolant to remove the debris or corrosion.



Caution

▶ Do not fill the cooling system faster than 5 L (1.3 US gal.) per minute to avoid air locks. Cooling system air locks may result in engine damage.

※ Anti-freeze

- The amount of anti-freeze in the coolant must be determined on the ambient temperature. If the amount of anti-freeze in the coolant is low, the coolant can be frozen and the engine and radiator may be damaged.
- Mix the water and anti-freeze with 40%~60% according to operating condition as below table and fill radiator and engine the mixture after checking the volume and capacity.

Anti-freeze (%)	Freezing point °C (°F)	Boiling point °C (°F)	Remark
40	-24 (-11)	106 (223)	
50	-37 (-35)	108 (226)	
60	-52 (-62)	111 (232)	

- If possible, always use the anti-freeze solution. If not, change the coolant with anti-freeze solution before winter time.
- Run the engine for about 5 minutes after filling anti-freeze to mix it with water well.


(2) Check and replace fuel hoses and coolant hoses



- Check the leakage, crack , damage and deterioration condition of the fuel hoses and engine coolant hoses.
- If necessary, replace it with a new one.

5-12. General maintenance (When required)

(1) Air-bleeding from Fuel system

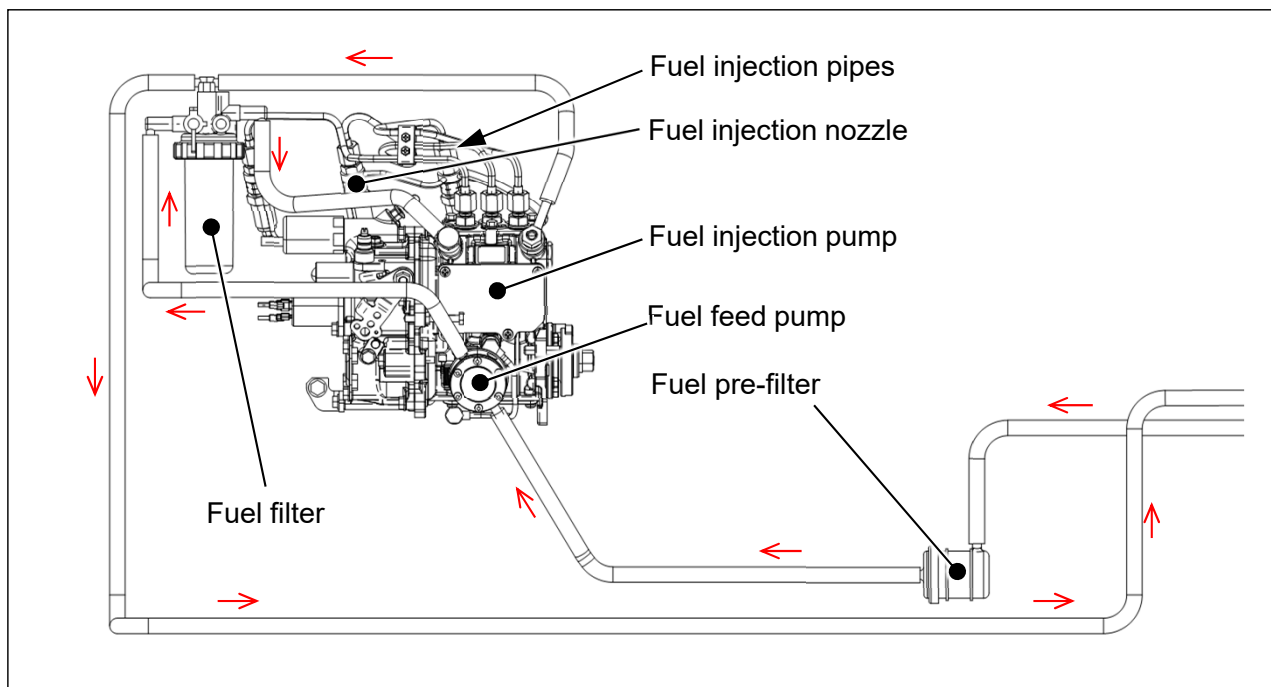- Air in the fuel system may cause weak fuel injection or a failure of engine start or stop. To prevent such a failure, bleed air from the fuel system.





 Danger	<p>► HIGH PRESSURE FUEL. When the engine is running, do not loosen the fuel injection pipes to bleed air from the fuel system.</p>
 Warning	<p>► Fuel leaked or spilled onto hot surfaces or electrical components can cause a fire. To help prevent possible injury, turn the key switch off when changing fuel filters or water separator elements. Clean up fuel spills immediately.</p>

① Air-bleeding from Fuel Filter


1. When replacing the fuel filter element, open the cock valve and turn the key switch to the ON position.
2. Wait for about 10~15 seconds, and then the air-bleeding will be completed.

<p>Notice</p>	<p>► When changing the fuel filter only, it is not necessary to bleed air from the fuel injection pipes.</p>
----------------------	--

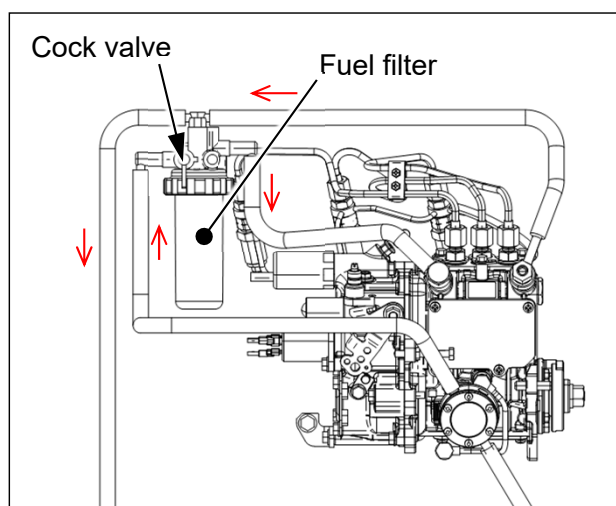

 Caution	<ul style="list-style-type: none"> ▶ Do not adjust or modify the fuel injection system arbitrarily. It can cause a serious fault related to engine performance and increase of excessive exhaust emissions. ▶ Do not allow dirt to enter the fuel system. Thoroughly clean the area around a fuel system component that will be disconnected. Fit a suitable cover disconnected fuel system component. Do not fill the new filter with fuel. Invisible fine contaminants can enter the injection pump and it may cause damage to the fuel injection system. ▶ Cover the bleeding fuel with a rag so that it does not flow into other components. ▶ Do not throw the exhausted waste fuel to any place. This may pollute the soil and water seriously and also is prohibited legally. If violating, you would be responsible for that by civil or criminal case. The waste oil must be disposed according to the environmental laws.
---	---

② Bleeding the injector lines (if necessary)

 Warning	<p>▶ Escaping fluid!</p> <p>Hydraulic fluid or diesel fuel leaking under pressure can penetrate the skin and cause infection or other injury. To prevent personal injury: Relieve all pressure before disconnecting fluid lines or performing work on the hydraulic system. Before applying pressure, make sure all connections are tight and all components are in good condition. Never use your hand to check for suspected leaks under pressure. Use a piece of cardboard or wood for this purpose. If injured by leaking fluid, see your doctor immediately.</p> <p>Failure to comply could result in death or serious injury.</p>
--	--


Bleed the injector lines if:

- The tractor has run out of fuel.
- New injectors have been installed.
- The injection pump has been removed for service repairs.

To bleed the injector lines:

1. Loosen the injector line fittings① at the injectors.
2. Move the hand throttle control lever to its wide open position.
3. Crank the engine until air-free fuel flows from each connection, then tighten the fittings to **29~34 N·m (22~25 lb ft)**.



NOTICE: If air is not purged from the system, repeat the above procedures. Do not crank the engine continuously for more than thirty seconds, as this may cause starting motor failure.

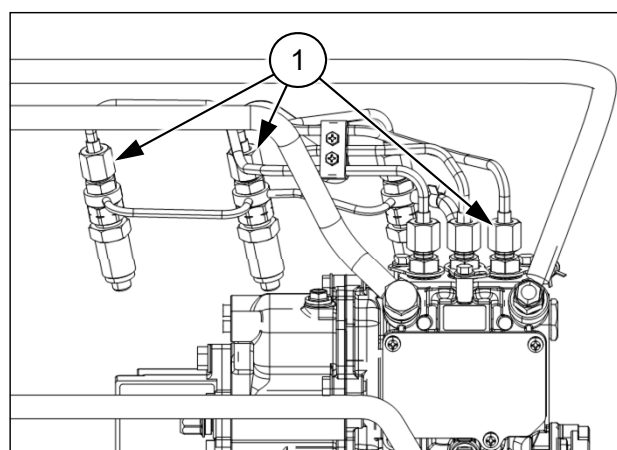

(2) Fuse & Main fuse

① Fuse check and replacement

- How to replace the fuse
 1. Unscrew the knobs in the right figure and remove the rear cover for maintenance.
 2. The fuse box is installed on the main wiring harness and located in the left side of the steering support.
 2. Check each fuse and remove the damaged fuse.
 3. Replace the new one same as damaged one.
- Capacity and function of each fuse is described on the fuse box cover.

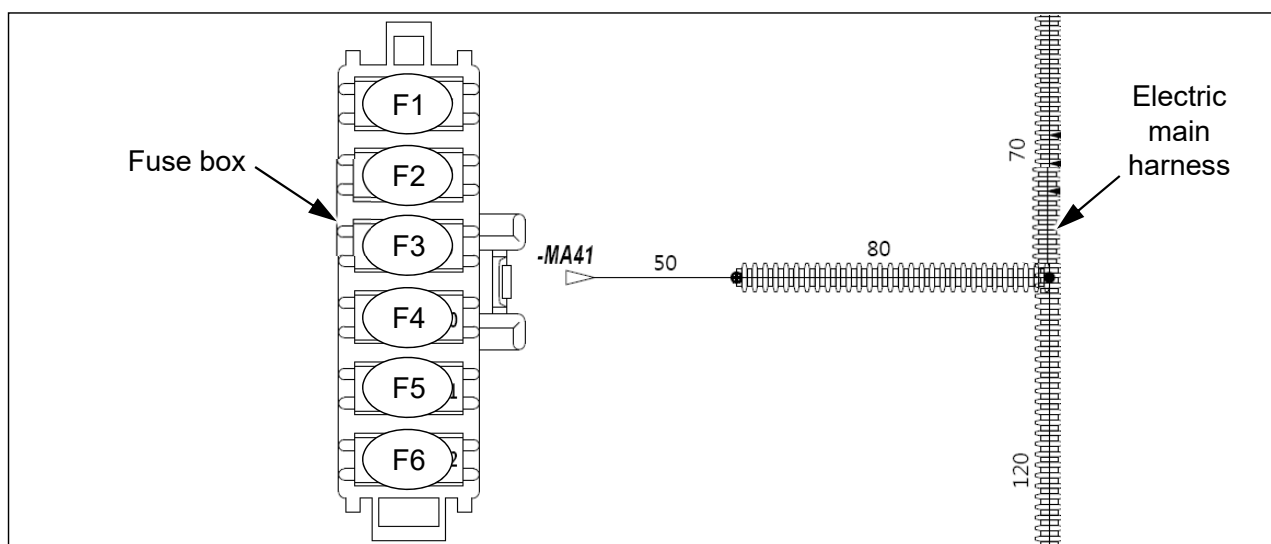
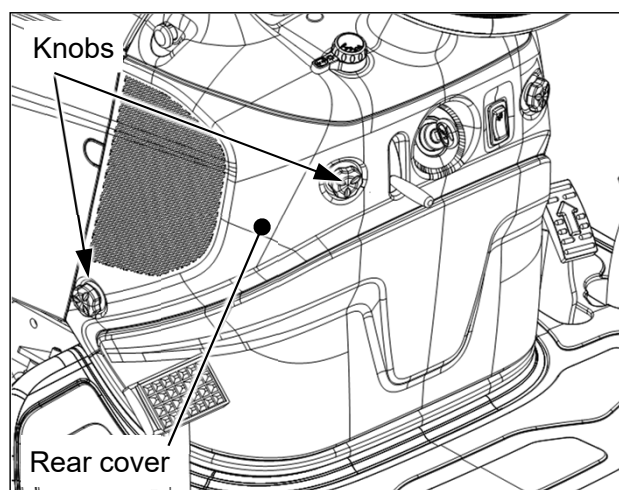



Fuse Location		Fuse Capacity	Circuit
HST	F1	10A	Turn signal lights
	F2	10A	Work lamp(opt.) / Brake lights
	F3	10A	PTO solenoid valve, Instrument panel
	F4	10A	Power socket
	F5	15A	Head lamps / Hazard warning lights
	F6	30A	Driver, Solenoid

Caution	<p>► If the same function fuse is damaged repeatedly, contact your authorized local dealer for check instead of using an alternative such as wire or aluminum foil.</p>
	<p>► If using an alternative instead of the rated capacity fuse, it may cause a fire which results in damage of the tractor or serious personal injury.</p>

② Main fuse (SLOW BLOW FUSE) check and replacement

- The main fuse is attached to the electric wiring of left side of the engine.
- **Rated Capacity: 40A**
- If the main fuse is damaged, remove it from the wiring and replace with a genuine part.
- As the main fuse is a device to protect the electric system and wiring, check if there is trouble in the electric system. Contact your authorized dealer for check.

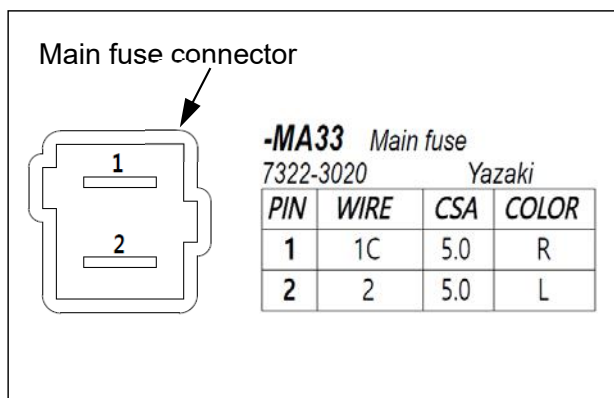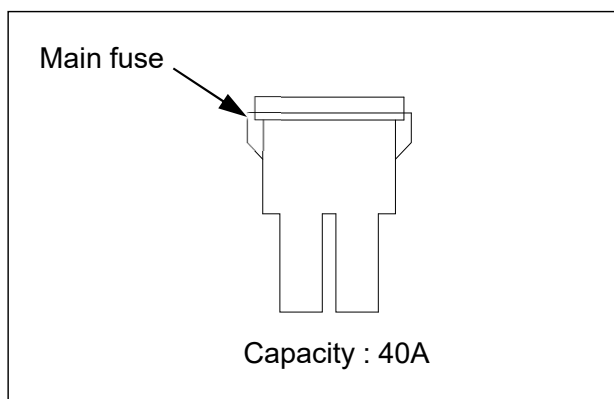



 Caution	<ul style="list-style-type: none">▶ As the main fuse is an important part to protect the electric system and components. If the main fuse is often burn out, contact your authorized local dealer.▶ Do not use an alternative instead of the genuine fuse. Do not connect electric wires to the battery terminals directly. It may cause a fire and serious injury.
---	--

(3) Battery handling and Notices

- ※ **Battery fluid (Electrolyte) is a solution of water and sulfuric acid. It makes poisonous gas which is very harmful to eyes, skin and clothing. And also this gas is explosive.**
Read the following instructions thoroughly before handling the battery.

① Battery check

- Indicator(if fitted) on the top of the battery displays the battery state. If the indicator color is;
 - **GREEN** : Normal state.
 If the engine does not start despite of green color, contact your authorized dealer.
 - **CLEAN** : Low charging state – charge the battery.
 - **WHITE or RED** : Replace the battery with a new one after checking the vehicle.
- If the terminals of battery harness are loosened, tighten it completely. If the terminals of battery are corroded, clean it with warm water and apply grease.

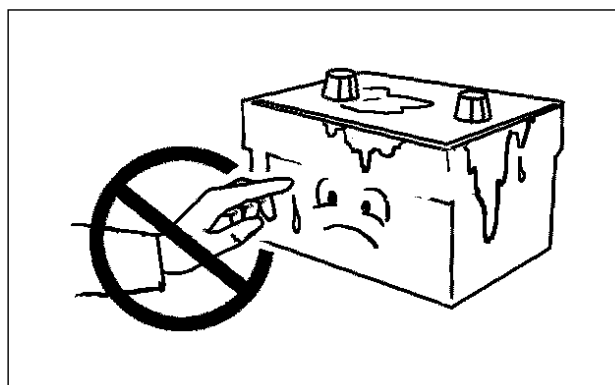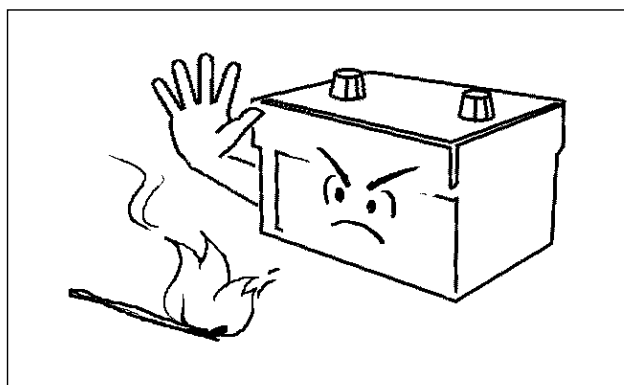


<div data-bbox="178 1265 338 1321" data-label="Image"> </div> <div data-bbox="199 1460 316 1568" data-label="Image"> </div> <div data-bbox="199 1639 316 1762" data-label="Image"> </div> <div data-bbox="205 1834 309 1968" data-label="Image"> </div>	<p>▶ The poisonous gases from the battery are explosive. Comply with the following instructions.</p> <ul style="list-style-type: none"> - Keep cigarettes, sparks and flames away from the battery. Use a flashlight to check the battery electrolyte level or indicator. - Never check the battery voltage by shorting the terminals with metal objects. Use a voltmeter or hydrometer. - Always remove the grounded (-) battery clamp first and assemble it last. If not, it can cause an explosion by spark. <p>▶ Sulfuric acid in the battery electrolyte is poisonous. It is strong enough to burn skin, clothing and it can cause blindness if splashed into the eyes.</p> <ul style="list-style-type: none"> - Never disassemble the battery. - Do not touch the battery or liquid by bare hand without gloves or any protection. - Flush eyes with clean water for about 20 minutes if the electrolyte is splashed into your eyes, and get medical attention immediately. <p>▶ Charge the battery in an area with good ventilation and DO NOT charge a frozen battery.</p> <p>▶ Replace the old battery with a same capacity genuine product.</p>
---	--


② Notices in attaching/detaching the battery

- When detaching battery, remove the negative(-) terminal from the battery first.

If not, when metal object is contacted between positive(+) terminal and the body, it may cause the dangerous spark.

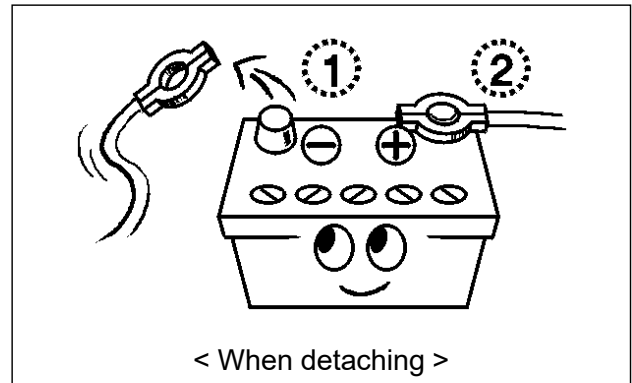

- When attaching the battery, the positive (+) terminal must be attached first and the negative (-) terminal must be connected last.


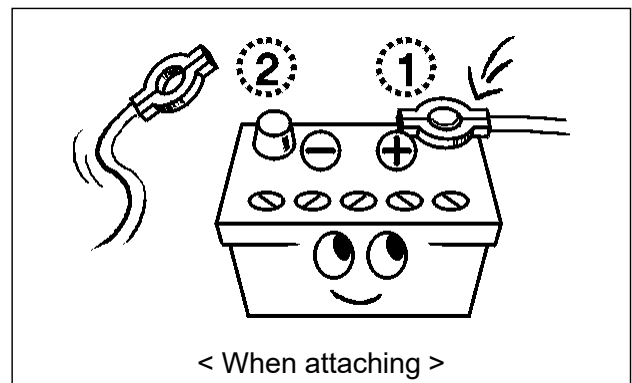






	Caution
	<ul style="list-style-type: none"> ▶ Stop engine and apply parking brake and remove the ignition key before replacing the battery. ▶ Put on eye protection and gloves to protect your body from poisonous sulfuric acid before handling the battery.
	<ul style="list-style-type: none"> ▶ Always remove grounded (-) battery clamp first and assemble it last. If not, it can cause an explosion by spark. ▶ Keep all flames and sparks away and DO NOT smoke while charge the battery.
	<ul style="list-style-type: none"> ▶ Replaced old battery must be disposed of in a suitable manner, according to the national legislation or local regulations. Contact your authorized dealer. ▶ Replace the old battery with a same capacity genuine product.

③ Notices in charging the battery using separate charger

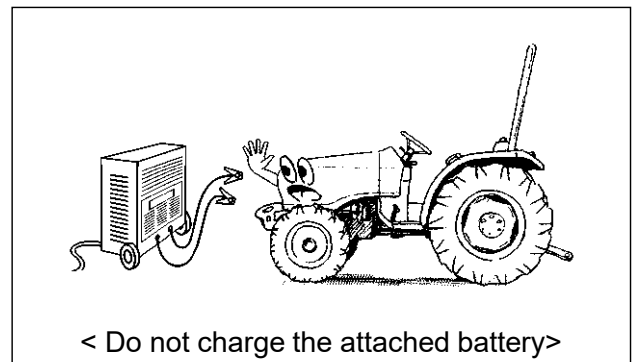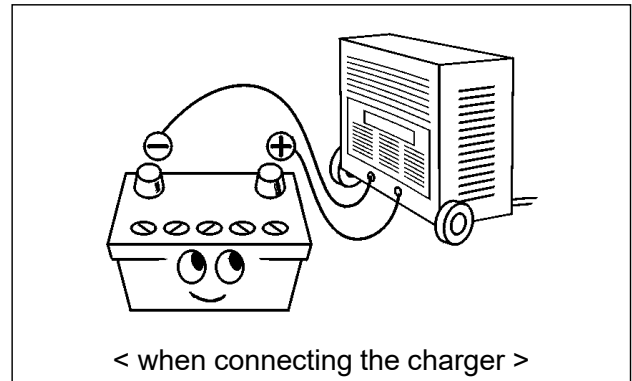- As the battery fluid makes poisonous gas which can explode during the charging, comply with the following instructions.

1. Detach battery from the tractor.
2. Wait until the battery is warmed to room temperature.
3. Connect the cable of charger to the (+), (-) terminal of the battery correctly.
 - Connect (+) charger cable to (+) battery terminal. : Red color
 - Connect (-) charger cable to (-) battery terminal. : Black color
4. Plug in charger cord.
5. Charge battery with a "SLOW CHARGE".
6. Check the charging current and temperature of electrolyte during the charging.
7. Unplug charge cord and remove charger cables.
8. Attach battery to the tractor.




 Caution	<p>▶ Put on eye protection and gloves to protect your body from poisonous sulfuric acid before handling the battery .</p>
	<p>▶ Always remove grounded (-) battery clamp first and assemble it last. If not, it can cause an explosion by spark.</p>
	<p>▶ Keep all flames and sparks away and DO NOT smoke while charging the battery.</p>
	<p>▶ Detach the battery from your tractor before charging. DO NOT charge directly while the battery is attached to the tractor.</p>
	<p>▶ Turn off or unplug the charger cord, before connecting or disconnecting the charger cable to or from the battery.</p>
	<p>▶ Charge the battery in an area with good ventilation.</p>
	<p>▶ Do not charge the frozen battery.</p>
	<p>▶ Use the rated 12V-5A charger.</p>
	<p>▶ Never check the battery voltage by shorting the terminals with metal objects.</p>

④ How to use jumper cables

※ If the battery which is attached to the tractor is discharged and needs to connect an auxiliary battery, follow the instructions as below.

① Connecting Jumper cables


- Check the followings before connecting the cables.
 - Is the spring of clamp normal?
 - Is the cable and clamp cut-off?
- 1. Stop engine, apply parking brake and remove the ignition key.
- 2. Connect two (+) terminals of both batteries with red cable. (tractor battery-①, auxiliary battery-②)
- 3. Connect one end of black cable to (-) terminal(③) of auxiliary battery and the other end to engine block desired to start (④).
- 4. Start engine. If the engine does not start, check the electrolyte level of each battery.

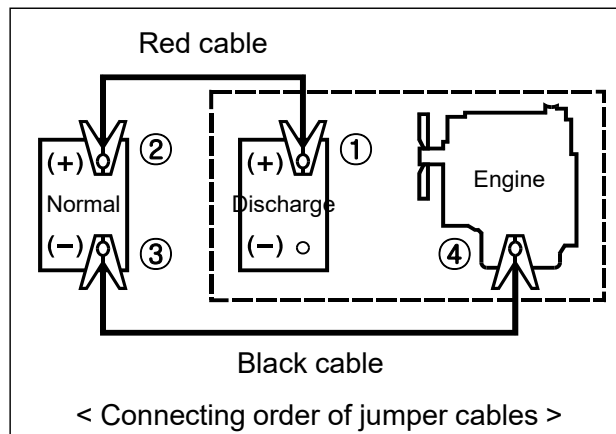

	<p>▶ The toxic gases from battery can be exploded by spark. Keep all flames and sparks away and DO NOT SMOKE while charging the battery.</p>
	<p>▶ The negative(-) terminal of the auxiliary battery must be connected to the engine block, not to the negative(-) terminal of the tractor battery.</p>

② Removing Jumper cables

- Remove jumper cables as referring to the right figure, "Removing order of jumper cables".

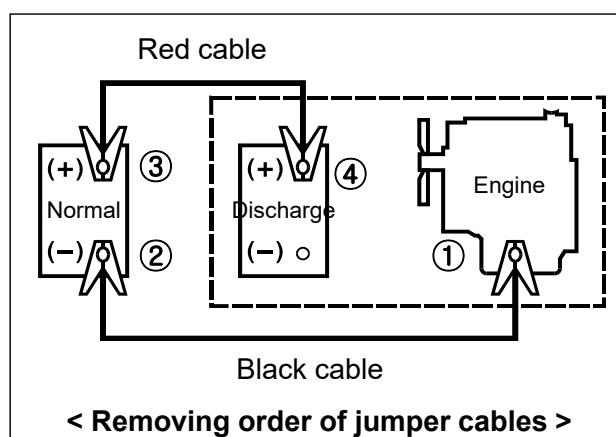

<p>Notice</p>	<p>▶ Pay attention not to change the (+) and (-) pole. Otherwise, it may cause a failure of electric circuit or damage of the wire and even the polarity of the battery can be changed in an over-discharged state.</p>
---------------	---


(4) Alternator and drive belt - Check

- The tractor alternator① is belt-driven from the engine crankshaft pulley. It is important that belt slippage does not occur, or the charging system will be affected.

To adjust the fan belt, see page 5-29.

- Required alternator periodical maintenance:

- Belt adjustment
- Inspect alternator terminals
- Clean alternator cooling fan fins

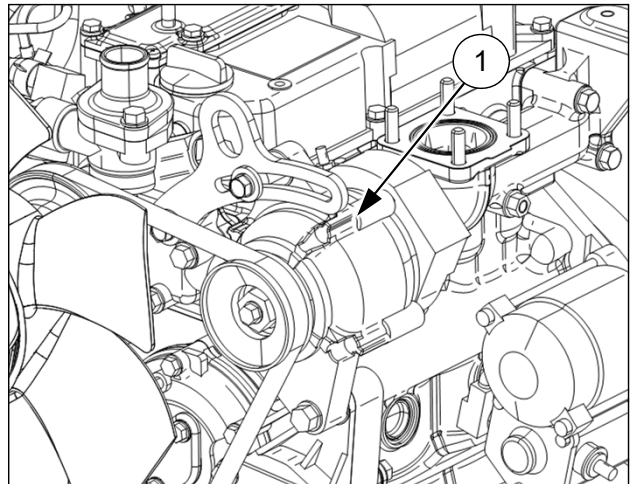


- When working on or checking the alternator, adhere to following precautions. Otherwise, alternator damage may occur:
 - Do not UNDER ANY CIRCUMSTANCES short the field terminal of the alternator to ground.
 - Do not disconnect the alternator output lead or battery cables while the alternator is operating.
 - Do not remove the alternator from the tractor without first disconnecting the negative (-) battery cable. When removing the battery, disconnect the negative (-) cable first.
 - To install a battery, MAKE SURE that the positive (+) cable is connected first and that the negative terminal is connected to ground. Reverse polarity will destroy the rectifier diodes in the alternator.

NOTE: If the battery charge warning indicator illuminates, indicating that the alternator is not charging the battery, check the fan belt and the wiring connections. If these items are in satisfactory condition and the warning light continues to indicate no charge, contact your authorized local dealer.

(5) Turn signal light bulb - Replace

① Turn signal light bulb replacement

1. Remove the four screws① retaining the turn signal light lenses and remove the lenses.

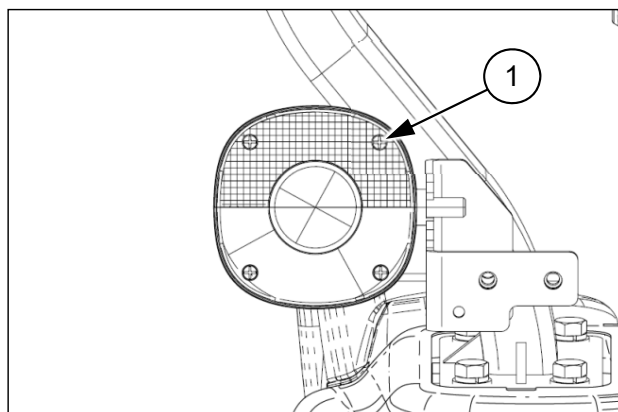


2. Push in on the bulb② and rotate bulb counter-clockwise in socket to remove.

3. Insert the new bulb into the socket and turn it clockwise until the bulb locks into place.

4. Install lenses and retaining screws.


NOTE: For about bulb specification, refer to the chapter 5-5-(4) in this manual.

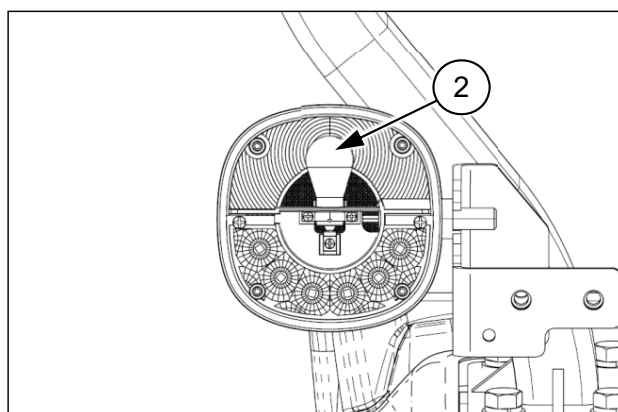

(6) Headlight bulb - Replace

① Headlight bulb

- If a headlight bulb① fails to operate, the bulb must be replaced as below.
1. Open the tractor hood.
 2. Remove the harness connector.
 3. Rotate the bulb① counter-clockwise a quarter turn and remove the bulb from the housing.
 4. Insert a new bulb into the socket and turn 1/4 turn clockwise to secure.
 5. Reinstall the harness connector.

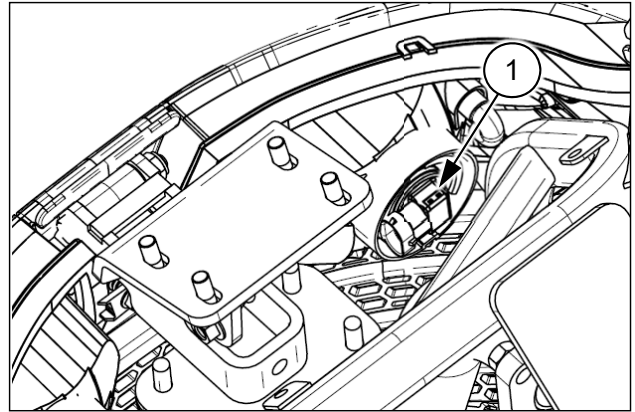

NOTE: For about bulb specification, refer to the chapter 5-5-(4) in this manual.



Caution

- ▶ Be careful not to touch the bulb with bare fingers. Oil from the fingers can shorten the life of bulb. Use protective cloth or glove when installing bulb.
- ▶ Bulb and surroundings are very hot while working. Be careful not to touch the bulb with bare fingers. It may cause a burn of your hand. Before servicing the bulb, turn off the light and cool down the bulb.

(7) Touch-up paint color

- The following color specifications are recommended for touch-up paint repairs. For the details, contact your authorized local dealer.
- You must use acryl urethane paint.

Color	Parts	Munsell number or Spec.
Sky Blue	Hood, Fenders	10B 4/10
LS Gray (N3.0)	Instrument covers, Left/Right-hand lever guide	N3.0
LS White Ivory	Front and rear wheels	5Y 8.5/2
Black	Transmission case, Front axle, Engine frame	N1.0

5-13. Troubleshooting



Warning

► To avoid injury due to sudden start, apply the parking brake and place the transmission gears in the NEUTRAL position before checking and repairing.

System	Faults	Possible causes	Solutions
Engine	The start motor does not turn when turning the key switch.	<ul style="list-style-type: none"> ▲ Start safety switch is not contacted ▲ PTO switch is not in "OFF" position ▲ Discharge of battery ▲ Terminal loosened ▲ Key switch failure ▲ Start motor failure 	<ul style="list-style-type: none"> ▲ Depress clutch pedal fully ▲ Place PTO switch in "OFF" position ▲ Charge or replace ▲ Tighten the terminal ▲ Repair or replace ▲ Repair or replace
	The start motor turns but the engine does not start.	<ul style="list-style-type: none"> ▲ The battery is weak. ▲ Bad grounding ▲ Improper viscosity of engine oil ▲ Air in fuel system ▲ Fuel filter clogged ▲ Error in engine body ▲ Fuel cock closed 	<ul style="list-style-type: none"> ▲ Charge or replace ▲ Tighten the ground ▲ Replace the oil with proper viscosity ▲ Bleed air ▲ Clean or replace the filter ▲ Repair ▲ Open the cock
	Engine revolution is irregular.	<ul style="list-style-type: none"> ▲ Air in fuel system ▲ Fuel filter clogged ▲ Injection nozzle clogged ▲ Fuel leakage ▲ Irregular fuel injection 	<ul style="list-style-type: none"> ▲ Bleed air ▲ Clean or replace the filter ▲ Repair or replace ▲ Repair ▲ Repair
	Engine turns more than maximum speed.	<ul style="list-style-type: none"> ▲ impurities in governor 	<ul style="list-style-type: none"> ▲ Repair
	Engine stops suddenly during operation.	<ul style="list-style-type: none"> ▲ Fuel shortage ▲ Fault of nozzle ▲ moving parts failure due to bad lubrication 	<ul style="list-style-type: none"> ▲ Add fuel and bleed air ▲ Repair or replace ▲ Repair

System	Faults	Possible causes	Solutions
Engine	Engine stops at low speed revolution.	<ul style="list-style-type: none"> ▲ Fault of injection pump ▲ Valve gap is not correct ▲ Poor nozzle pressure 	<ul style="list-style-type: none"> ▲ Repair ▲ Adjust the gap ▲ Repair
	Engine overheat	<ul style="list-style-type: none"> ▲ Lack of coolant ▲ Bad fan belt tension or broken ▲ Dirt attached to the radiator 	<ul style="list-style-type: none"> ▲ Supplement ▲ Adjust belt tension or replace ▲ Wash
	The color of exhausted smoke is white.	<ul style="list-style-type: none"> ▲ Air cleaner clogged ▲ Engine oil exceeded ▲ Lack of fuel supply 	<ul style="list-style-type: none"> ▲ Clean element or replace ▲ Adjust in proper level ▲ Repair
	The color of exhausted smoke is black.	<ul style="list-style-type: none"> ▲ Bad quality of fuel ▲ Over fuel supply ▲ Fault of nozzle 	<ul style="list-style-type: none"> ▲ Use good quality fuel ▲ Repair ▲ Repair
	Engine power is low.	<ul style="list-style-type: none"> ▲ Injection nozzle clogged ▲ Carbon piled to valve seat ▲ Bad adjustment of valve gap ▲ Bad injection timing ▲ Lack of fuel supply ▲ Air cleaner clogged 	<ul style="list-style-type: none"> ▲ Repair ▲ Repair ▲ Repair ▲ Repair ▲ Check fuel system ▲ Clean or replace
	Engine oil pressure indicator is ON during operation.	<ul style="list-style-type: none"> ▲ Lack of engine oil ▲ Low viscosity of engine oil ▲ Pressure switch error ▲ Fault of oil pump ▲ Engine oil filter clogged 	<ul style="list-style-type: none"> ▲ Supplement ▲ Replace the proper oil viscosity ▲ Replace ▲ Repair ▲ Replace the filter
	Battery charging indicator is ON during operation	<ul style="list-style-type: none"> ▲ Bad electrical connection ▲ Fault of alternator ▲ Fault of battery ▲ Bad fan belt tension or broken 	<ul style="list-style-type: none"> ▲ Check battery terminals, ground, and repair ▲ Repair or replace ▲ Replace ▲ Adjust belt tension or replace

System	Faults	Possible causes	Solutions
Brake	Brake does not work or only one side works.	<ul style="list-style-type: none"> ▲ Wrong brake pedal play ▲ Lining worn or broken ▲ Left/right pedal play is different 	<ul style="list-style-type: none"> ▲ Adjust ▲ Replace ▲ Adjust
	After brake pedal working, it does not return.	<ul style="list-style-type: none"> ▲ Return spring damaged ▲ Lack of grease in shaft parts 	<ul style="list-style-type: none"> ▲ Replace the spring ▲ Remove the rust, apply grease
Hydraulic Lift System	The linkage does not move up.	<ul style="list-style-type: none"> ▲ Lack of transmission oil ▲ Air in the suction pipe ▲ Hydraulic filter clogged ▲ Hydraulic pump failure ▲ Control valve failure ▲ Cylinder or cylinder related parts broken 	<ul style="list-style-type: none"> ▲ Add oil ▲ Tighten the filter or replace seal of connecting part ▲ Clean the filter or replace ▲ Repair or replace ▲ Repair or replace ▲ Repair or replace
	Oil leakage	<ul style="list-style-type: none"> ▲ Connecting part loosened ▲ Oil seal damaged ▲ Pipe cracked 	<ul style="list-style-type: none"> ▲ Tighten ▲ Replace ▲ Replace
	If lever is placed on the raising position, relief valve sounds off.	<ul style="list-style-type: none"> ▲ Upper limit of position control lever is changed 	<ul style="list-style-type: none"> ▲ Adjust the upper limit
	The linkage does not move down.	<ul style="list-style-type: none"> ▲ Down speed control valve locked ▲ Control valve failure ▲ Cylinder damaged ▲ Lift shaft moving part damaged 	<ul style="list-style-type: none"> ▲ Turn the knob counter-clockwise ▲ Repair or replace ▲ Replace ▲ Repair or replace

System	Faults	Possible causes	Solutions
Steering System	Hydraulic steering system does not work.	▲ Pump worn or part damaged ▲ Steering unit damaged or worn ▲ Oil leakage by steering cylinder piston seal damaged or worn ▲ Oil leakage by pipe damage	▲ Repair or replace ▲ Repair or replace ▲ Repair ▲ Repair or replace
	Hard to operate the steering wheel.	▲ Steering unit - Steering unit spline and column spline does not aligned - Spool and sleeve damaged by foreign material - Excessive tightening torque of end cap bolt ▲ Pump - Low speed - Wearing, failure ▲ Relief valve - Valve spool clogged - Setting pressure too low	▲ - Check mounted condition of steering unit and column - Replace - Apply regular torque ▲ - Adjust RPM or Repair - Repair or replace ▲ - Repair or replace - Reset or adjust
	Cylinder does not work smoothly as steering wheel movement	▲ Air in steering line if not used for a long time ▲ Air in suction pipe ▲ Piston seal damaged	▲ Bleed air ▲ Repair ▲ Replace
	Steering wheel turns to the opposite direction.	▲ Bad assembly of steering gear ▲ Bad assembly of steering hose	▲ Repair ▲ Repair
	Oil leakage of steering pump, steering unit, cylinder and fittings	▲ Seal damaged	▲ Replace seal
	Abnormal noise	▲ Lack of oil ▲ Exceeding resistance of suction line ▲ Air in system	▲ Add oil ▲ Replace filter ▲ Bleed air

System	Faults	Possible causes	Solutions
HST	When operating HST pedal, tractor dose not start.	<ul style="list-style-type: none"> ▲ Low pressure relief set is too low ▲ High pressure relief set is too low ▲ HST charger valve fault ▲ Filter clogged ▲ Pump worn or part damaged ▲ HST moving part worn or damaged 	<ul style="list-style-type: none"> ▲ Check and repair ▲ Check and repair ▲ Replace ▲ Replace filter ▲ Repair or replace ▲ Repair or replace after check the circuit
	Tractor is still moving despite pedal bring in neutral position on HST pedal.	<ul style="list-style-type: none"> ▲ Neutral position of HST pedal is changed. ▲ HST pedal linkage damaged ▲ HST arm bolt loosened 	<ul style="list-style-type: none"> ▲ Adjust neutral position ▲ Replace damaged part ▲ Fasten the bolt with adhesive
	HST power is too low	<ul style="list-style-type: none"> ▲ Oil shortage ▲ Air in HST circuit ▲ Transmission oil temperature is too high. ▲ HST moving part worn ▲ HST filter clogged 	<ul style="list-style-type: none"> ▲ Add oil ▲ Check and repair the hydraulic suction line. ▲ Stop engine to cool the oil, and restart ▲ Repair or replace ▲ Replace the filter
	Abnormal noise	<ul style="list-style-type: none"> ▲ Engine speed is too low ▲ Oil temperature is too low ▲ Hydraulic oil filter clogged ▲ Oil shortage 	<ul style="list-style-type: none"> ▲ Set engine rpm over 1500 rev/min ▲ Run engine to warm up the oil. ▲ Replace the filter ▲ Add oil

System	Faults	Possible causes	Solutions
Electric System	Battery does not charge	<ul style="list-style-type: none"> ▲ Abnormal wiring ▲ Alternator failure ▲ Lack of fan belt tension or broken ▲ Abnormal battery 	<ul style="list-style-type: none"> ▲ Check the tightening state of terminals and ground ▲ Repair or replace ▲ Adjust fan belt tension or replace ▲ Replace
	Headlight is dark.	<ul style="list-style-type: none"> ▲ Battery capacity is low ▲ Bad wiring and contact 	<ul style="list-style-type: none"> ▲ Charge or replace ▲ Check and repair
	Headlight is not ON.	<ul style="list-style-type: none"> ▲ Light bulb cut-off ▲ Fuse blown 	<ul style="list-style-type: none"> ▲ Replace ▲ Check the cause, and replace it
	Horn(if fitted) does not sound.	<ul style="list-style-type: none"> ▲ Switch failure ▲ Abnormal wiring ▲ Horn failure 	<ul style="list-style-type: none"> ▲ Replace ▲ Repair ▲ Replace
	Turn signal light does not work.	<ul style="list-style-type: none"> ▲ Light bulb cut-off ▲ Bad connection ▲ Fuse blown 	<ul style="list-style-type: none"> ▲ Replace ▲ Tighten terminals ▲ Check the cause, and replace it
	Cold start aid indicator is not ON.	<ul style="list-style-type: none"> ▲ Bad connection of preheat plug wiring 	<ul style="list-style-type: none"> ▲ Check and tighten
	Other illuminating light or indicator is not ON.	<ul style="list-style-type: none"> ▲ Fuse blown ▲ Light bulb cut-off 	<ul style="list-style-type: none"> ▲ Check the cause, and replace it ▲ Replace

5-14. Engine manufacturer's warranty

The following attachment shows warranty terms and conditions for the engine by manufacturer, YANMAR.

But, the warranty periods of LS Tractor always prevail over the ones mentioned on the attachment by engine manufacturer, YANMAR.

- Attachment

EMISSION SYSTEM WARRANTY

YANMAR POWER TECHNOLOGY CO., LTD.

LIMITED EMISSION CONTROL SYSTEM WARRANTY – USA ONLY

Your Warranty Rights and Obligations:

The California Air Resources Board (CARB), the United States Environmental Protection Agency (EPA) and YANMAR POWER TECHNOLOGY CO., LTD. hereafter referred to as YANMAR, are pleased to explain the emission control system warranty on your 2023, 2024, or 2025 model year compression-ignition engine. In California, new heavy-duty off-road engines must be designed, built and equipped to meet the State's stringent anti-smog standards. In the remaining forty nine (49) states, new non-road compression-ignition engines must be designed, built and equipped to meet the United States EPA emissions standards. YANMAR must warrant the emission control system on your engine for the periods of time listed below provided there has been no abuse, neglect or improper maintenance of your engine.

Your emission control system may include parts such as the fuel injection system, the air induction system, the electronic control system, EGR (Exhaust Gas Recirculation) system and the exhaust gas after treatment (diesel particulate filter system, urea SCR system). Also included may be hoses, belts, connectors and other emission-related assemblies.

Where a warrantable condition exists, YANMAR will repair your heavy-duty off-road compression-ignition engine at no cost to you including diagnosis, parts and labor.

Manufacturer's Warranty Coverage:

2023, 2024, or 2025 model year heavy-duty off-road compression-ignition engines are warranted for the periods listed below. If any emission-related part on your engine is defective, the part will be repaired or replaced by YANMAR.

If your engine is certified as	And its maximum power is	And its rated speed is	Then its warranty period is
Variable speed or constant speed	kW < 8	Any speed	2,000 hours or two (2) years whichever comes first. In the absence of a device to measure the hours of use, the engine has a warranty period of two (2) years.
Variable speed or constant speed	8 ≤ kW < 19	Any speed	2,000 hours or two (2) years whichever comes first. In the absence of a device to measure the hours of use, the engine has a warranty period of two (2) years.
Constant speed	19 ≤ kW < 37	3,000 rpm or higher	2,000 hours or two (2) years whichever comes first. In the absence of a device to measure the hours of use, the engine has a warranty period of two (2) years.
Constant speed	19 ≤ kW < 37	Less than 3,000 rpm	3,000 hours or five (5) years whichever comes first. In the absence of a device to measure the hours of use, the engine has a warranty period of five (5) years.
Variable speed	19 ≤ kW < 37	Any speed	3,000 hours or five (5) years whichever comes first. In the absence of a device to measure the hours of use, the engine has a warranty period of five (5) years.
Variable speed or constant speed	kW ≥ 37	Any speed	3,000 hours or five (5) years whichever comes first. In the absence of a device to measure the hours of use, the engine has a warranty period of five (5) years.

- Attachment

Emission control system warranty - continued

Warranty Coverage:

This warranty is transferable to each subsequent purchaser for the duration of the warranty period. YANMAR recommends that repair or replacement of any warranted part will be performed at an authorized YANMAR dealer.

Warranted parts not scheduled for replacement as required maintenance in the owner's manual shall be warranted for the warranty period. Warranted parts scheduled for replacement as required maintenance in the owner's manual are warranted for the period of time prior to the first scheduled replacement. Any warranted parts scheduled for replacement as required maintenance that are repaired or replaced under warranty shall be warranted for the remaining period of time prior to the first scheduled replacement. Any part not scheduled for replacement that is repaired or replaced under warranty shall be warranted for the remaining warranty period.

During the warranty period, YANMAR is liable for damages to other engine components caused by the failure of any warranted part during the warranty period.

Any replacement part which is functionally identical to the original equipment part in all respects may be used in the maintenance or repair of your engine and shall not reduce YANMAR's warranty obligations. Add-on or modified parts that are not exempted may not be used. The use of any non-exempted add-on or modified parts shall be grounds for disallowing a warranty.

Warranted Parts:

This warranty covers engine components that are a part of the emission control system of the engine as delivered by YANMAR to the original retail purchaser. Such components may include the following:

- Fuel injection system (including Altitude compensation system)
- Cold start enrichment system
- Intake manifold and Air intake throttle valve
- Turbocharger systems
- Exhaust manifold and exhaust throttle valve
- Positive crankcase ventilation system
- Charge Air Cooling systems
- Exhaust Gas Recirculation (EGR) systems
- Exhaust gas after treatment (Diesel Particulate Filter (DPF) system, urea SCR system)
- Electronic Control units, sensors, solenoids and wiring harnesses used in above systems
- Hoses, belts, connectors and assemblies used in above systems
- Emission Control Information Labels

Since emissions related parts may vary slightly between models, certain models may not contain all of these parts and other models may contain the functional equivalents.

- Attachment

Emission control system warranty - continued

Exclusions:

Failures other than those arising from defects in material or workmanship are not covered by this warranty. The warranty does not extend to the following: malfunctions caused by abuse, misuse, improper adjustment, modification, alteration, tampering, disconnection, improper or inadequate maintenance, or use of non-recommended fuels and lubricating oils; accident-caused damage and replacement of expendable items made in connection with scheduled maintenance.

YANMAR disclaims any responsibility for incidental or consequential such as loss of time, inconvenience, loss of use of equipment/engine or commercial loss.

Owner's Warranty Responsibilities:

As the off-road compression-ignition engine owner, you are responsible for the performance of the required maintenance listed in your owner's manual. YANMAR recommends that you retain all receipts, covering maintenance on your off-road compression-ignition engine, but YANMAR cannot deny warranty solely for the lack of receipts or for your failure to ensure the performance of all scheduled maintenance.

As the off-road engine owner, you should however be aware that YANMAR may deny your warranty coverage if your off-road compression-ignition engine or a part has failed due to abuse, neglect, improper maintenance or unapproved modifications.

Your engine is designed to operate on diesel fuel only. Use of any other fuel may result in your engine no longer operating in compliance with California's and EPA's emissions requirements.

You are responsible for initiating the warranty process. The ARB and EPA suggest that you present your off-road engine to a YANMAR dealer as soon as a problem exists. The warranty repairs should be completed by the dealer as expeditiously as possible. If you have any questions regarding your warranty rights and responsibilities, you should contact YANMAR America Corporation. If you would like to find the nearest YANMAR dealer or authorized service center, you should contact YANMAR America Corporation.

Website: <https://www.yanmar.com>

E-mail: CS_support@yanmar.com


Toll free telephone number: 1-800-872-2867, 1-855-416-7091

What the Emergency Stationary Type Engine Owner must Do:

The engines for emergency stationary type generators certified by Federal Law (40 CFR Part 60) are limited to emergency use only, and the operation for maintenance checks and verification test for functions is required. The total operating hours for maintenance and verification test for functions should not exceed 100 hours per year. However, there is no limitation on the operating hours for emergency use. Keep a log of the number of hours the engine is operated for both emergency use and non-emergency use. Also, note the reason for the operation.

6. Dimension and Specification

- HST Type

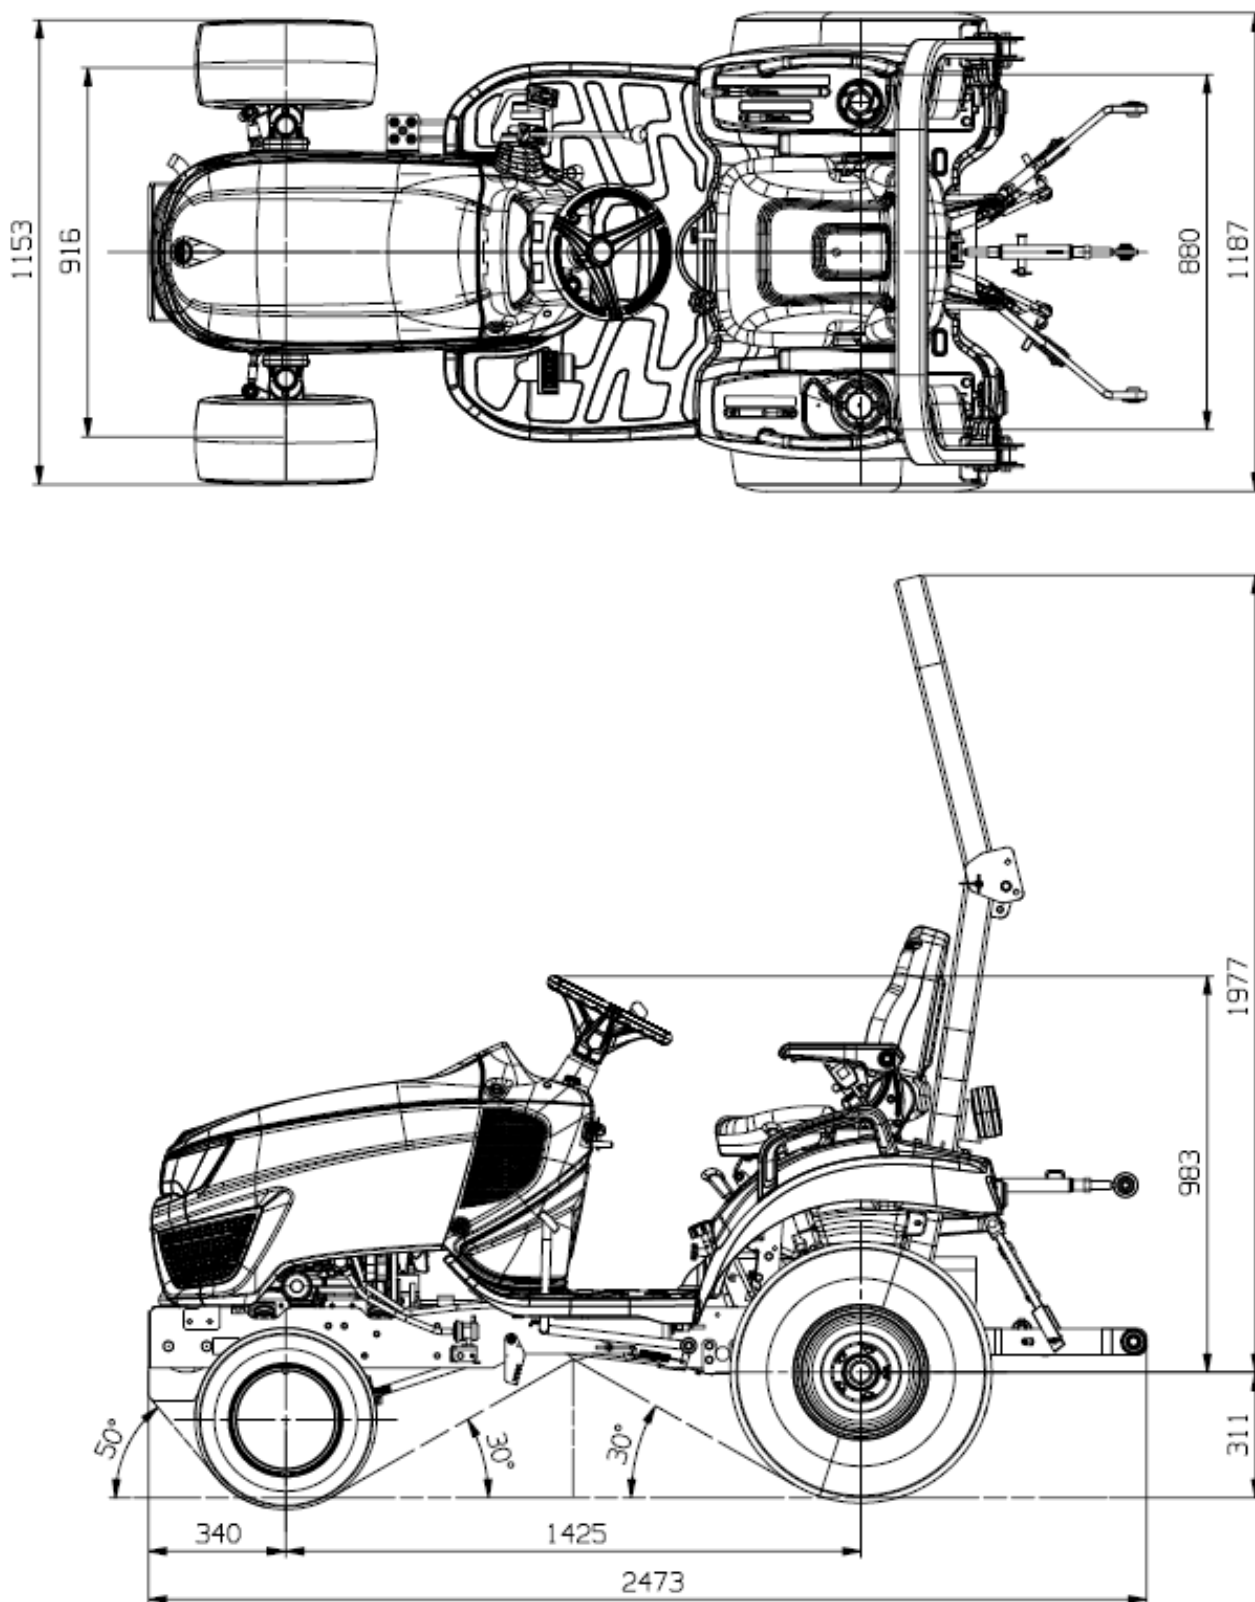

* When applying front tire : 18x8.50-10 4PR, rear tire : 26-12.00-12 4PR

		MT122	MT125
WEIGHT	Mechanical Type	N/A	
	HST Type	655kg (1444 lb)	
	Weight distribution	Front : Rear = 0.40 : 0.60	
	Bumper/Front weight	10kg (22.0 lb) / 20kg (44.1 lb) x 4ea (optional)	
ENGINE	Model	3TNV76F	3TNV80F
	Type	Indirect, Swirl Chamber	Indirect, Swirl Chamber
	No. of cylinder	3	3
	Diameter x stroke	76 x 82mm (2.99x3.23 in.)	80x84mm (3.15x3.30 in.)
	Displacement	1115cc (68.0 in ³)	1267cc (77.32 in ³)
	Engine speed	1350 rev/min ~ 3235 rev/min	1350 rev/min ~ 3235 rev/min
	Maximum torque	57N.m / 2000rev/min	69N.m / 2100rev/min
	Engine rated power	16.0kW / 3000 rev/min	18.4kW / 3000 rev/min
FUEL INJECTION PUMP	Type	IN-LINE pump	
	Speed regulation	Centrifugal	
	Fuel filter	Paper element type	
	Injection order	1-3-2	
LUBRICATION SYSTEM	Type	Forced lubrication type	
	Pump	Trochoid gear pump	
	Filter	Replaceable cartridge type	
COOLING SYSTEM	Pump	Centrifugal Type	
	Temperature control	Thermostat	
	Air cleaner	Dry	
TRANSMISSION	Type	HST with 2-speed range gear	
	Main clutch	N/A	
	Forward / Reverse	HST pedals	
	Differential lock	Mechanical pedal type	

		MT122	MT125
PTO	Type	Electro-hydraulic independent rear PTO / MID PTO	
	No. of speed	1- speed gear	
	PTO / Engine	540 rev/min / 2933 rev/min (Rear PTO) 2500 rev/min / 2841 rev/min (MID. PTO)	
HYDRAULICLIFT	Type	Open center system, Position control	
	3 Point linkage	CAT1, , in conformity with ISO 730:2014	
	Draft load detection	N/A	
	Lowering speed control & fixing device	Down speed control valve	
	Pump	Gear pump type, Transmission drive	
	Rated flow	17.4LPM (4.6 GPM)	
	System pressure	12.7~13.2 MPa (1849~1920 psi)	
	Lift capacity	Lower link end	450 kgf (992 lbf)
		24" behind lift point	330 kgf (728 lbf)
REMOTE CONTROL	Type	Double acting (Spring return type)	
	No. of Q/coupler	2EA (optional)	
	F/Loader coupler	Front loader valve, 4EA (optional)	
STEERING SYSTEM	Type	Hydrostatic	
	Oil	Transmission oil (common use)	
	Min. turning radius (without brake)	2400 mm (7.87 ft)	
	Max. steering angle	54.5°	
	No. of steering turns	3.3 turns (lock to lock)	
	Rated flow	8LPM (2.1 GPM)	
	System pressure	8.5~9.0 MPa (1233~1305 psi)	

			MT122	MT125
ALTERNATOR	Rated output		12V-40A	
	Voltage control		Built-in alternator (IC-type)	
BATTERY	Voltage		12V	
	Capacity		45AH	
START MOTOR	Output power		12V - 1.4KW	
	Operation		Electric solenoid Type	
LIGHTS	Headlights (Low / High beam)		12V 35W-H8 / N/A	
	Turn signal lights (front / rear)		12V 21W	
	Side lights (front / rear)		LED	
	Stop lights / Taillights (rear)		LED / LED	
	Work light (optional)		12V 27W (Roll-bar)	
OTHERS	Instrument lights		LED	
	Indoor light (CAB)		N/A	
	Instrument indicator		LED	
	Cold start aid		Glow Plug	
STANDARD TIRE	Front		18x8.50-10 (4PR)	
	Rear		26x12.00-12 (4PR)	
WHEEL TRACK ADJUSTMENT	Front	Tracks	Fixed track	
		Dimension	916 (36.1 in)	
	Rear	Tracks	Fixed track	
		Dimension	880 (34.6 in)	
** These specifications are only general product information about standard model. Actual data may vary depending on the various optional product, and also can be changed at any time to improve the product qualification without any prior notification **				

Lubricants and Capacity

Lubricants	Capacity	International standard	Recommended products
Engine coolant	3.3L (0.9U.S.gals)	ASTM D6210, D4985	Soft water (50%) + Anti-freeze (50%)
Fuel	25L (6.6U.S.gals)	- ASTM D975 No. 2 - EN590: 96 - BS2869-A1 or A2	Ultra low sulfur diesel fuel, below 15 ppm
Engine oil	2.9L (0.8U.S.gals)	API CF-4 or CI-4	KIXX DL (Maker : GS Caltex)
Transmission oil (for hydraulic lift and steering system)	11.5L (3.0U.S.gals) 13.0L (3.4U.S.gals)(*) 17.7L (4.7U.S.gals)(**)	API GL4 ISO VG 32/46	LSTH400G (Maker : GS Caltex)
Front axle oil	2.0L (0.5U.S.gals)	API GL4 SAE 80W	EPK 80W90 (Maker : S-OIL TOTAL co. Ltd.)
Grease (Front axle holder, 3-point linkage, etc)	Proper amount	NLGI 2	MAHWAK Multi purpose or MAHWAK All purpose (Caltex)

(*) Oil quantity when installing the front-end loader initially or newly.

(**) Oil quantity when installing the front-end loader and backhoe initially or newly.

NOTE: When installing the front-end loader and backhoe initially or newly, add new transmission oil while checking the T/M oil gauge after preliminary operation for filling the hydraulic lines with oil.

RECOMMENDED ENGINE OIL VISCOSITIES

The correct engine oil viscosity grade is dependent upon ambient temperature. Refer to the below chart when selecting engine oil for your tractor.

In areas where prolonged periods of extreme temperatures are encountered, local lubricant practices are acceptable ; such as the use of SAE 5W 30 in extreme low temperatures or SAE 50 in extreme high temperatures.

Ambient Temperature °C(°F)	-30 (-22)	-25 (-13)	-20 (-4)	-15 (5)	-10 (14)	-5 (23)	0 (32)	10 (50)	20 (68)	30 (86)	40 (104)
Oil Viscosity	<div style="display: flex; justify-content: space-between; align-items: center;"> ← SAE 5W-20 → </div>										
	<div style="display: flex; justify-content: space-between; align-items: center;"> ← SAE 10W-30 → </div>										
	<div style="display: flex; justify-content: space-between; align-items: center;"> ← SAE 15W-40 → </div>										



LS Tractor USA LLC.

PO Box 70, Battleboro, NC 27809

Tel : 252-984-0700

Fax : 252-984-0701

www.lstractor.com

www.lstractorusa.com

P/NO	52121611/19
DATE	20240000